


EN

USER
MANUAL

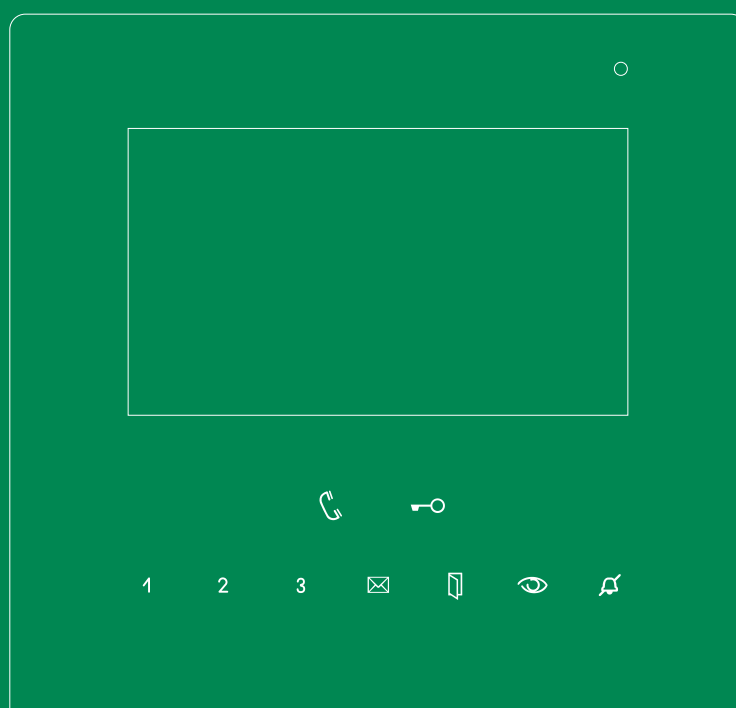

User manual for the Icona ViP manager Art. 20003310W

 **Comelit**[®]
Passion. Technology. Design.

CONTENTS

MONITOR DESCRIPTION	4
FUNCTION KEYS	5
SOFT-TOUCH KEY ACTIVATION	5
SWITCHING OFF THE SCREEN	5
ICONA MANAGER MENU	6
ALARM MENU STATUS ICONS	6
STATUS ICONS MENU	6
FAVOURITES BAR, FAVOURITES PAGE AND ADVANCED INFO	7
FAVOURITES	7
MOVING AND REMOVING FAVOURITES	8
ADVANCED INFO	8
WIDGET BAR	8
ALARM	9
Use of Icona ViP Manager Art. 20003310W in SimpleSafe systems:	9
ALARM STATUS	9
RESET ALARMS	10
ACTIVATING THE ANTI-INTRUSION SYSTEM	11
DEACTIVATING	12
THE ANTI-INTRUSION SYSTEM	12
PARTIAL AREA ACTIVATION	13
ALARM SETTINGS	13
Cameras	13
Customised activation	14
Activation control	14
Event log	14
Zone and area status	15
Shortcuts	15
Exit controls	16
Phone book	16
ALARM OPTIONS	17
OPTIONS - Change PIN	17
OPTIONS - Voice menu	17
OPTIONS - Installer menu	17
OPTIONS - Auto-activation	18
OPTIONS - Timer	18
OPTIONS - Organize dektop	18
OPTIONS - Tones	18
OPTIONS - Configuration	19
Configuration - User code	19
OTHER / LIGHTS / IRRIGATION / AUTOMATIONS	20
FUNCTION SCHEDULING	20
DOOR ENTRY MONITORS	22
DOOR ENTRY MONITORS - Intercoms	22
DOOR ENTRY MONITORS - Cameras	22
DOOR ENTRY MONITORS - Open doors	22
DOOR ENTRY MONITORS - Messages	23
DOOR ENTRY MONITORS - Call divert	23
DOOR ENTRY MONITORS - Video memory	23
DOOR ENTRY MONITORS - Audio message	24
DOOR ENTRY MONITORS - Multiple addresses	24
ADVANCED FUNCTION SCHEDULING	24
TIMED FUNCTIONS	24
DIMMER LIGHTS	25
DIMMABLE LIGHTS	25
DIMMER LIGHT SCHEDULING	25
DIMMABLE LIGHTS WITH PRESENCE SENSOR	26
RGB DIMMABLE LIGHTS	27
RGB LIGHTS SCHEDULING	27

CLIMATE CONTROL	28
CLIMATE FORCING	29
CLIMATE SCHEDULING	29
LOADS	30
CONSUMPTION	30
CONSUMPTION/PRODUCTION COMPARISON	31
SCENARIOS	32
ACTIVATE A SCENARIO	32
DEACTIVATE A SCENARIO	32
AUDIO BROADCAST	33
AUDIO BROADCAST - Player screen	33
AUDIO BROADCAST - Playlist screen	34
AUDIO BROADCAST - Library screen	34
AUDIO BROADCAST - Scenarios	34
SETUP MENU DESCRIPTION	35
SETUP - General parameters	35
General parameters-Language	35
General parameters-Lock keypad and touch screen	35
General parameters-Set date and time	36
General parameters-Information	36
General parameters-Volume control	36
General parameters-Set ringtones	36
General parameters-Soft touch keys	37
SETUP-Widgets	37
SETUP-Conditions	38
SETUP-Consumption	38
Consumption-Toolbar	38
Consumption-Currency	38
Consumption-KCO2	39
Consumption-Display	39
Consumption-Tariffs	39
Consumption-Limits	41
Consumption-Reset (meters)	41
Consumption-Settings	41
Settings-Units of measurement	41
Settings-Pulses	42
Settings-Increment	42
Settings-Scale factor	42
SETUP - Anti-intrusion	42
SETUP - Scenarios	42
Immediate scenarios	42
Scenario activation	43
Creating new scenarios	43
Delay a scenario	44
Advanced scenario functions	44
Rename a scenario	44
Move a scenario	45
Modify a scenario	45
Delete a scenario	45
Favourites page	45
Scheduled scenarios	45
Creating a new scheduled scenario	45
Advanced scheduled scenario functions	45
Conditioned scenarios	46
Creating a new conditioned scenario	46
Advanced conditioned scenario functions	46
SETUP-Key	46
Register a new key	46
Advanced key functions	47

Rename a key	47
Move a key	47
Modify a key	47
Delete a key.....	48
Alarm	48
SETUP - Audio broadcast.....	48
IP address	48
Port.....	49
Username	49
Password.....	49
SETUP - Protection	49
User password.....	49
Advanced passwords	49
Home automation limits.....	50
SETUP - Configure event messages.....	50
SETUP - Advanced	50
Programming keys.....	50
Total reset.....	51
Update configurations.....	51
Import/export	51
Create backup	51
Import backup.....	51
Export configuration.....	51
Import scenarios	52
Import settings	52
Import home automation.....	52
Import home automation scheduling	52
Update product.....	52
Disable / Enable Vedo alarm	52
SETUP - Home automation	53
Home automation - Reset configurations	53
Door entry monitors.....	54
Door entry monitors - Addresses	54
Door entry monitors - Actuators directory	54
Door entry monitors - Cameras directory	55
Door entry monitors - Intercoms directory	56
Door entry monitors - Set tone repetition.....	57
Door entry monitors - Set call times	57
Door entry monitors - Call divert.....	57
Door entry monitors - Alarms.....	58
Door entry monitors- Doors directory	58
Door entry monitors - Import audio message	58
Door entry monitors - Hands-free	59
Door entry monitors - Always record	59
Door entry monitors - Configure multiple addresses	59

- Install the equipment by carefully following the instructions given by the manufacturer and in compliance with the standards in force.
- All the equipment must only be used for the purpose it was designed for.
- Comelit Group S.p.A. declines any responsibility for improper use of the apparatus, for any alterations made by others for any reason or for the use of non-original accessories or materials.
- All the products comply with the requirements of Directive 2006/95/EC (which replaced Directive 73/23/EEC and subsequent amendments) as certified by the CE mark they carry.
- Do not insert objects or pour liquids into the device.
- Do not route the riser wires in proximity to power supply cables (230/400V).
- Installation, mounting and assistance procedures for electrical devices must only be performed by specialised electricians.
- Cut off the power supply before carrying out any maintenance work.
- Clean using a damp cloth. Do not use alcohol or other aggressive products.



Fonts are © Bitstream (see below). DejaVu changes are in public domain.
 Glyphs imported from Arev fonts are © Tavmjong Bah (see below)
 Bitstream Vera Fonts Copyright

Copyright (c) 2003 by Bitstream, Inc. All Rights Reserved. Bitstream Vera is a trademark of Bitstream, Inc.

Permission is hereby granted, free of charge, to any person obtaining a copy of the fonts accompanying this license ("Fonts") and associated documentation files (the "Font Software"), to reproduce and distribute the Font Software, including without limitation the rights to use, copy, merge, publish, distribute, and/or sell copies of the Font Software, and to permit persons to whom the Font Software is furnished to do so, subject to the following conditions:

The above copyright and trademark notices and this permission notice shall be included in all copies of one or more of the Font Software typefaces.

The Font Software may be modified, altered, or added to, and in particular the designs of glyphs or characters in the Fonts may be modified and additional glyphs or characters may be added to the Fonts, only if the fonts are renamed to names not containing either the words "Bitstream" or the word "Vera".

This License becomes null and void to the extent applicable to Fonts or Font Software that has been modified and is distributed under the "Bitstream Vera" names.

The Font Software may be sold as part of a larger software package but no copy of one or more of the Font Software typefaces may be sold by itself.

THE FONT SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF COPYRIGHT, PATENT, TRADEMARK, OR OTHER RIGHT. IN NO EVENT SHALL BITSTREAM OR THE GNOME FOUNDATION BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, INCLUDING ANY GENERAL, SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF THE USE OR INABILITY TO USE THE FONT SOFTWARE OR FROM OTHER DEALINGS IN THE FONT SOFTWARE.

Except as contained in this notice, the names of Gnome, the Gnome Foundation, and Bitstream Inc., shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Font Software without prior written authorization from the Gnome Foundation or Bitstream Inc., respectively. For further information, contact: fonts@gnome.org

Arev Fonts Copyright

Copyright (c) 2006 by Tavmjong Bah. All Rights Reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of the fonts accompanying this license ("Fonts") and associated documentation files (the "Font Software"), to reproduce and distribute the modifications to the Bitstream Vera Font Software, including without limitation the rights to use, copy, merge, publish, distribute, and/or sell copies of the Font Software, and to permit persons to whom the Font Software is furnished to do so, subject to the following conditions:

The above copyright and trademark notices and this permission notice shall be included in all copies of one or more of the Font Software typefaces.

The Font Software may be modified, altered, or added to, and in particular the designs of glyphs or characters in the Fonts may be modified and additional glyphs or characters may be added to the Fonts, only if the fonts are renamed to names not containing either the words "Tavmjong Bah" or the word "Arev".


This License becomes null and void to the extent applicable to Fonts or Font Software that has been modified and is distributed under the "Tavmjong Bah Arev" names.

The Font Software may be sold as part of a larger software package but no copy of one or more of the Font Software typefaces may be sold by itself.

THE FONT SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF COPYRIGHT, PATENT, TRADEMARK, OR OTHER RIGHT. IN NO EVENT SHALL TAVMJONG BAH BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, INCLUDING ANY GENERAL, SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF THE USE OR INABILITY TO USE THE FONT SOFTWARE OR FROM OTHER DEALINGS IN THE FONT SOFTWARE.

Except as contained in this notice, the name of Tavmjong Bah shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Font Software without prior written authorization from Tavmjong Bah. For further information, contact: tavmjong@free.fr

MONITOR DESCRIPTION

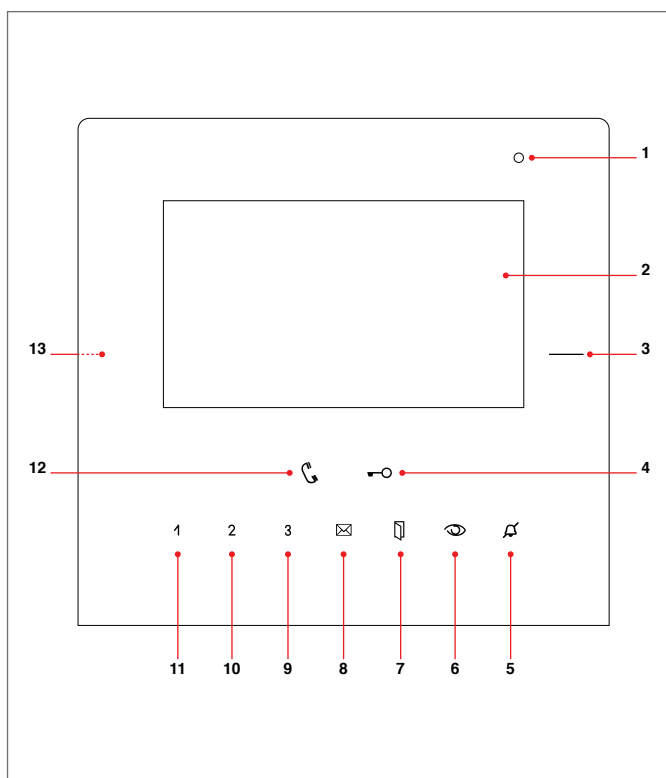

1. Microphone
2. 4.3" touch screen
3. RFID key sensor
4. Door lock key [programmable]
5. Privacy / Doctor key [programmable]
6. Self-ignition key [programmable]
7. Open doors key
8. Video memory key
9. Key "3" [programmable]
10. Key "2" [programmable]
11. Key "1" [programmable]
12. Audio key
13. Micro SD card

FUNCTION KEYS

 Audio key: activates or deactivates conversation with the external unit.

 Door lock key: opens the corresponding door lock.
[PROGRAMMABLE] LOCK RELEASE / ACTUATORS

1 Programmable key 1:
[PROGRAMMABLE] INTERCOM / SELF-IGNITION / ALARM / LOCK-RELEASE / ACTUATORS / SCENARIOS
DEFAULT = DEACTIVATED

2 Programmable key 2:
[PROGRAMMABLE] INTERCOM / SELF-IGNITION / ALARM / LOCK-RELEASE / ACTUATORS / SCENARIOS
DEFAULT = DEACTIVATED

3 Programmable key 3:
[PROGRAMMABLE]
INTERCOM / SELF-IGNITION / LOCK-RELEASE / CALL PRIORITY 1-4 / ACTUATORS / SCENARIOS

(IT)

 • In ADDITION to the programmable functions for keys 1 - 2 - 3 it is possible to assign one SCENARIO that will be activated at the same time as the associated function is activated by pressing the corresponding key (1 - 2 - 3).

 Video memory key:
PRESSED allows access to the messages section.
LIT STEADILY video memory or absent message active.
FLASHING new message waiting.

 Open doors key:
LIT STEADILY signals the opening of one or more of the doors listed in the directory
PRESSED allows access to the open doors section.

 Self ignition key: switches on the monitor and displays video from an external unit.
[PROGRAMMABLE]
INTERCOM / SELF-IGNITION / LOCK-RELEASE / ACTUATORS / SCENARIOS


 Privacy / Doctor function key[PROGRAMMABLE]

- The PRIVACY function disables calls from the external unit and from the switchboard.
- The DOCTOR function enables automatic activation of the lock-release in response to a call from the external unit.
- The PRIVACY + DOCTOR function, in addition to disabling the door-entry phone ringtone in the same way as the Privacy function, also enables automatic activation of the lock-release in response to a call from the external unit.

SOFT-TOUCH KEY ACTIVATION



- See SETUP menu-General parameters-Soft touch keys

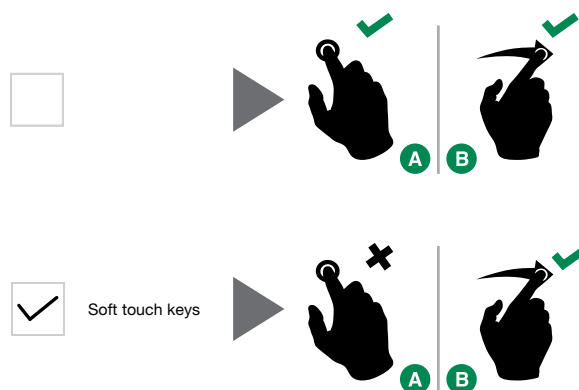

SWITCHING OFF THE SCREEN



- ✓ The screen on the device is switched on.
- Use the zoom out gesture to switch off the screen.




- If the device is displaying a screen where the gesture is associated with a specific function, the screen switch-off function will be automatically disabled.

ICONA MANAGER MENU



The icons in the Icona Manager menu vary according to the type of system installed and the functions available.

To navigate the menu, simply use your finger to touch the icon corresponding to the desired function.

- Touch the display to access the main menu.

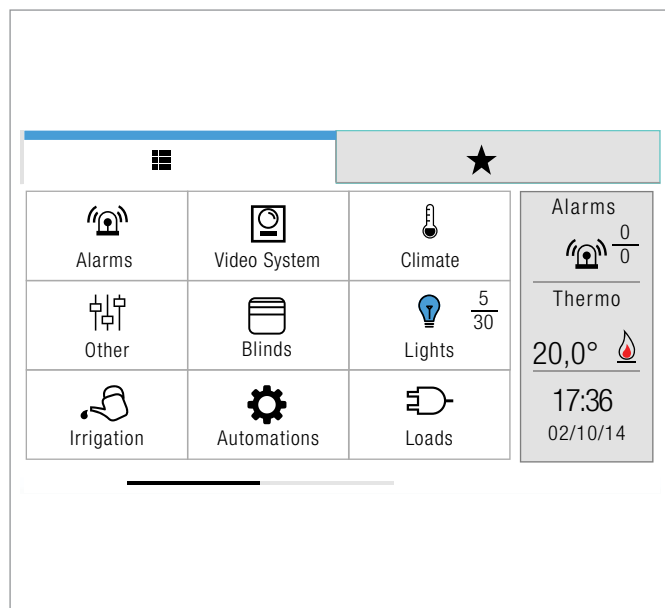

- Navigate through the available screens by swiping with your finger to the left or right

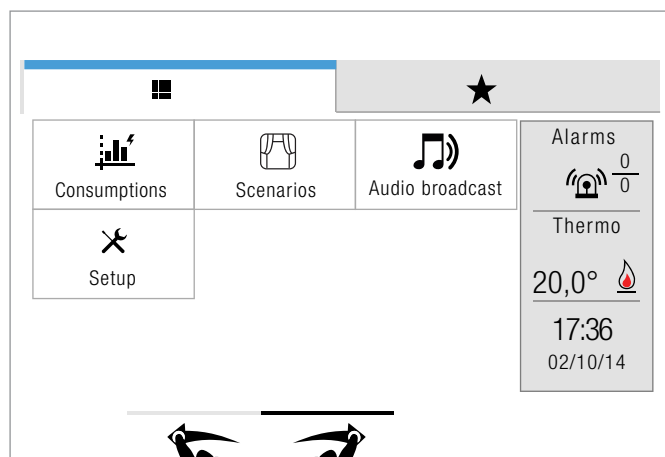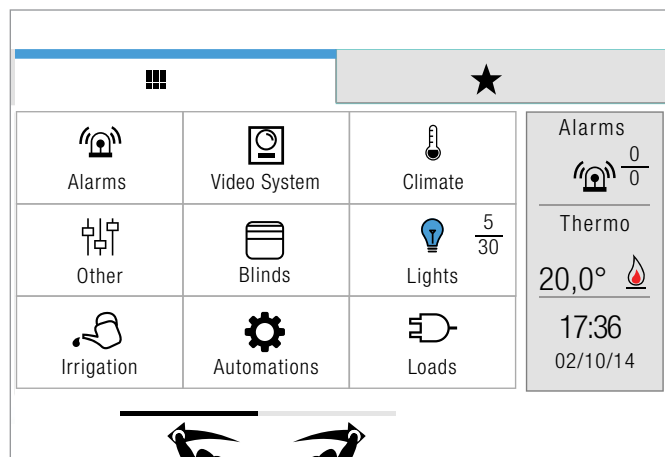

- Press the icon to immediately return to the main menu.



- Press the icon to return to the previous screen.

ALARM MENU STATUS ICONS

The “Alarm” icons in the home page provide information on the status of the alarm system.

Alarms	Alarms	Alarms
Alarm deactivated across the entire system	Alarm activated across the entire system	Alarm partially activated: only some of the areas and/or partial sets are activated
Alarms	Alarms	Alarms
Sabotage/anomaly	Alarm memory	In alarm



STATUS ICONS MENU

The icons in the home screen provide feedback about the status of the active elements within the respective sections.

NO ACTIVE ELEMENTS	AT LEAST 1 ACTIVE ELEMENT
Climate	Climate
Other	Other
Blinds	Blinds
Lights	Lights
Irrigation	Irrigation
Automations	Automations
Audio broadcast	Audio broadcast

FAVOURITES BAR, FAVOURITES PAGE AND ADVANCED INFO

- Press and hold one of the icons in the main menu to open the corresponding favourites bar / favourites page / advanced info panel.

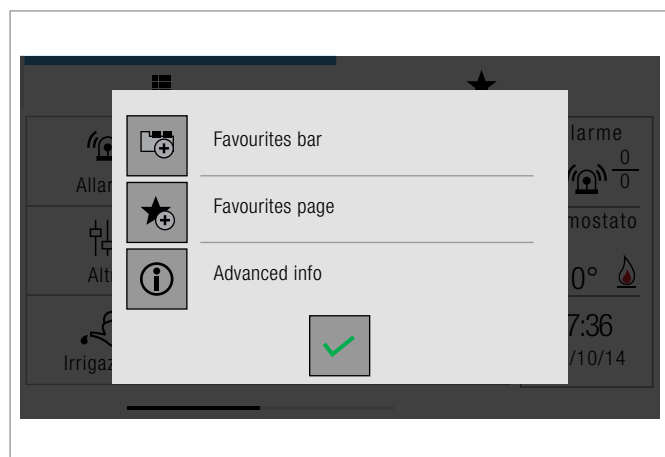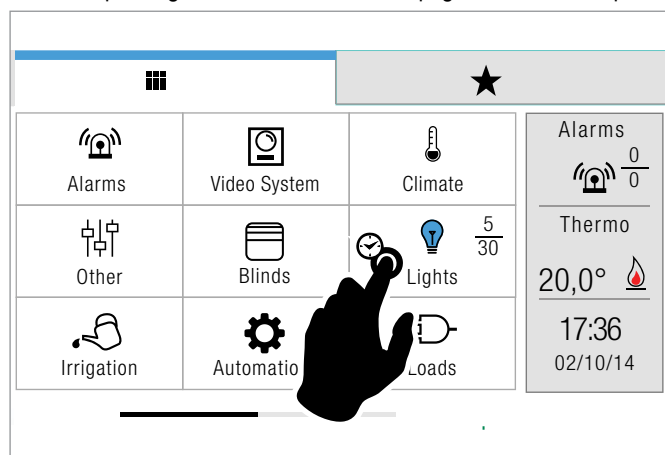

FAVOURITES







- Select the Favourites bar to create a link to the selected function in the favourites bar.

» The link allows you to display the corresponding page simply by pressing the icon in the top bar from any screen page.



- You can create a link to a function or to a room.
- CAUTION! You cannot create a link to a single element!
- Maximum number of links in the favourites bar = 4

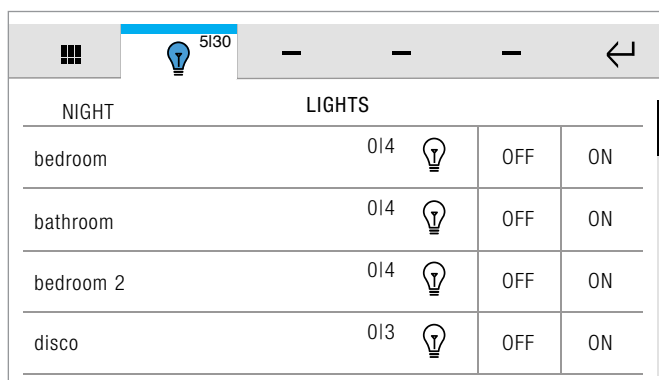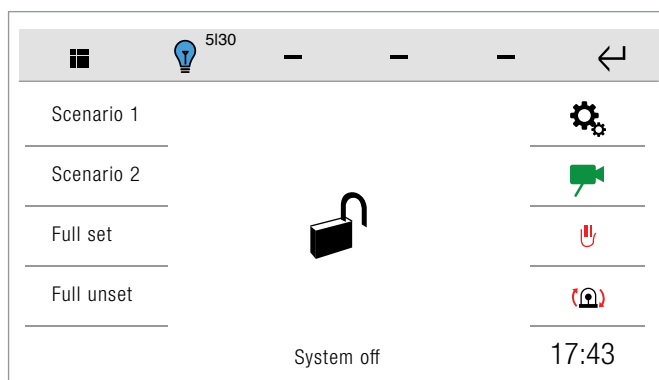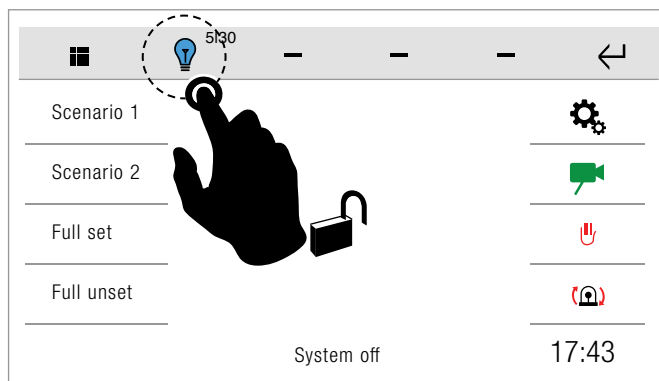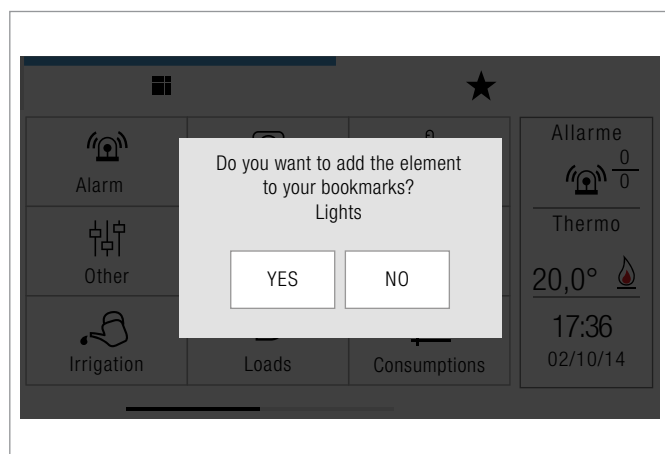


- Select the Favourites page icon to create a link to the selected function in the favourites page.

» The link allows you to display the relative page simply by pressing the icon in the favourites page.

» Maximum number of links in Favourites page = 18
If there are more than 9 links, they will be displayed over 2 screens.


- Navigate through the available screens by swiping with your finger to the left or right

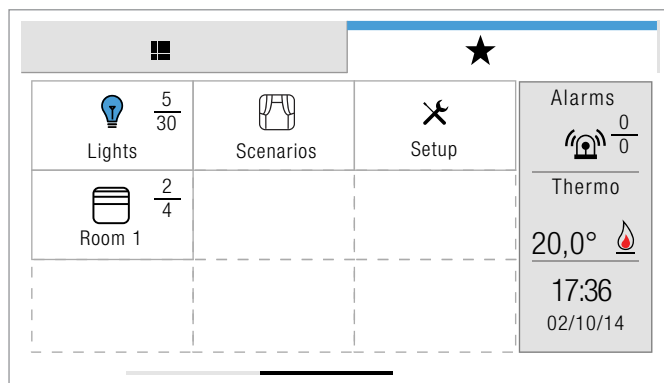


MOVING AND REMOVING FAVOURITES

- Press and hold the icon for the desired favourite (either in the favourites bar or in the favourites page) to open the relative menu.

- Favourites bar (max. 4 icons)

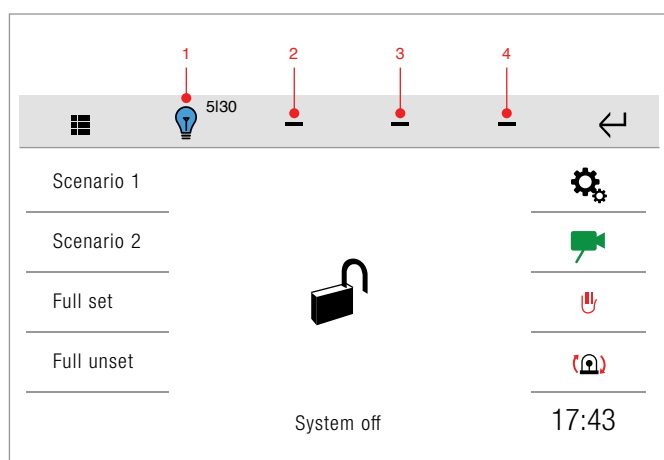

- Favourites page (max. 18 icons)

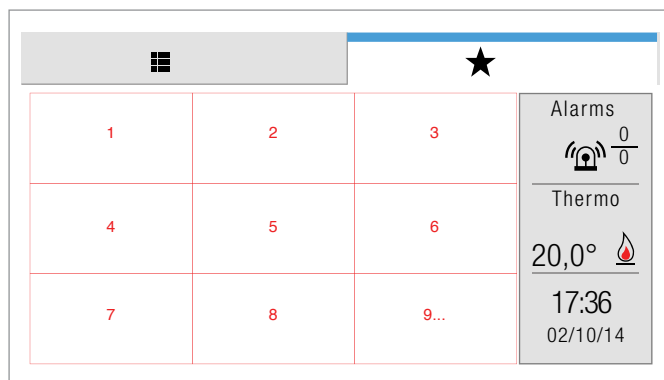

- Press the Move icon to rearrange the positions of the various favourites in the favourites bar.



- » You can choose one of the 4 possible positions (0 - 1 - 2 - 3) in the favourites bar; confirm the selection.



- » You can choose one of the 18 possible positions (0 > 17) in the favourites page; confirm the selection.



- Press the Remove icon to delete the selected icon from the favourites and confirm your selection.

ADVANCED INFO


- When a function is activated, the advanced info relative to that function is displayed.
- » The fraction displayed indicates how many elements relative to the function are available and how many are active.



- » No info displayed.



- » Info displayed:
30 elements available - 5 elements active




- » Info displayed:
30 elements available - 30 elements active



- The function can be activated on:
ALARMS / CLIMATE / OTHER / BLINDS / LIGHTS / IRRIGATION / AUTOMATIONS / LOADS / AUDIO BROADCAST.

WIDGET BAR

- » The Home page has a customisable "widget" side bar with various functions:

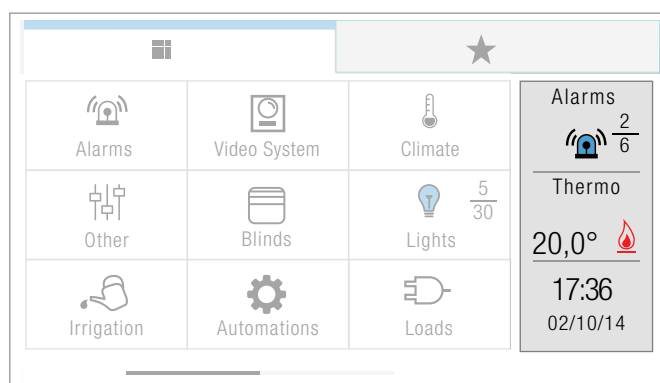

- **ALARM** - the widget shows the alarm status of the system (with or without advanced info)
- **METER** - you can associate a widget with one of the meters in the home automation system. The widget shows the instantaneous reading of that specific meter.
- **CLIMATE** - the widget displays the temperature of the selected climate zone and the status of the climate control system (off - heating - cooling)
- **AUDIO BROADCAST** - the widget displays a single player and information (title and subtitle) about the track currently playing; play/pause button; player status button (also the player connection)
- **DATE AND TIME**



- Only the **AUDIO BROADCAST** widget is interactive
- All the other widgets **do NOT** respond when clicked on!



Use of Icona ViP Manager Art. 20003310W in SimpleSafe systems:

- **update firmware Art.20003310W** to version 2.4.2 or later.
- verify model and firmware version of the **Vedo control panel**.
- verify that the **Set-up/Anti-intrusion/Configuration/Mode menu settings are compatible**.

A

- ✓ Art. VEDO10 - VEDO10EN - VEDO10FR - VEDO10NL - VEDO10DE - VEDO10ES
- ✓ Art. VEDO34 - VEDO34EN - VEDO34FR - VEDO34NL - VEDO34DE - VEDO34ES
- ✓ Art. VEDO68 - VEDO68EN - VEDO68FR - VEDO68NL - VEDO68DE - VEDO68ES

✓ with certification **EN 50131-1** and **EN 50131-3**

✓ **control panel** firmware version **2.4.0** or higher



► Compatible mode = **OFF (default)**

B

- ✓ Vedo 10, 34, 68 Control Panels **NOT CERTIFIED!**
- ✓ Art. 30001008XX - 300034XX - 30001068XX

✓ Icona registered within the SimpleSafe system as MINITOUCH.

✓ **control panel** firmware version **2.2.4** and previous.




► Compatible mode = **ON**

ALARM



► Press the icon to access the alarms menu.

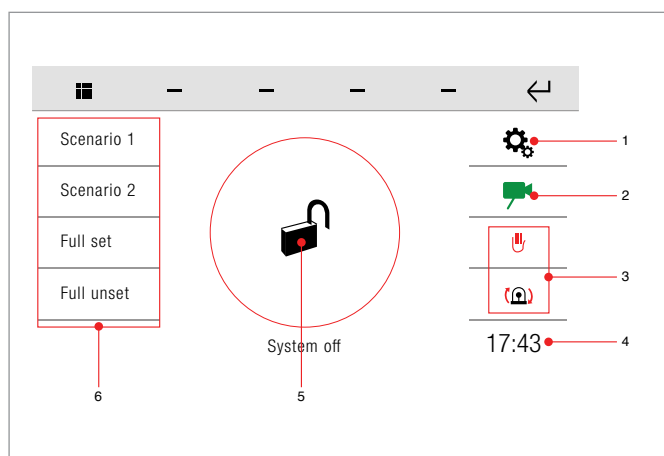

1. Settings menu icon
2. View camera icon
3. Customisable icons (x2) - Shortcut commands
4. Clock
5. Area status indicator
6. Customisable icons (x4) - Activation command

ALARM SYSTEM STATUS ICONS (6)

System off	Insert total	Insert partial
Alarm deactivated	Alarm activated across the entire system	Alarm partially activated
Alarm log	Alarm in progress	In Tamper



- A flashing icon signals the presence of anomalies. Press the icon to view the details!




► Press and hold the **SYSTEM STATUS ICON (5)** to show / hide the area status display.

- Each segment represents one area of the alarm system.
- The colour of the segments gives an indication of the status of each individual area.
- **AREA** > Area activated
- **AREA** > Area partially activated
- **AREA** > Area in alarm
- **AREA** > Area deactivated

ALARM STATUS

- ✓ An alarm is tripped.

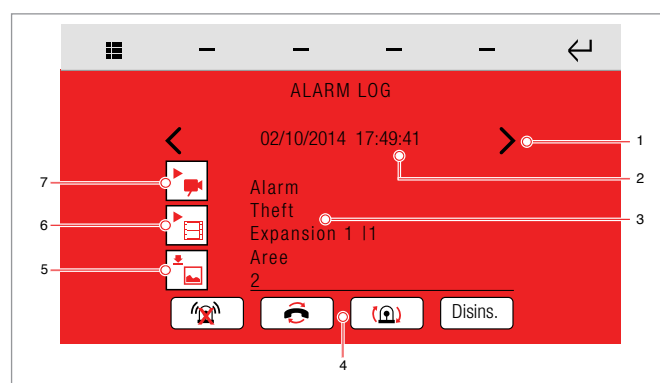

1. Events scrolling icons
2. Date and time of selected event
3. Event details
4. Alarm controls
5. View recorded IMAGES icon
6. View recorded VIDEO icon
7. View VIDEO LIVE STREAM icon



► Press the **VIEW IMAGES** icon to view the images captured in pre-alarm* and alarm mode.



► Press the **VIEW VIDEO** icon to view the video recorded when the alarm was triggered.



► Press the **LIVE STREAM** icon to view *real time* images from the camera connected to the alarm zone.



► Video / Images **LOADING**



► Video / Images **NOT AVAILABLE**




- To view images and videos, at least one camera must be connected and associated with an area of the alarm system.
- The functions can be configured and activated via Safe Manager.
- *The pre-alarm images will only be captured if the "pre-alarm" function has been assigned to the camera. The number of images captured during the pre-alarm phase will depend on the pre-alarm time; with a pre-alarm time of zero, images will only be captured in alarm mode.

DESCRIPTION OF ALARM CONTROLS (4)


- Unset

▶ Press the DEACTIVATE ALARMS button to deactivate the alarm system.
- ▶ Press the RESET ALARMS to reset the alarms log.
- ▶ Press the RESET PHONES icon to delete the emergency phone calls log.
- ▶ Press the STOP ALARMS icon to stop the selected alarm (the system remains activated).

The ALARMS MENU keeps track of the alarm in progress.

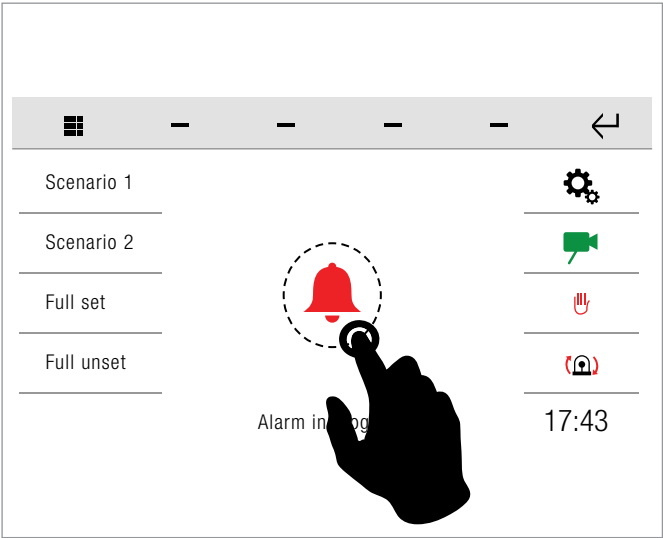

- ▶ Press the icon to open the event details window.

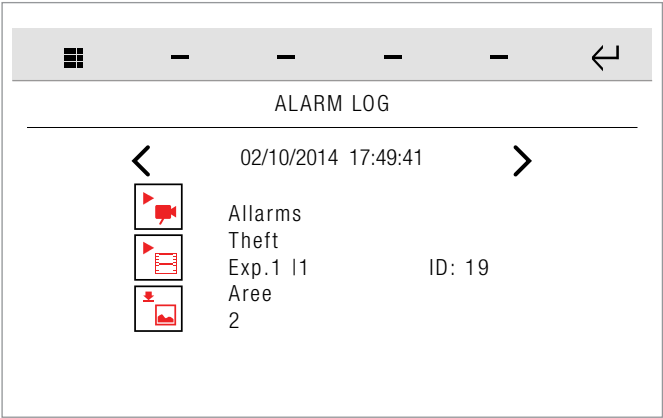


- The LIVE STREAM, IMAGES and RECORDED VIDEO viewing functions can also be used from this window.

RESET ALARMS

The alarm system can be reset in any of the following 3 ways:

1. From the main screen of the alarms menu, press the RESET ALARMS icon.
2. If the icon is not present, access the Alarms menu and press the icon to access the alarm settings.
- ▶ Access the SHORTCUTS function by pressing the corresponding icon.
- ▶ Press the RESET ALARMS icon to reset the alarm system.
3. Perform an ACTIVATION (even partial) of the areas in alarm.

- The system does not provide any messages to inform you that the operation was completed successfully!

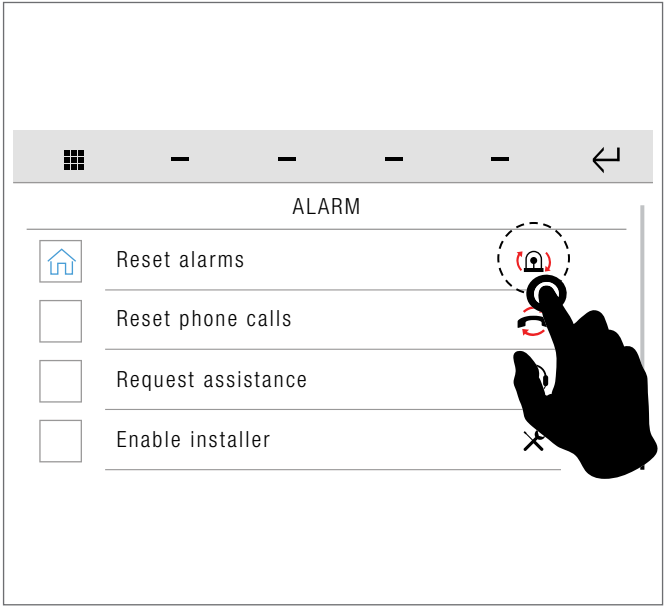

ACTIVATING THE ANTI-INTRUSION SYSTEM

OPTION A (with area status visible)




► Press the icon in the main ALARM screen.



• CAUTION!

The icon varies according to the status of the alarm system!


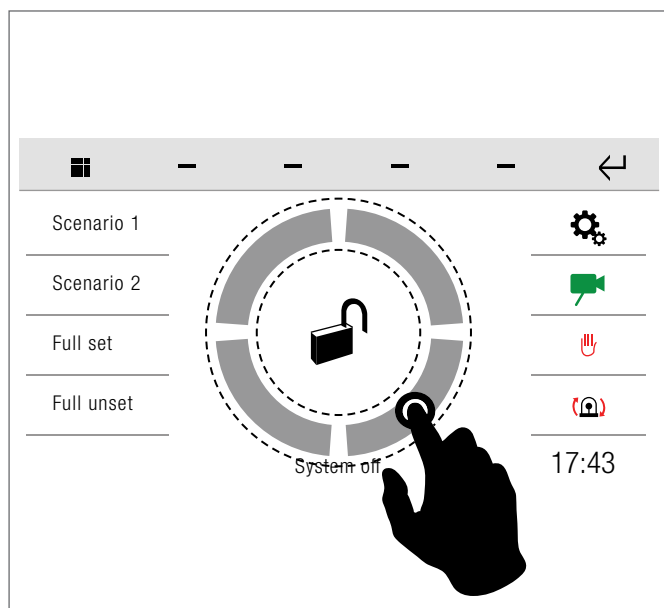


OPTION B (with area status hidden)




► This takes you to the Alarms menu, and then press the icon to access the options menu.

► Press the CUSTOMISED ACTIVATION icon.

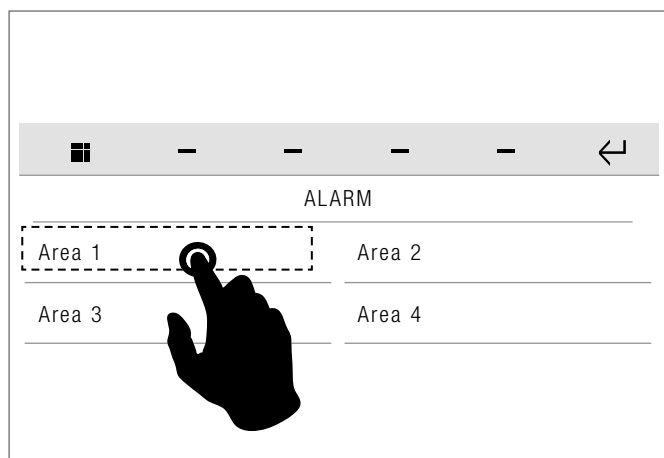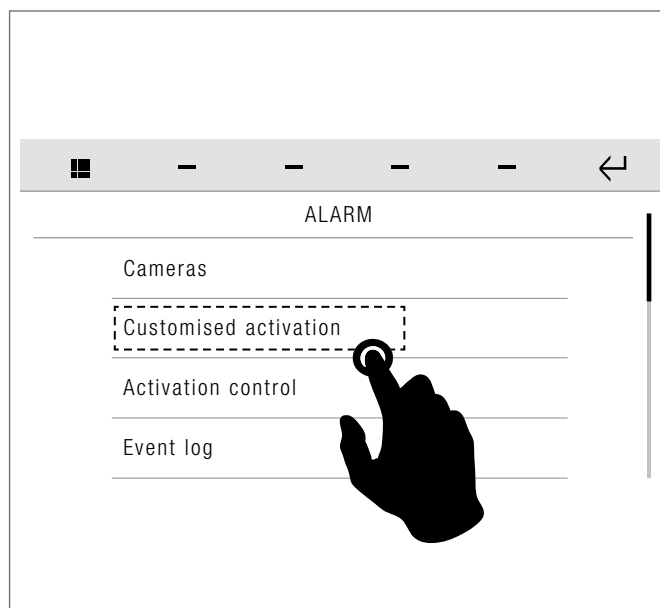

► Select the desired area.

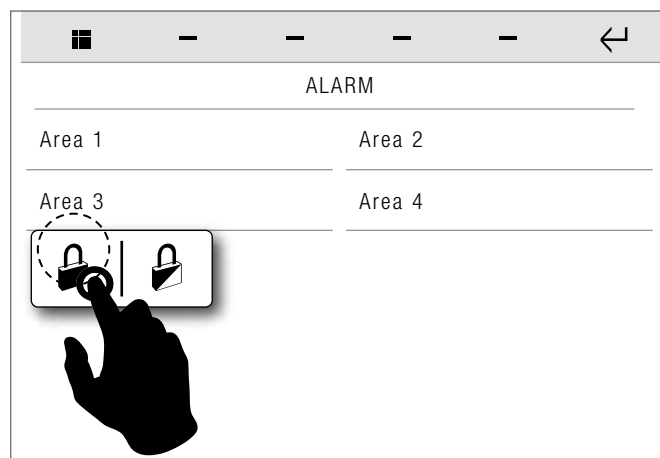

► Press the total activation icon.


» The activated area is highlighted in green; the type of activation performed is also indicated.

DEACTIVATING THE ANTI-INTRUSION SYSTEM

OPTION A

-  ▶ Press the icon in the main ALARM screen.




-  • CAUTION!
The icon varies according to the status of the alarm system!

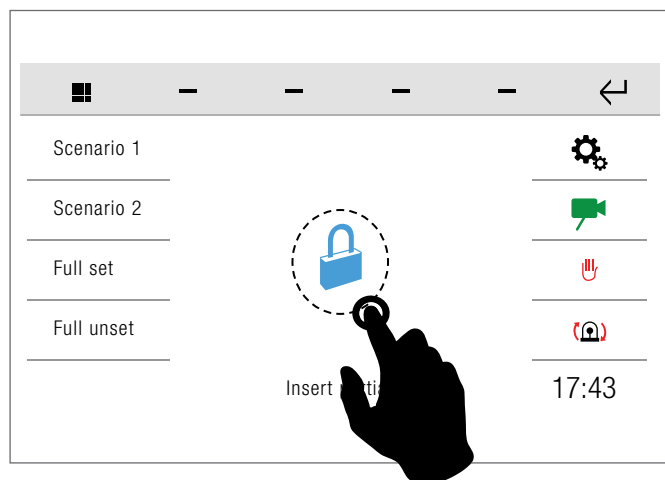

OPTION B

-  ▶ Access the Alarms menu and then press the icon to access the options menu.

- ▶ Press the CUSTOMISED ACTIVATION icon.

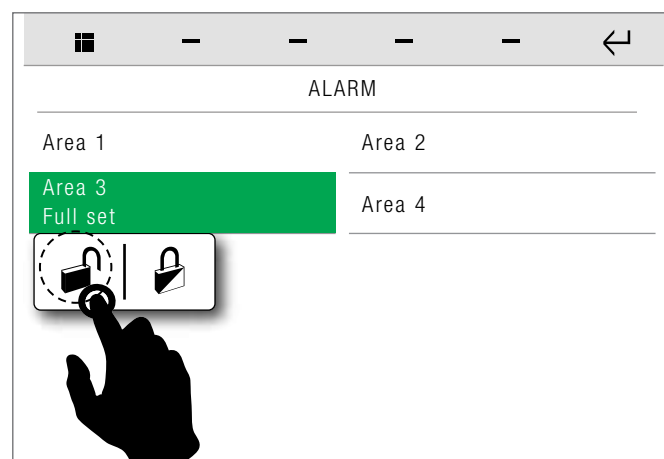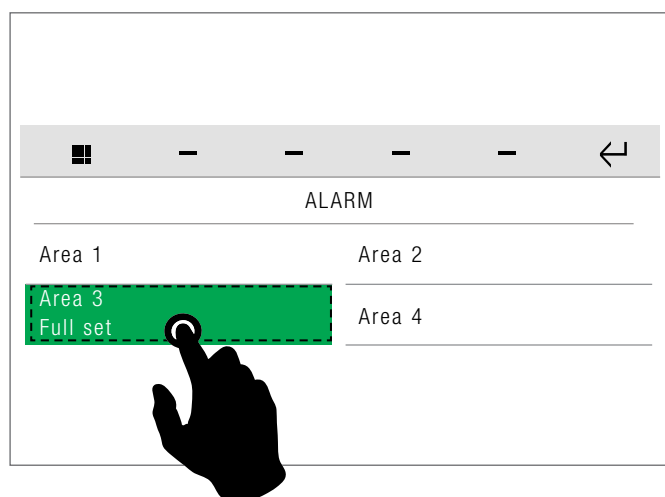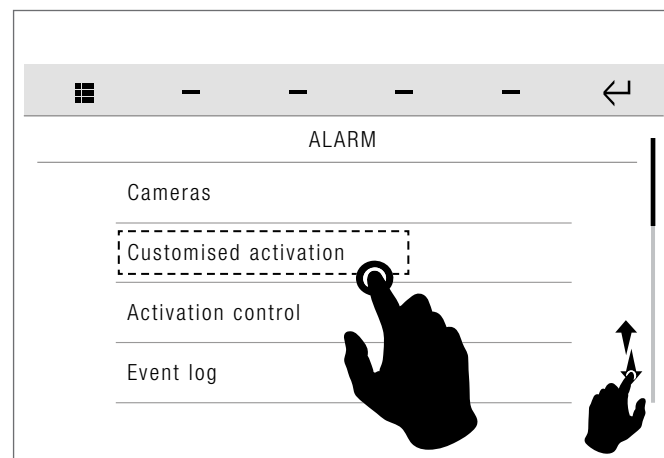

- ▶ Select the desired area.


-  ▶ Press the total activation icon.

PARTIAL AREA ACTIVATION



► Press the partial activation icon.


► Navigate through the available alarm areas by swiping with your finger to the left or right.

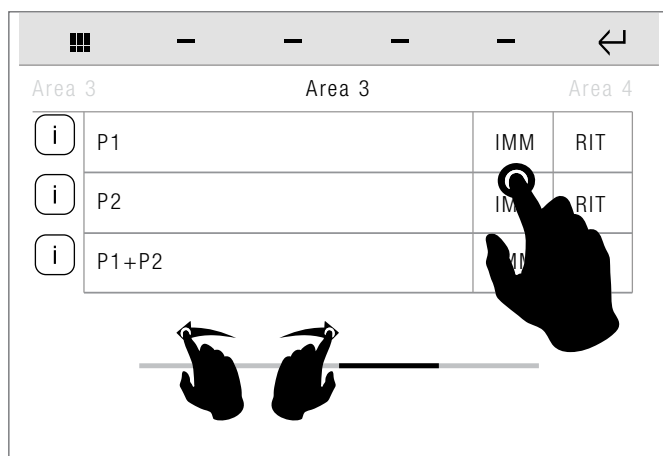

► Select the desired zone for partial activation and the activation type.

- IMM = immediate
- RIT = delayed


» The activated area is highlighted in green; the type of activation performed is also indicated.

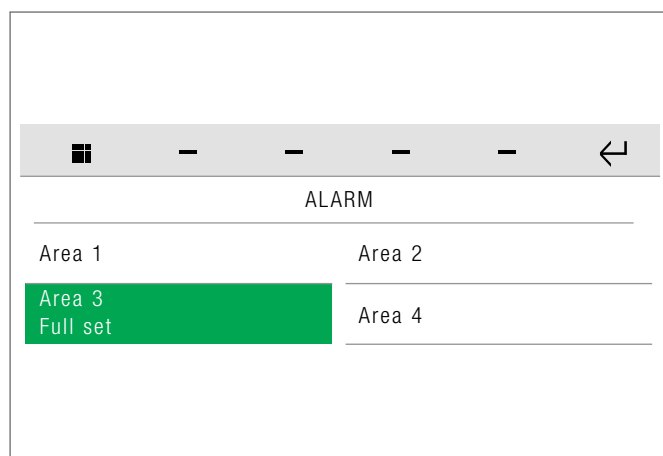

ALARM SETTINGS



► Access the Alarms menu and then press the icon to access the options menu.

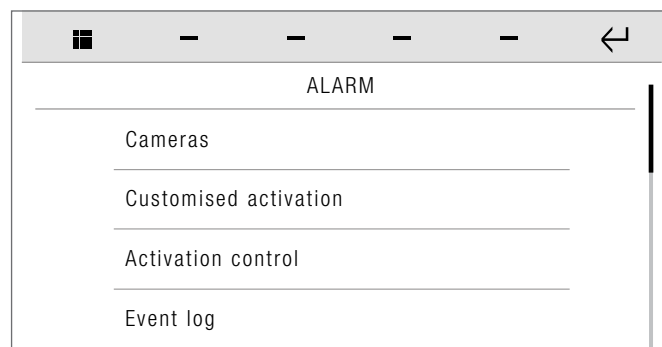

► Select the desired function by pressing the corresponding option.




- Each time an ALARM function parameter is modified, it will be relayed to the control panel. In this case the configuration update screen will be displayed.

Cameras

ALARM SETTINGS - Cameras

► Press the icon of the desired camera to start playback.

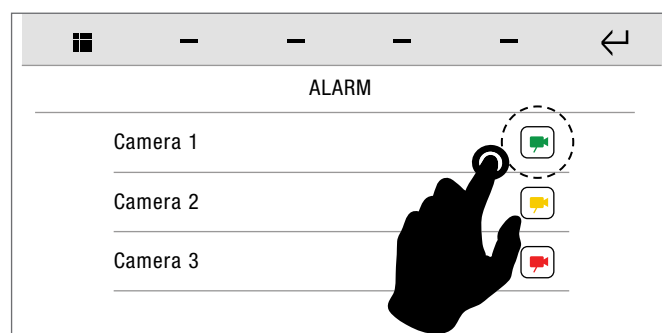

► Camera enabled and operating



► Camera not connected



► Camera fault



- Swipe with your finger to the left or right to switch between the available cameras.




- Press the off icon to stop playback and return to the previous screen.

Customised activation

ALARM SETTINGS - *Customised activation*

The function allows you to display the areas of the system, the status of each area and to activate/deactivate the alarm system in the chosen areas.

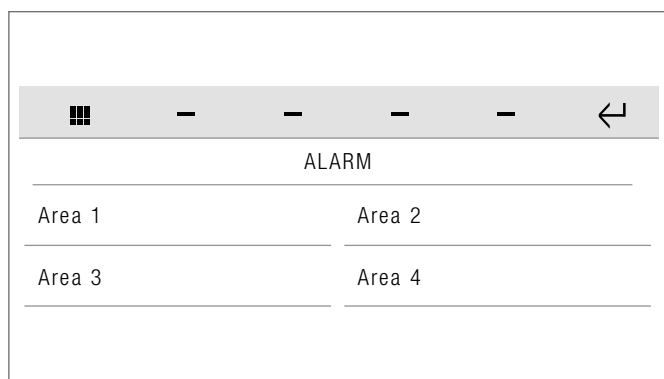


» See "ACTIVATING THE ANTI-INTRUSION SYSTEM" on page 11 and "DEACTIVATING" on page 12

Activation control

ALARM SETTINGS - *Activation control*

The function allows you to launch previously created activation scenarios.

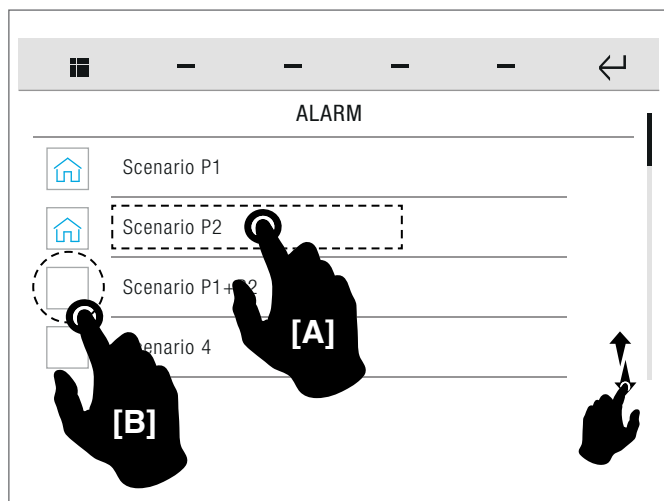

- Press icon [A] with the activation name to launch the corresponding scenario.

You can add links to the activation controls in the alarm home page.



- Press icon [B] to add the activation control to the home page of the alarm function.




» The icon is labelled.




- You can insert a maximum of 4 different activation controls in the alarm home page!

Event log

ALARM SETTINGS - *Event log*

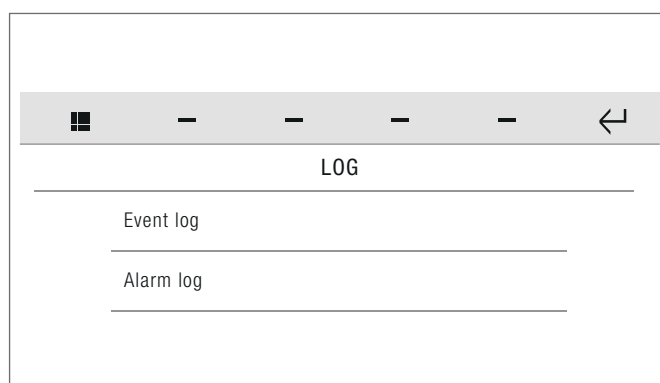

- Select the desired category by pressing the corresponding name.

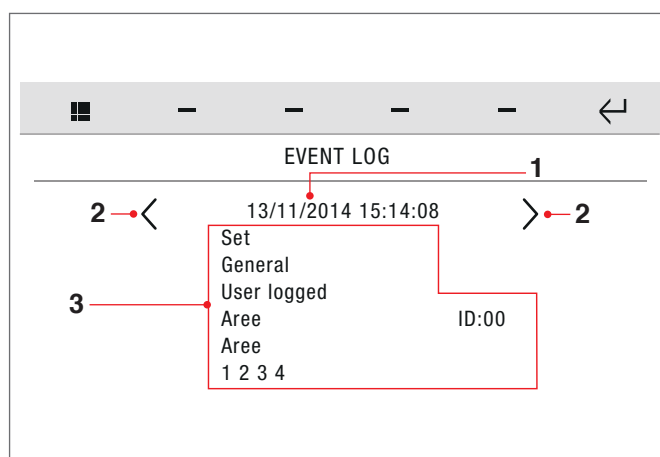


1. Selected event/alarm (date + time)
2. Event/alarm navigation icons
3. Event/alarm details

» Information about the selected event is displayed on the screen.

Zone and area status

ALARM SETTINGS - Zone and area status

The function is used to check the status of the various zones/areas of the system configuration.

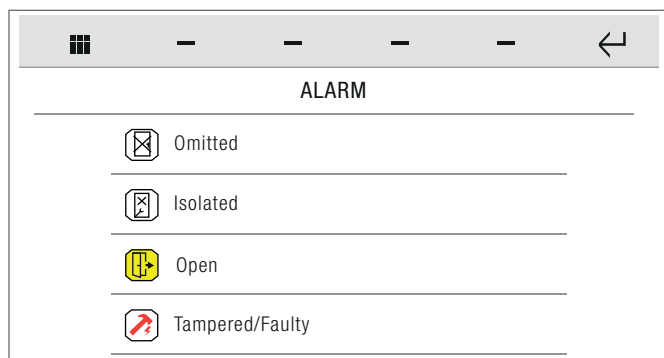


- Press the icon to open the list of Omitted / Isolated / Open / Tampered/ Faulty zones.

✓ If there are no zones that meet the criteria.



✓ If there are zones that meet the criteria.





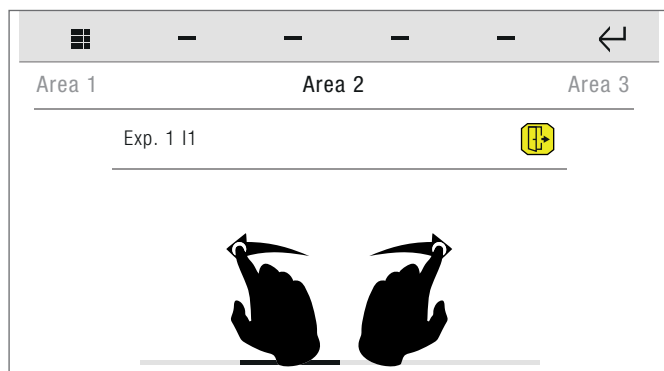


- Swipe with your finger to the left or right to move between the available areas.

Shortcuts

ALARM SETTINGS - Shortcuts

This function can be used to select which shortcut buttons (alarm command) to move to the alarm home page, or to execute a command (or trigger an alarm) from those listed.

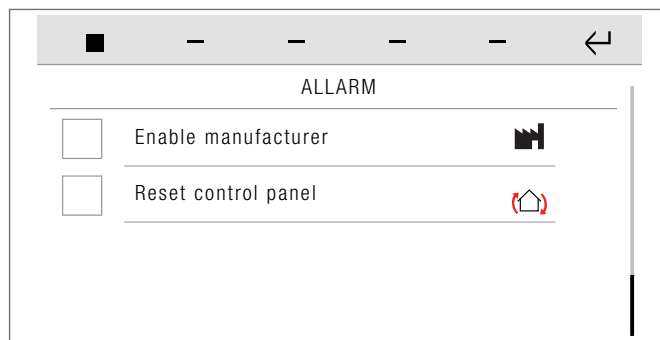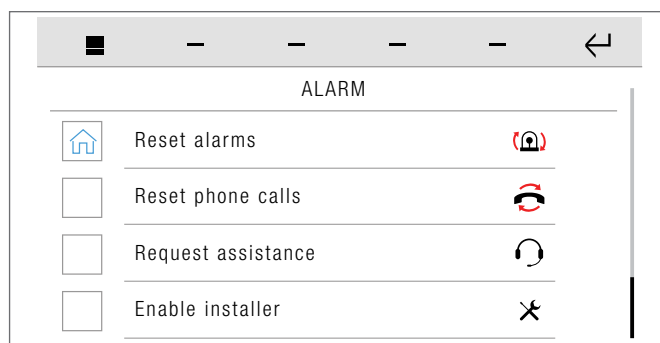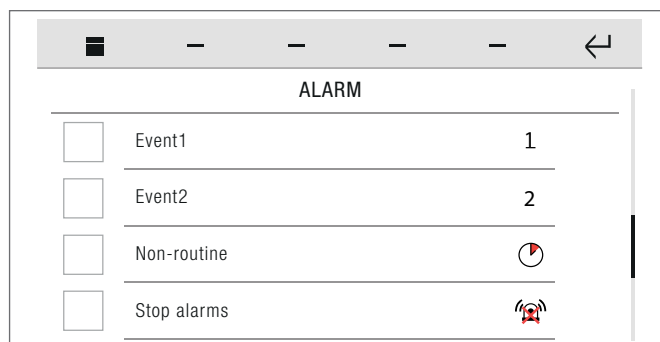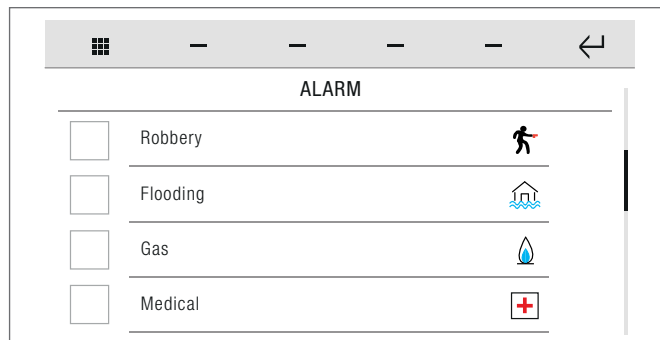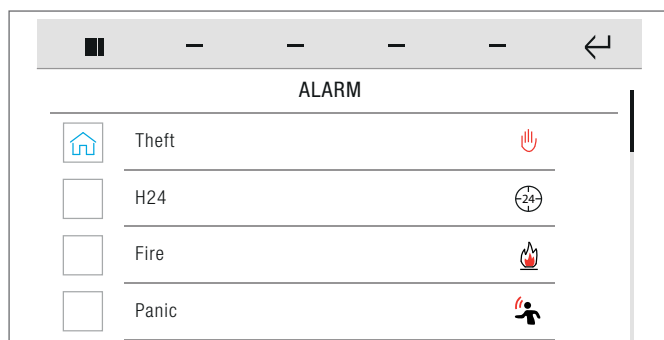

- Press the icon to add the SHORTCUT to the home page of the alarm function.



» The icon is labelled.




- You can insert a MAXIMUM OF 2 SHORTCUTS in the alarm home page!


Exit controls

ALARM SETTINGS - Exit controls

This function enables you to change the status of the system outputs.

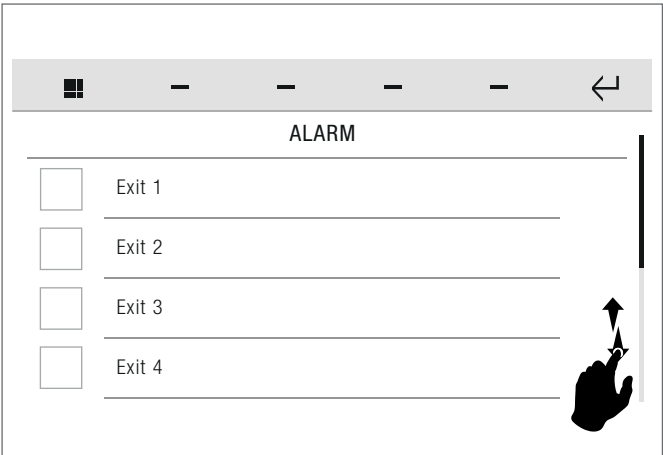

► Swipe your finger up or down to view all the available menu options.




► Press the icon to add the SHORTCUT to the home page of the alarm function.



» The icon is labelled.

► Press the icon of the desired output to edit its status.

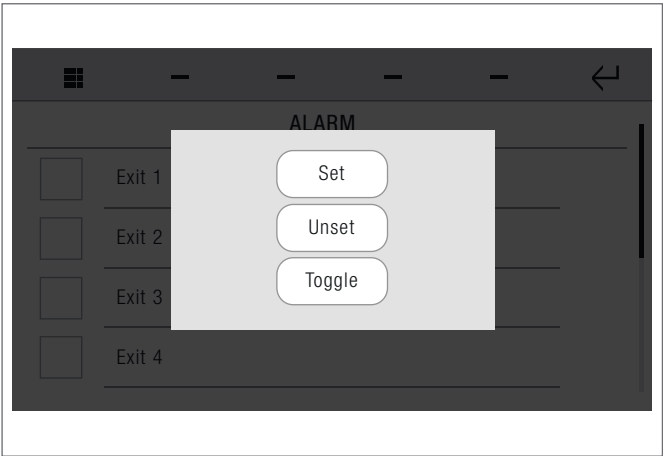

► Select the desired status.


- SET: to activate the output
- UNSET: to deactivate the output
- TOGGLE: to change the status (if the output is activated, it will be deactivated and vice-versa)

» The system confirms the changes made.

Phone book

ALARM SETTINGS - Phone book



This function allows you to edit the phone book memorised on the control panel.

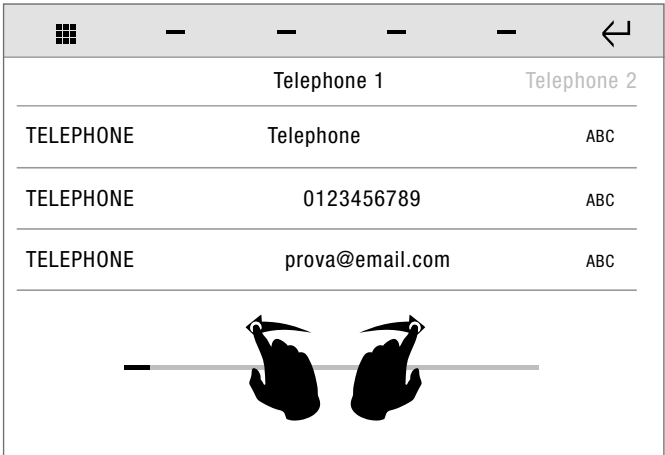

► Swipe with your finger to the left or right to move between the phone book entries.




► Press the icon to edit the value of the corresponding entry.

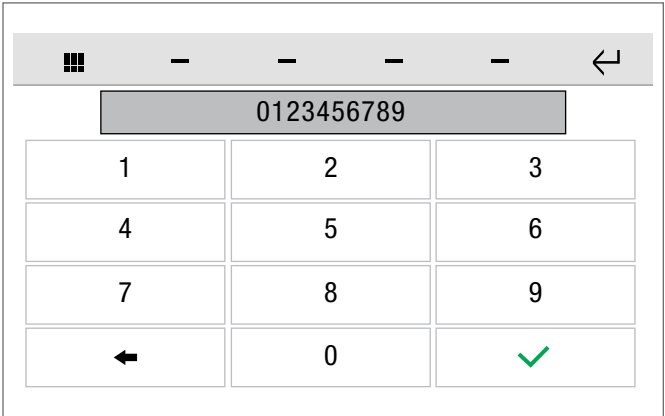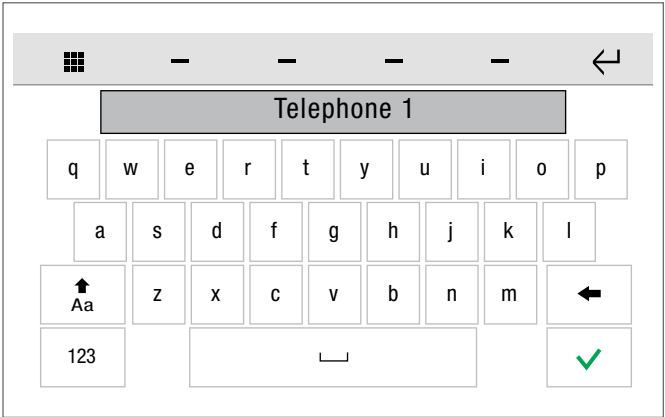

ALARM OPTIONS

The OPTIONS panel contains a series of submenus dedicated to the various settings of the alarm system.

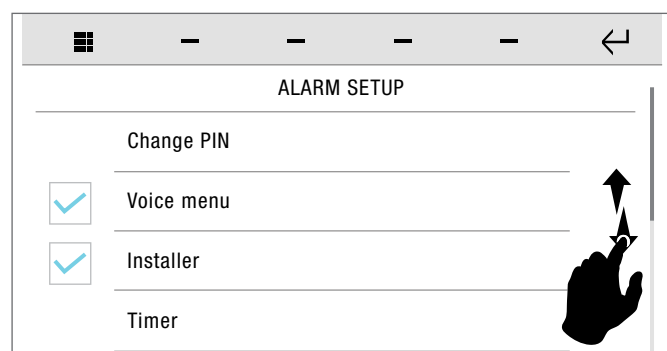


- Swipe your finger up or down to view all the available menu options.
- Press the desired option to open the corresponding panel.

OPTIONS - Change PIN

SETUP-Anti-intrusion-Change pin


The CHANGE PIN panel allows you to edit or delete the pin codes associated with the various users.

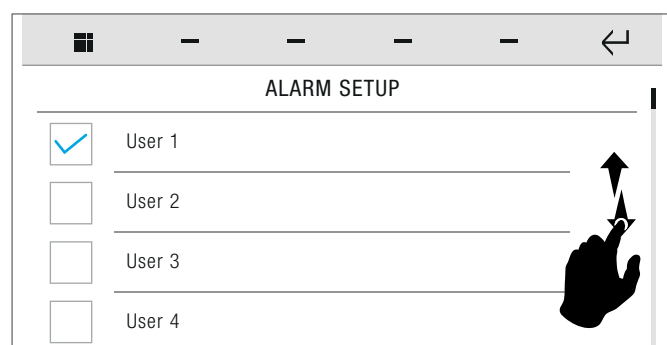

- Select the desired user to edit the PIN.



- Select the icon to activate a new user.

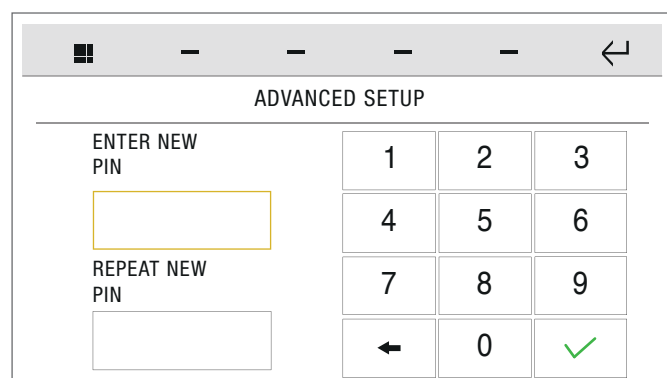

- Enter the PIN 2 times, then confirm.

» The system is updated.


OPTIONS - Voice menu

SETUP-Anti-intrusion-Voice menu

This function - if activated - allows you to partially control and to monitor the control panel via a phone call.



- √ In order to use this function, it is first necessary to install a VOICE MESSAGE MODULE Art. 30001303.

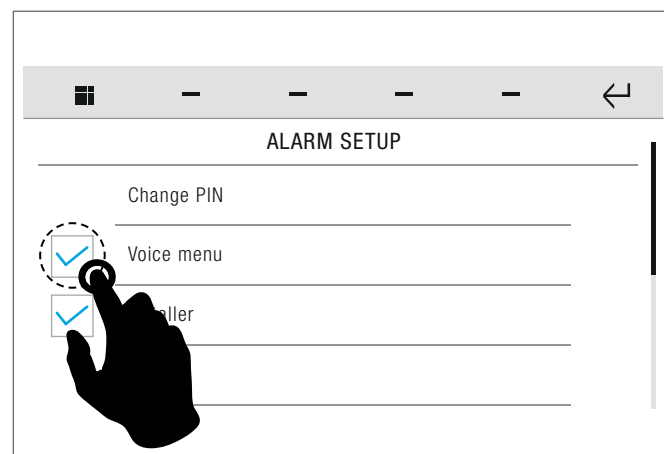

» Indicates the function is ACTIVE




» Indicates the function as INACTIVE

» The system CONFIRMS and UPDATES the settings.


OPTIONS - Installer menu

SETUP-Anti-intrusion-Installer menu

The options enables/disables installer mode in the system parameters of the control panel.

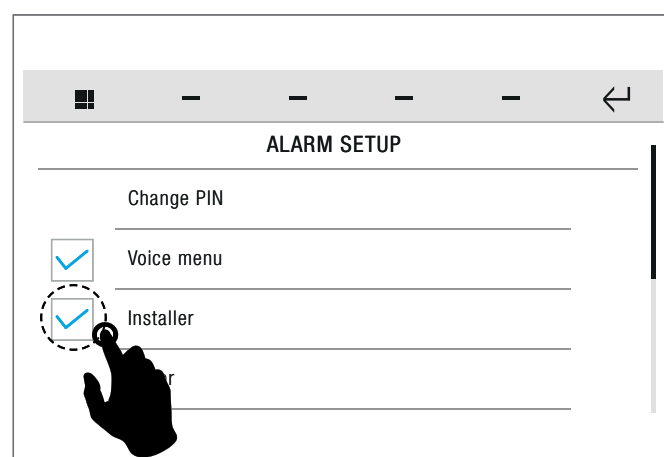

» Indicates the function is ACTIVE



» Indicates the function is INACTIVE

» The system CONFIRMS and UPDATES the settings.


OPTIONS - Auto-activation

SETUP-Anti-intrusion-Auto-activation



ADVANCED FUNCTION - requires login as INSTALLER/MANUFACTURER!

This option allows you to enable/disable auto activations created using the ACTIVATIONS option of the SAFE MANAGER program.

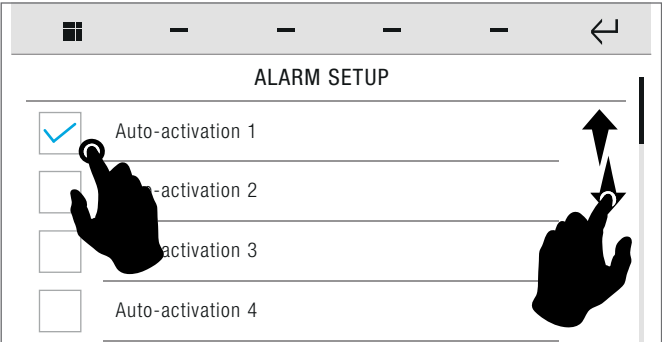

» Indicates the function is ACTIVE




» Indicates the function is INACTIVE

» The system CONFIRMS and UPDATES the settings.

OPTIONS - Timer

SETUP-Anti-intrusion-Timer

This option allows you to enable/disable the alarm system activation timer.

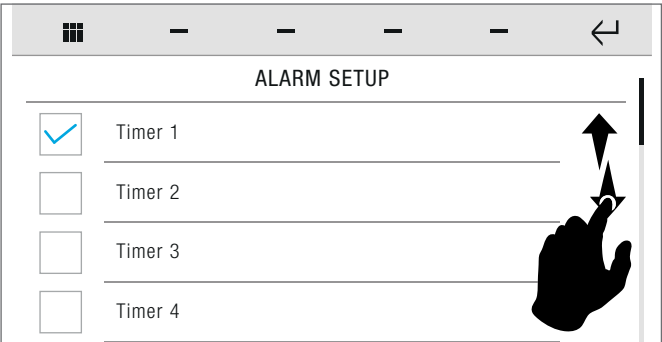

► Select the desired user to edit the PIN.



► Select the icon to activate a new user.

» The system CONFIRMS and UPDATES the settings.




✓ The timers are programmed using the TIMING/ACTIVATIONS function of the SAFE MANAGER program.


OPTIONS - Organize desktop

SETUP-Anti-intrusion-Organize desktop

This option allows you to delete the links to Activation controls / Shortcuts / Output controls previously added to the alarms home page.

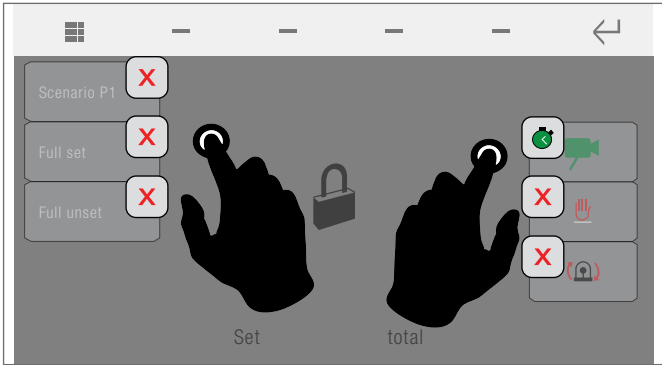

► Press the icon to delete the corresponding link.

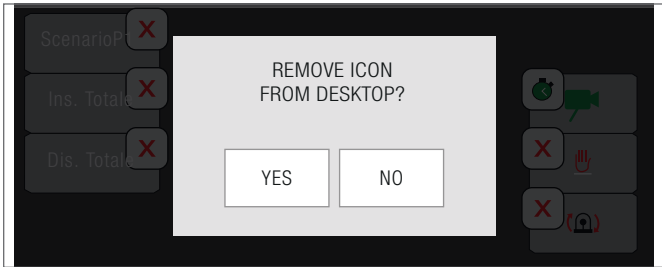

» The system CONFIRMS and UPDATES the settings.



► Press the icon to insert the link to the function TIMED ACTIVATIONS.



► Press the icon to insert the link to the function VIEW CAMERAS.


OPTIONS - Tones

SETUP-Anti-intrusion-Tones



ADVANCED FUNCTION - requires login as INSTALLER/MANUFACTURER!

The function allows you to manage (by activating or deactivating) the alert sounds of the control panel.

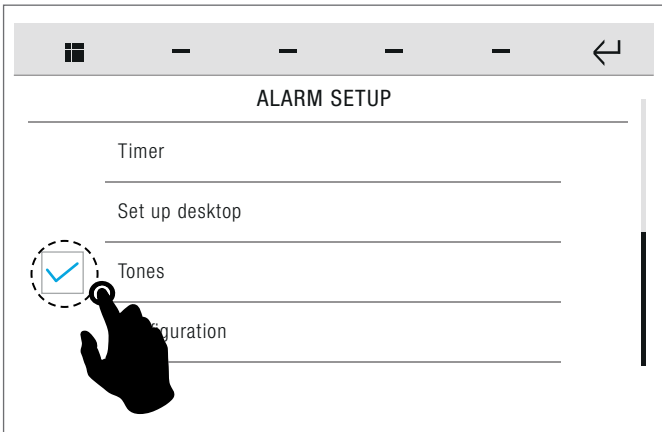

- Press the icon corresponding to the TONES function to activate/deactivate system sounds.




» Indicates the function is ACTIVE




» Indicates the function is INACTIVE

» The system CONFIRMS and UPDATES the settings.

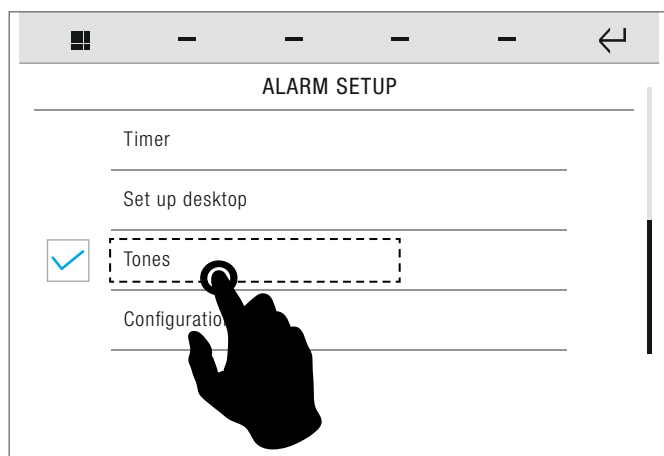

- Press the TONES icon to enter the sub-menu.

In the sub-menu you can select which sounds you want the control panel to play.

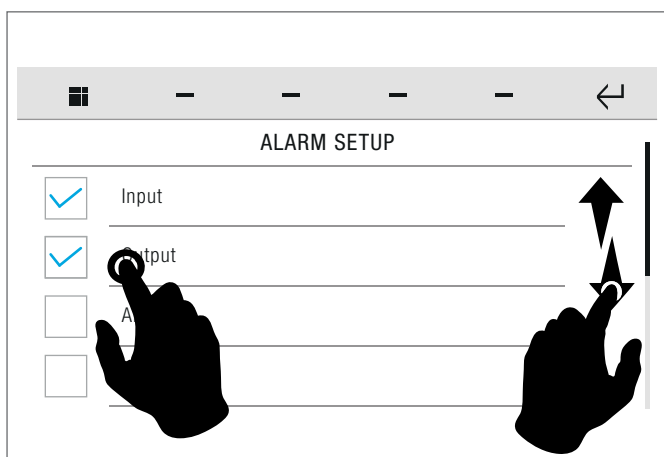

- Swipe your finger up or down to view all the available menu options.
- Select or de-select the desired options.



» Indicates the function is ACTIVE




» Indicates the function is INACTIVE

OPTIONS - Configuration

SETUP-Anti-intrusion-Configuration




ADVANCED FUNCTION - requires login as INSTALLER/MANUFACTURER!

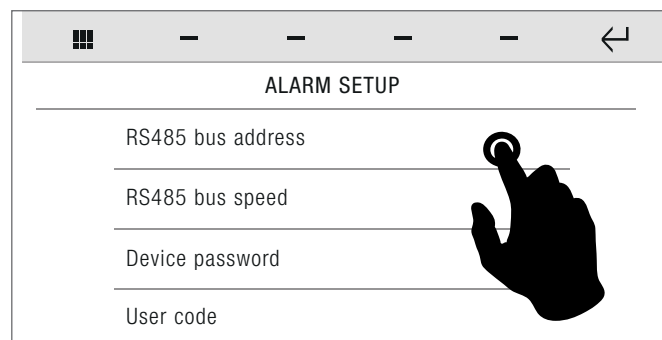

- Select the desired option.

Configuration - RS485 bus address


SETUP-Anti-intrusion-Configuration-RS485 bus address

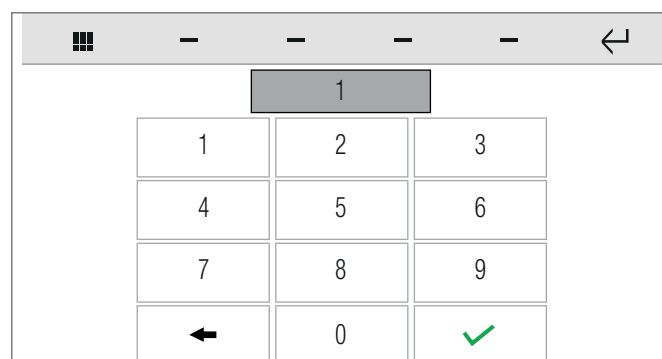

- Enter the desired address and confirm by pressing the icon.

Configuration - User code

SETUP-Anti-intrusion-Configuration- User code

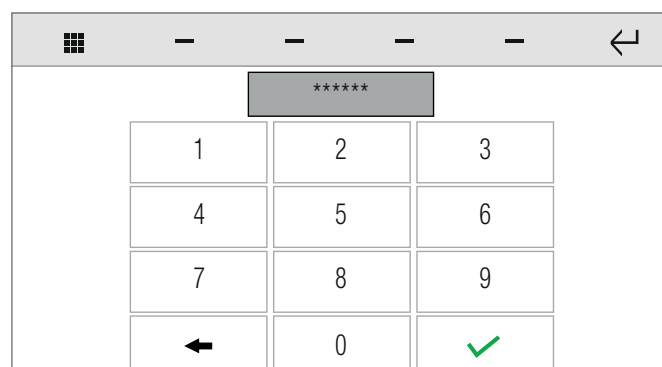


- Enter the desired code, then confirm.




It is not advisable to change the BUS ADDRESS and USER CODE parameters as this could cause a malfunction of the alarm system. CONTACT QUALIFIED PERSONNEL!


OTHER / LIGHTS / IRRIGATION / AUTOMATIONS

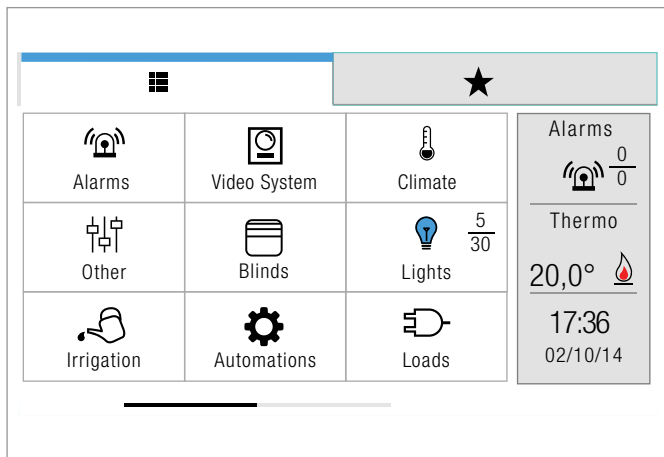

► Press to access the relative sections.

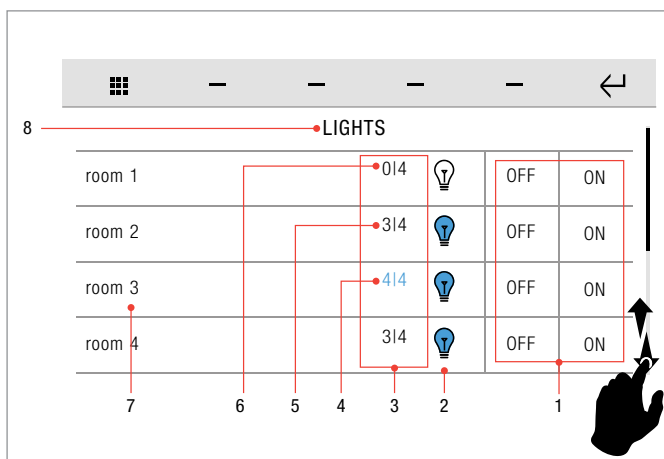


1. ON/OFF icons
2. Status indicator
3. Advanced info indicator
4. All the room devices are ACTIVE
5. All the room devices are INACTIVE
6. All the room devices are INACTIVE
7. List of available rooms
8. Selected function



• The indicator turns blue if AT LEAST 1 DEVICE IS ACTIVE/ON.

► Activate/deactivate the selected room by pressing the ON/OFF buttons

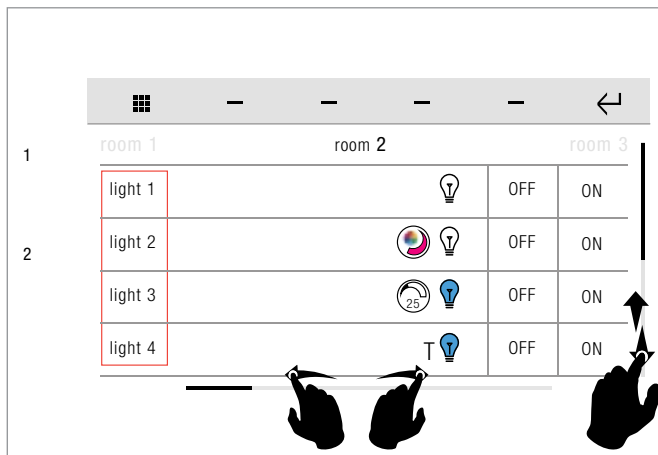


1. Selected room
2. Devices in the selected room

► Swipe with your finger to the left or right to move between the available rooms.


► Swipe your finger up or down to view all the available menu options for the selected room.


► Activate/deactivate the selected device by pressing the ON/OFF buttons

FUNCTION SCHEDULING


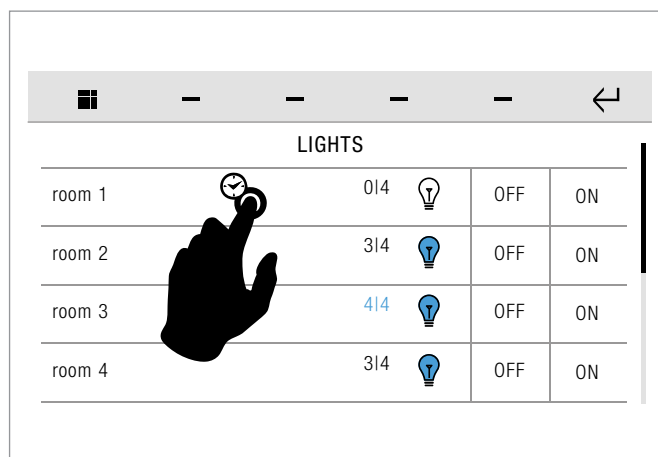


► Long press the desired ROOM or DEVICE to open the advanced panel, then select the option SCHEDULING to open the corresponding panel.

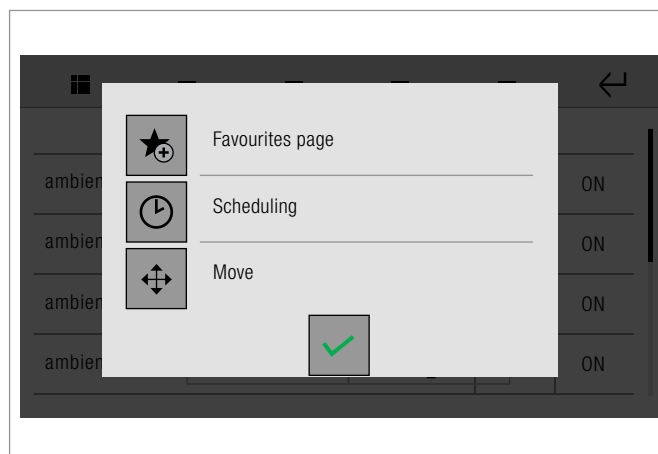


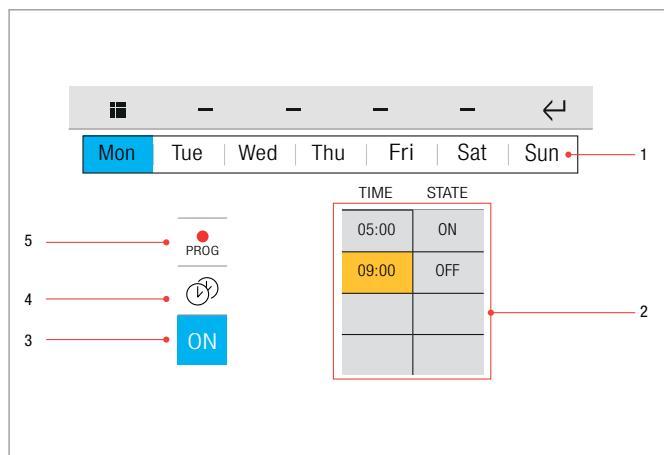


1. Days of the week bar
2. Time/Status table
3. Programming On/Off icon
4. Copy program icon
5. Programming mode icon


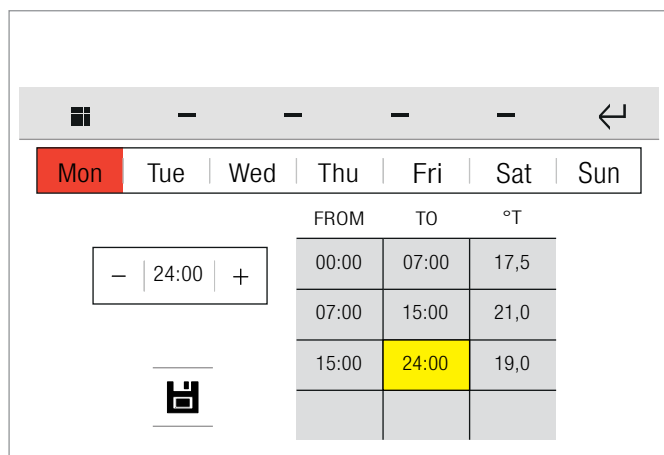



You can select the day/s to be modified by pressing the corresponding icon on the top bar.

» The selected day/s will be highlighted in red.




» The value being modified is highlighted in yellow.

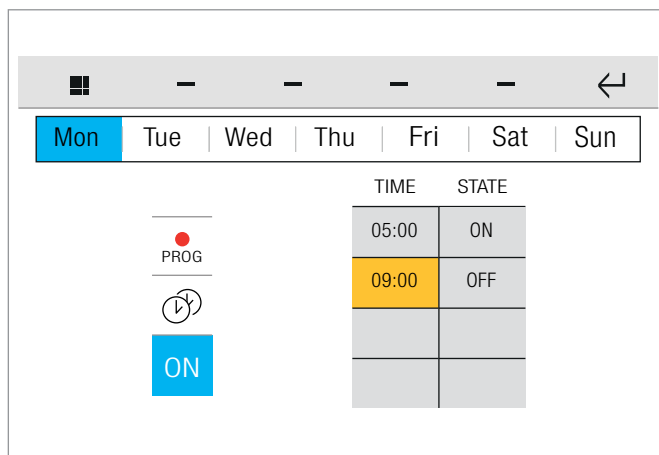


Once you have returned to the main page, you can copy the programmed activity from one day to another:

- Select the day of the week to copied in the band at the top.

» The source day is highlighted in blue.



» The selected destination days are highlighted in red.

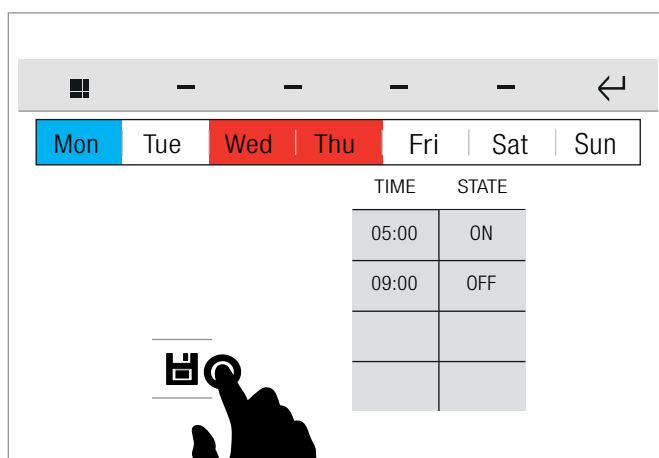


DOOR ENTRY MONITORS



Video System

- Press the icon to access the door entry monitors menu.

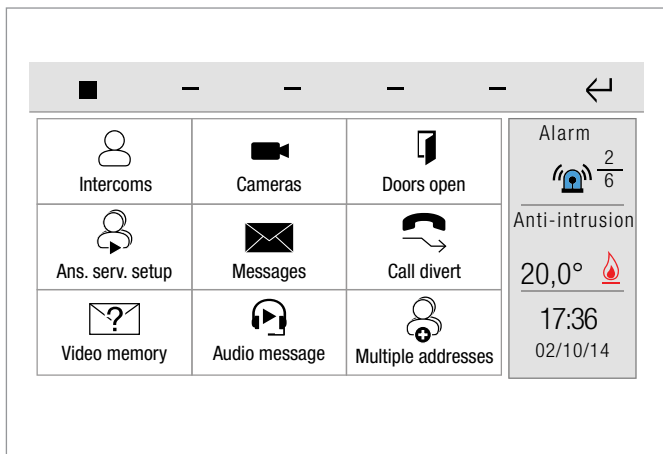

Actuators

- If enabled (via ViP Manager), the ACTUATORS DIRECTORY will be displayed with the actuators icon.

DOOR ENTRY MONITORS - Intercoms


DOOR ENTRY MONITORS-*Intercoms*

This function allows you to call up a directory of addresses (see "Door entry monitors - Intercoms directory" on page 56).



Intercoms

- Press the icon to access the function, then select from the directory the device to which the call is to be diverted via intercom call.

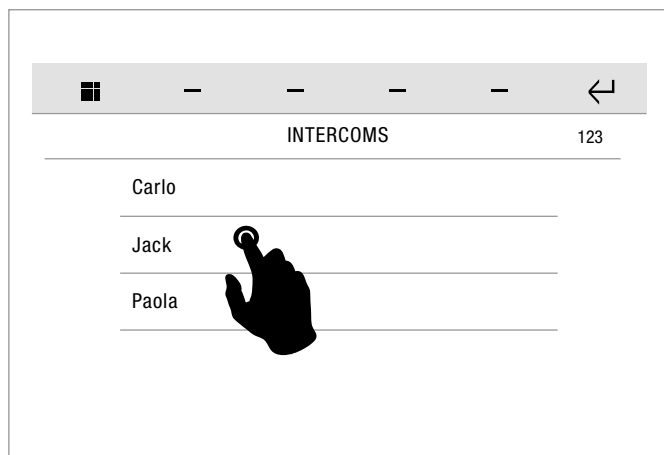

123 ► Press the icon to enter the ViP address to call.

DOOR ENTRY MONITORS - Cameras

DOOR ENTRY MONITORS-*Cameras*

This function allows you to interrogate a directory of cameras (see "Door entry monitors - Cameras directory" on page 55) to start live streaming.



Cameras

- Press the icon to access the function, then select from the directory the camera to be interrogated.

DOOR ENTRY MONITORS - Open doors

DOOR ENTRY MONITORS-*Open doors*

This function allows you to interrogate a directory of doors (see "Door entry monitors- Doors directory" on page 58) to check their status (open/closed).



Doors open

- Press the icon to access the function, then select from the directory the door to be interrogated in order to start viewing the cameras associated with the door.



Doors open

- » The icon changes to indicate that the door is open.

DOOR ENTRY MONITORS - Answering service setup


DOOR ENTRY MONITORS-*Answering service setup*

This function allows you to manage the parameters for the device's video memory function



Ans. serv. setup

- Press the icon to access the dedicated sub-menu.

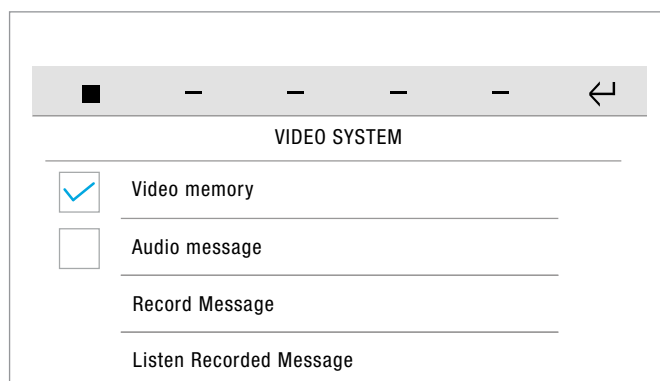

- Tick the VIDEO MEMORY box to activate the corresponding function.



Video memory

- » The icon changes status.

» The icon



on the soft touch key lights up.



- Tick the AUDIO MESSAGE box to activate the voice message automatic playback function.

- Short press RECORD MESSAGE to start recording the AUDIO MESSAGE.

- Short press LISTEN RECORDED MESSAGE to play the recorded AUDIO MESSAGE.



Audio message

- » The icon changes status.

» The icon





on the soft touch key lights up.


DOOR ENTRY MONITORS - Messages

DOOR ENTRY MONITORS-Messages

This function allows you to manage the ViP messaging system of the device.

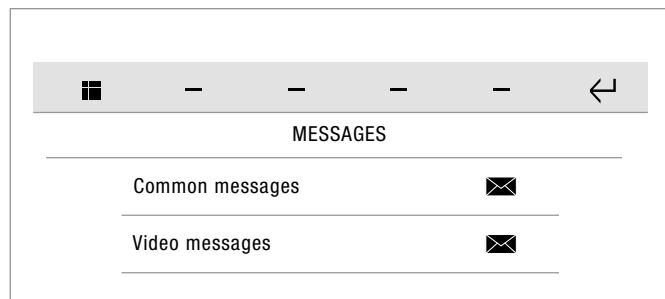


- Press the icon COMMON MESSAGES to access the ViP message sub-menu.

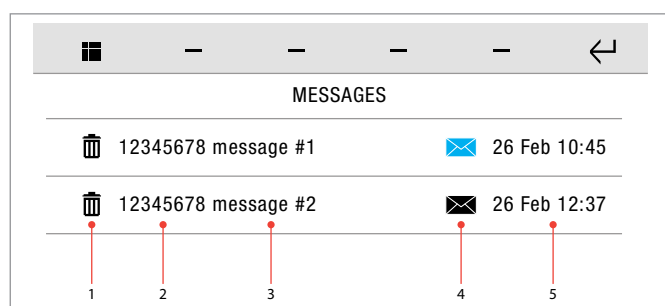


- Delete message icon
- Sender ViP address
- Message title
- New message / previously read message icon
- Date message received

- Short press on the message title to open the message.

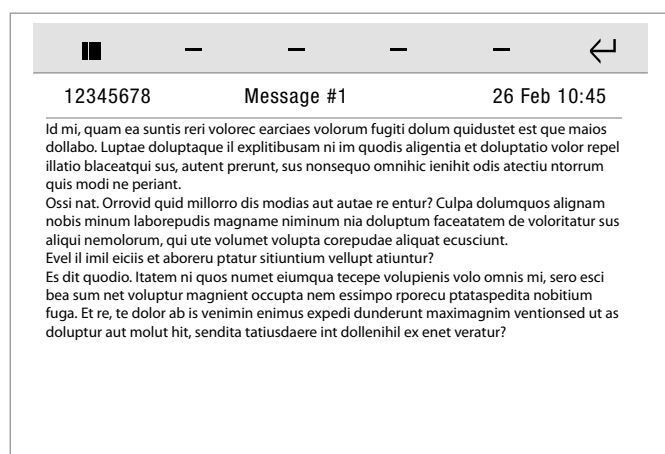

- Press the icon VIDEO MESSAGES to access the video memory sub-menu.

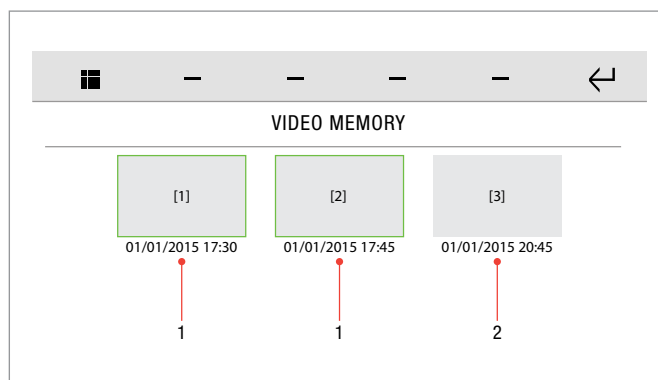

- Previously viewed video recording
- New video recording resolution



- [1] [2] [3] are previews of the video recordings recorded in the video memory.
- Each video is labelled with the date and time it was recorded.

- Short press on the recording preview to start playback.
- Long press (and confirm) to delete the video recording.

DOOR ENTRY MONITORS - Call divert

DOOR ENTRY MONITORS-Call divert

This function allows you to enable call diversion to another ViP device (see "Door entry monitors - Call divert" on page 57) if there is no response from the original device or if it is in use.



- Press the icon to activate the function.



- The icon changes status (call divert activated).

DOOR ENTRY MONITORS - Video memory

DOOR ENTRY MONITORS-Video memory

This function allows you to enable the video memory on the device. (See "DOOR ENTRY MONITORS - Answering service setup" on page 22).



- Press the icon to activate the function.



- The icon will change status (video memory activated).

DOOR ENTRY MONITORS - Audio message

DOOR ENTRY MONITORS-Audio message

The function allows you to enable audio message playback on the device on receipt of an incoming call.
(See "DOOR ENTRY MONITORS - Answering service setup" on page 22).



► Press the icon to activate the function.



» The icon changes status (audio message activated).

DOOR ENTRY MONITORS - Multiple addresses

DOOR ENTRY MONITORS-Multiple addresses

The function allows you to configure the device to manage multiple addresses, thereby permitting the reception of calls directed to other ViP devices.
(See "Door entry monitors - Configure multiple addresses" on page 59).



► Press the icon to access the dedicated sub-menu.

VIDEO SYSTEM
←

☒ 2

☐ 3

► Tick the desired device to activate the function in combination with its previously configured address.
(See "Door entry monitors - Configure multiple addresses" on page 59).



► If at least one multiple address is activated, the icon will change status.

ADVANCED FUNCTION SCHEDULING

SCHEDULING ICONS		
scheduling NOT PRESENT	saved schedule NOT ACTIVE	saved schedule active

Some icons allow you to identify the presence of a schedule associated with a specific functions.

TIMED FUNCTIONS

Some functions can be timed, i.e. an activation time for the function can be set.

TIMED FUNCTIONS	
	other timed function
	timed light
	timed irrigation

► Press the required icon to access the timer menu.

LIGHT 2
←

4
3

11:00

+
2
-

1. Cursor for timer setting
2. Icons for precision timer setting
3. Timer setting indicator
4. Confirm icon

► Press and drag the cursor to set the timer.

- YOU can also press and hold on a point of the arc to move the cursor to the required point.




► You can set the timer with precision by pressing the buttons.



► Confirm.


DIMMER LIGHTS

DIMMABLE LIGHTS

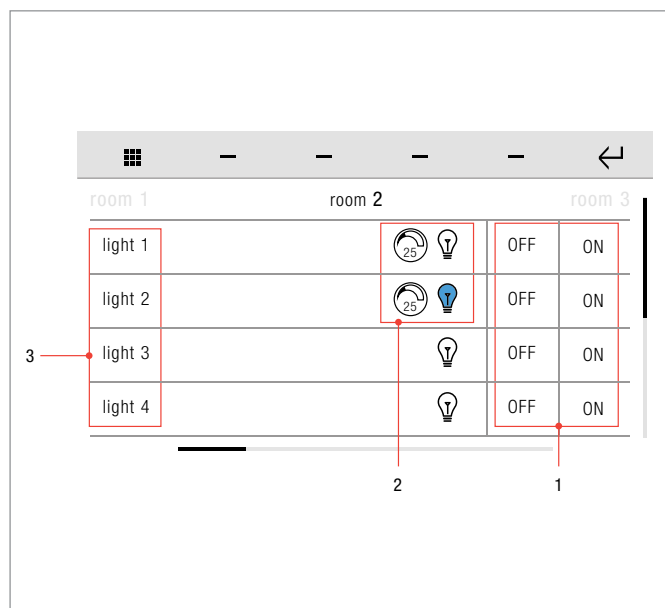


1. ON/OFF icons
2. Dimmable light icons
3. List of available lights

DIMMABLE LIGHT ICONS - KEY

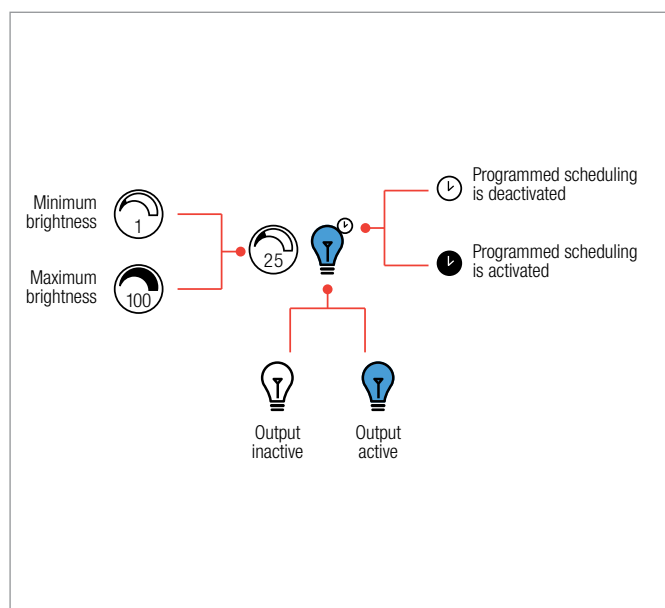

-  Press the ON/OFF icon (SHORT PRESS) to switch the corresponding output on or off.
-  Press the ON/OFF icon (LONG PRESS) to increase or reduce the brightness.
-  Press the dimmable light icon to access the advanced brightness control screen.

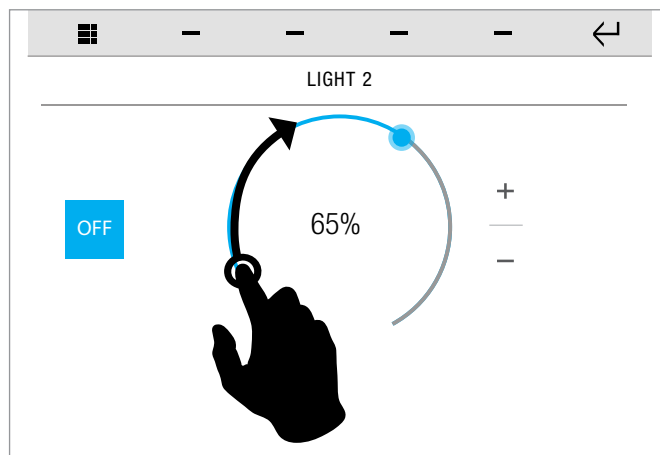

- Press the cursor and drag it to set the desired timer value.
- YOU can also press and hold on a point of the arc to move the cursor to the required point.




- You can set the timer with precision by pressing the buttons.



- Confirm.

DIMMER LIGHT SCHEDULING

- Hold pressed the desired ROOM or DEVICE to open the advanced panel, then select the option SCHEDULING to open the corresponding panel.

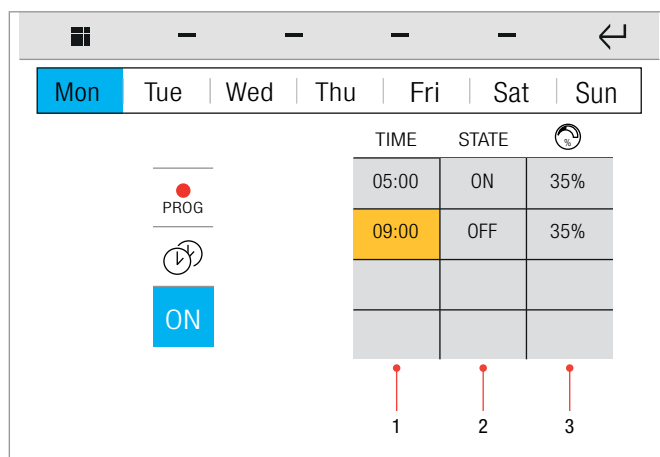


1. Time column
2. Status column (ON/OFF)
3. Brightness setting column

- Set the times and status as described in the paragraph "FUNCTION SCHEDULING" on page 20

- Set the brightness desired in the same way.


DIMMABLE LIGHTS WITH PRESENCE SENSOR

DIMMABLE LIGHTS WITH PRESENCE SENSOR

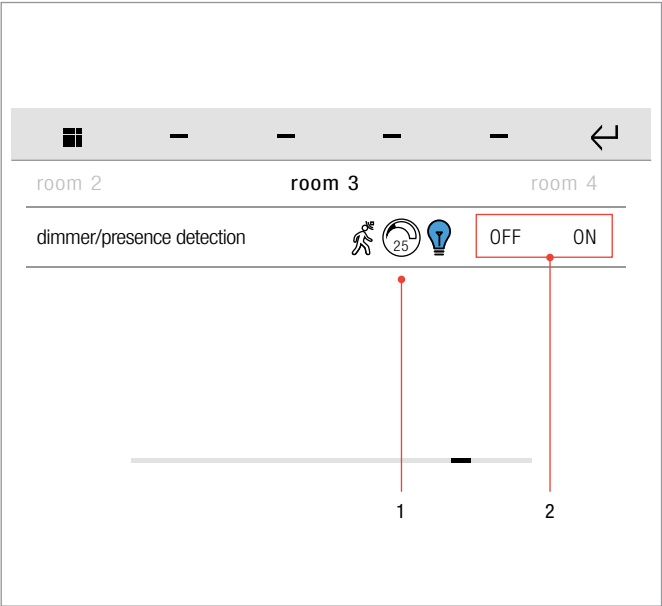

- 1. Dimmable lights with presence sensor icon
- 2. ON/OFF icons

DIMMABLE LIGHTS WITH PRESENCE SENSOR ICON - KEY

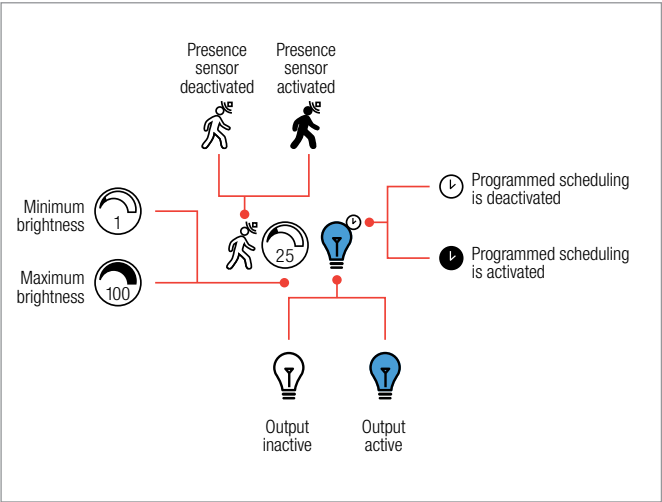

• With PRESENCE SENSOR DEACTIVATED



► Press the ON/OFF icon (SHORT PRESS) to switch the corresponding output on or off.



► Press the ON/OFF icon (LONG PRESS) to increase or reduce the brightness.



► Press the dimmable light icon to access the advanced brightness control screen.



• With PRESENCE SENSOR ACTIVATED

• You cannot control the function with short presses of the ON/OFF icon.




► Press the ON/OFF icon (LONG PRESS) to increase or reduce the brightness. ONLY WITH THE OUTPUT ACTIVE!



► Press the dimmable light icon to access the advanced brightness control screen.

► Hold pressed the desired ROOM or DEVICE to open the advanced panel, then select the option SCHEDULING to open the corresponding panel.

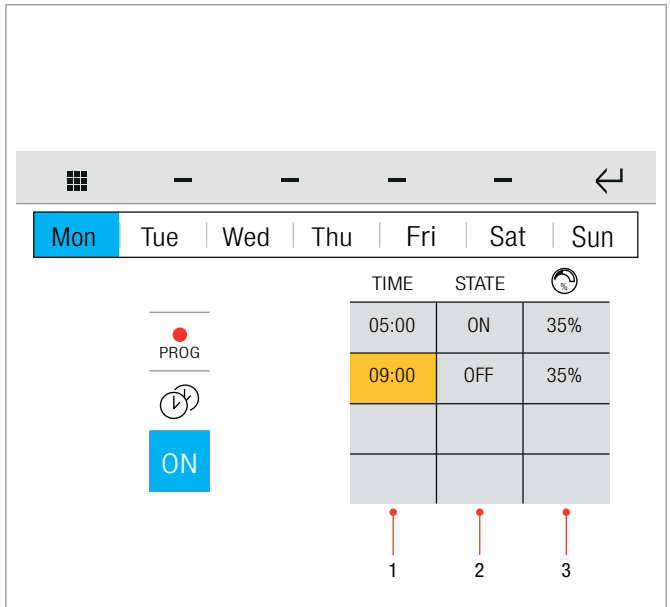


- 1. Time column
- 2. Status column (ON/OFF)
- 3. Brightness setting column

► Set the times and status as described in the paragraph "FUNCTION SCHEDULING" on page 20

► Set the brightness desired in the same way.

RGB DIMMABLE LIGHTS

DIMMABLE COLOUR CHANGING LIGHTS

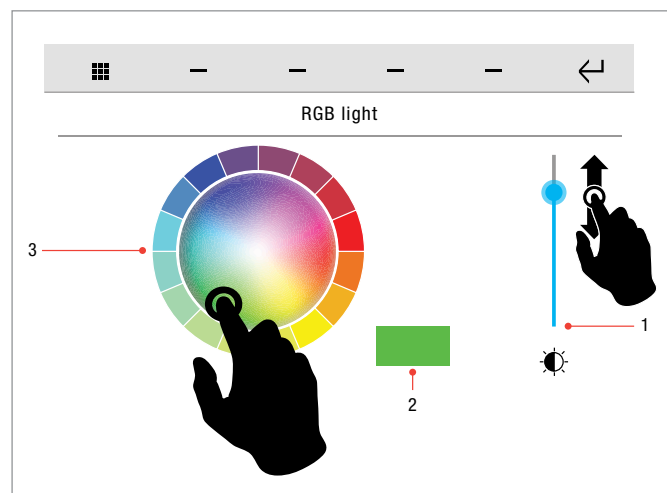


1. Brightness control cursor
2. Selected colour indicator
3. Chromatic spectrum



► Press and hold the cursor to move it along the bar and adjust the brightness.


- Select the desired colour by pressing the corresponding area of the chromatic spectrum.

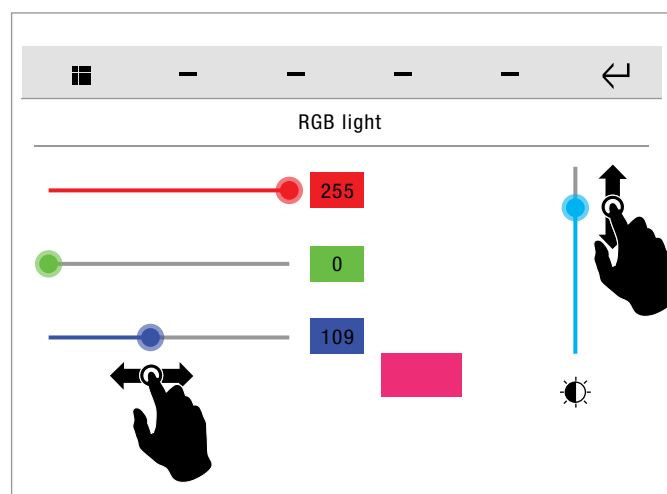

- Press the selected colour indicator to open the advanced colour setting screen.
- The screen shows the RGB composition of the selected colour

RGB LIGHTS SCHEDULING

- Hold pressed the desired ROOM or DEVICE to open the advanced panel, then select the option SCHEDULING to open the corresponding panel.

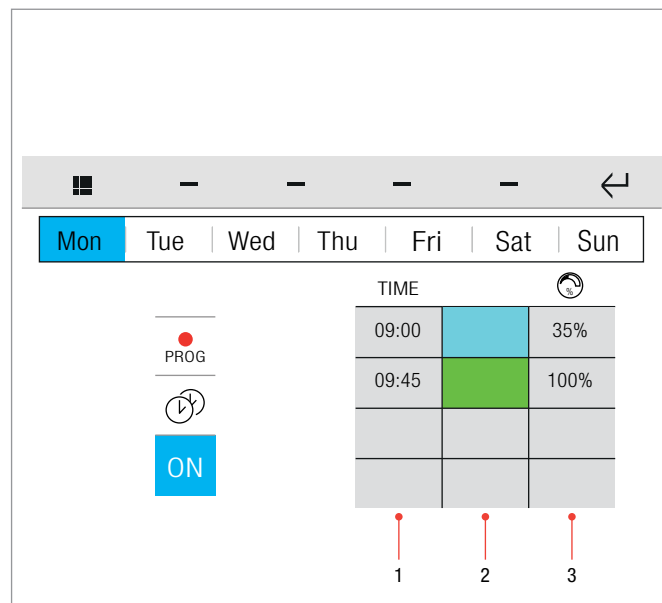


1. Time column
2. Colour column
3. Brightness setting column

- Set the times and status as described in the paragraph "FUNCTION SCHEDULING" on page 20


- Set the desired colour and brightness in the same way.

CLIMATE CONTROL

From the climate section you can monitor, set and program room temperatures.




► Press the icon to access the climate menu.

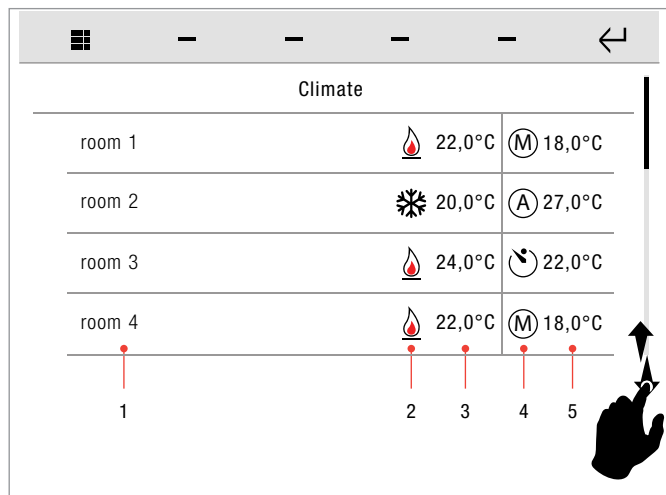

1. List of rooms for climate control
2. Heating/cooling icons
3. Temperature setting
4. Automatic, Manual and Forcing mode icons
5. Temperature reading

► Swipe your finger up or down to view the available options.

► Select the desired room by pressing the corresponding icon.

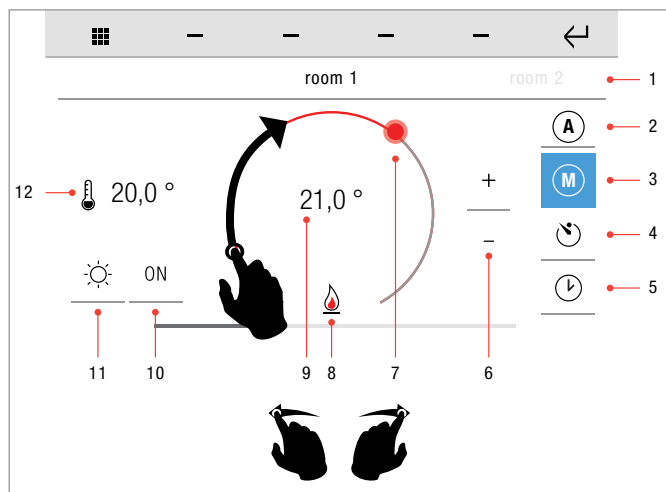

1. List of rooms for climate control
2. AUTOMATIC mode
3. MANUAL mode
4. MANUAL FORCING mode
5. Programming mode icon
6. Icons for precision setting
7. Rapid heat control cursor
8. Heating/cooling active icon
9. Temperature setting
10. On/Off icon
11. Winter/Summer operating mode icon
12. Temperature reading

► Swipe with your finger to the left or right to view the available climate zones.



► Press the ON/OFF icon to switch the climate zone on or off.

► Press one of the icons to select the desired operating mode:



AUTOMATIC mode



MANUAL mode



MANUAL FORCING mode




► Press the icons to set the desired temperature; alternatively use the cursor, holding it pressed and dragging it.


► Press one of the icons to select the desired seasonal operating mode:



SUMMER mode (cooling)

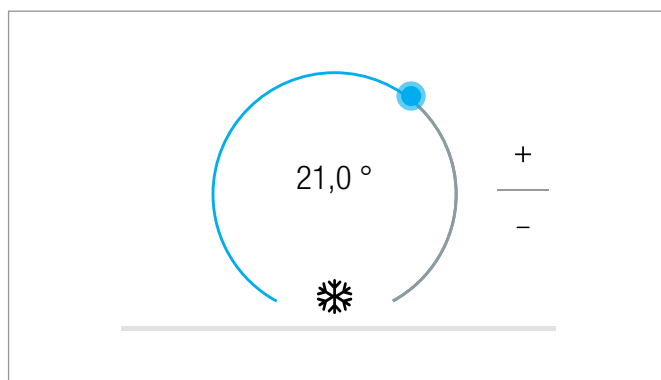

WINTER mode (heating)

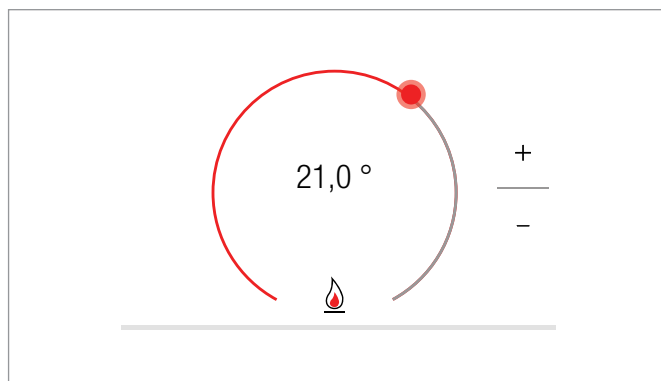

CLIMATE FORCING

It is possible to force programming (both automatic and manual) for a set period of time (hours or days).



► Press the icon to access the climate forcing function.

► Set the temperature and the duration of operation in forcing mode.



► Press the icon to start operation in forcing mode.

» The icon is replaced by the RESET icon



► Press the icon to suspend/resume operation in forcing mode.



• Once the forcing cycle has finished the system will revert to the mode set previously (Automatic or Manual).

CLIMATE SCHEDULING

1. Days of the week bar
2. Programming mode icon
3. Copy program icon
4. Graph mode icon
5. Start time
6. End time
7. Selected temperature



► Press the icon to access scheduling mode.



• Daily climate control programming must apply to the whole 24-hour cycle; any hours not programmed by the user will be set by the system automatically.

FROM	TO	°T
00:00	07:00	17,5
07:00	15:00	21,0
15:00	24:00	19,0

► Select the day and the value to be changed.

» The selected day will be highlighted in red.
» The selected times and temperatures will be highlighted in yellow.



► Press the icons to set the start and end times of the time period and the desired temperature.



► Press the icon to confirm the set/modified value.



► Press the icon [3] to copy the programme, then select the destination days to which the programme is to be copied.


» The selected destination days are highlighted in red.



► Press to confirm.



► Press icon [4] to access the graph display mode for climate programming.

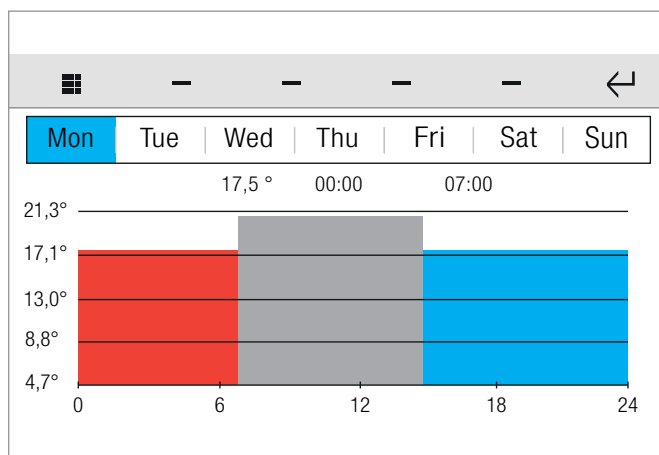


LOADS

From the loads section you can activate or deactivate the automatic shutdown function for the loads monitored by the home automation system.



Loads

► Press the icon to access the loads menu.

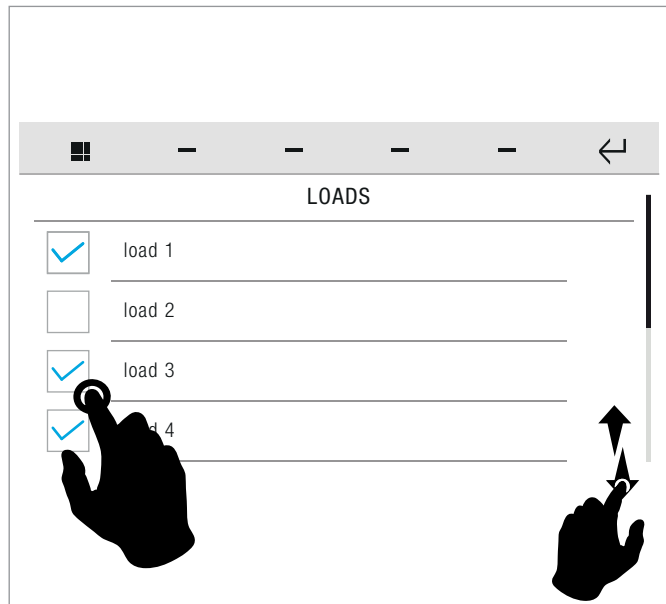

► Swipe your finger up or down to view all the available menu options.

- The system constantly monitors the power absorbed by the system.
- If the reading reaches or exceeds the preset level, the system will shut down active loads to reduce the overall power absorption.
- The function will then automatically re-activate the loads in accordance with changes in the system's power absorption level.

► Activate or deactivate the function on the desired loads by selecting/deselecting the corresponding checkbox.



» *AUTOMATIC SHUTDOWN FUNCTION ACTIVE*



» *AUTOMATIC SHUTDOWN FUNCTION INACTIVE*


CONSUMPTION

The consumption function allows you to monitor energy consumption through graphs and tables.



Consumptions

► Press the icon to access the consumption menu.

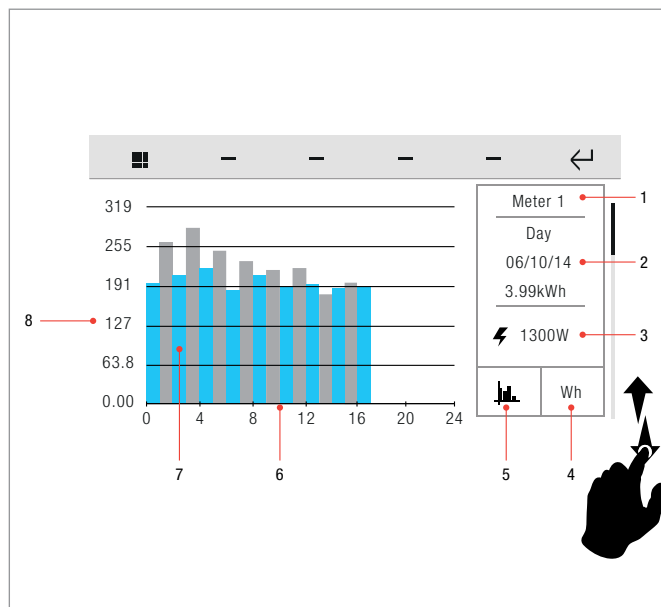

1. Selected meter
2. Information about the time period (day/month/year) and the relative energy consumption.
3. Real-time consumption
4. Change units of measurement/currency
5. Change between graph/table display mode
6. Time axis
7. Consumption axis
8. Consumption graph

► Swipe your finger up or down to view the available meters.



- If you set the maximum consumption thresholds, the consumption limits will appear:
- In "graph" mode: yellow line 75% of the consumption threshold; red line 100% of the consumption threshold.
- In "table" mode: the boxes are coloured to indicate the consumption level.

Period	kWh	
0-1	0.001	from 0% to 75%
1-2	475.0	from 75% to 100%
2-3	596.0	over 100%




► Zoom with 2 fingers to change the time period displayed. (historic / year / month / day).







► Swipe with your finger to the left or right to move through the selected time period.

CONSUMPTION/PRODUCTION COMPARISON

If the system includes production units (e.g. solar panels), it can provide a comparison between energy production and consumption.

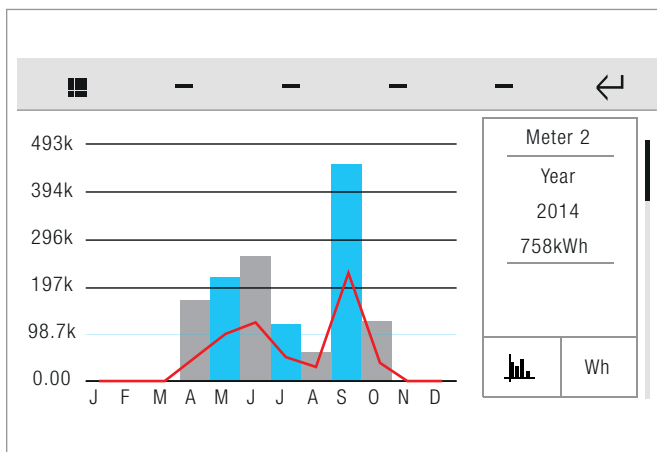


» The production value is represented by a red line over the consumption figures.

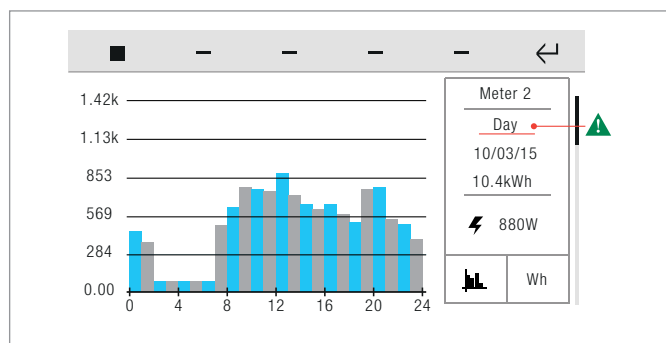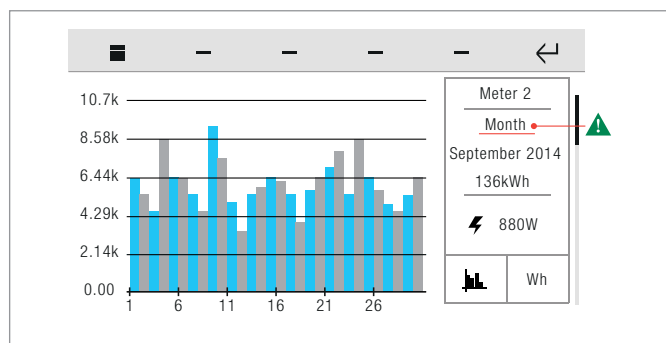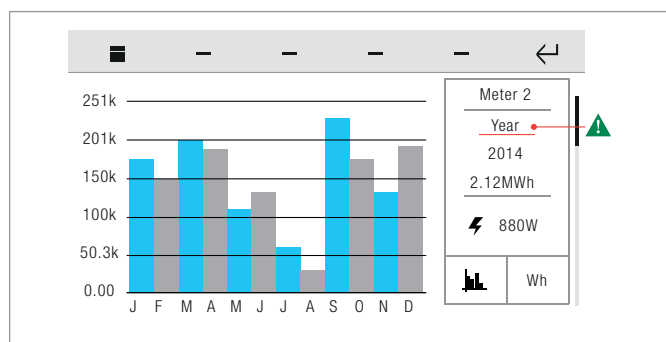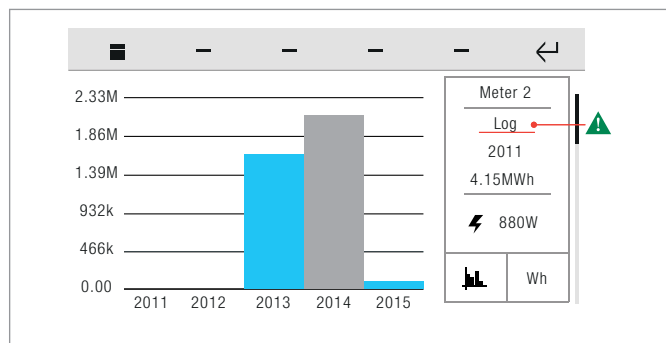

SCENARIOS

The scenarios function allows you to activate previously programmed scenarios (i.e. a set of conditions relative to the devices of the home automation system).



► Press the icon to access the scenarios menu.


► Press the icon of the desired scenario type to open the relative screen.




» The icon will change status if the scheduling of at least one scenario is activated.




» The icon will change status if the condition on at least one scenario is activated.

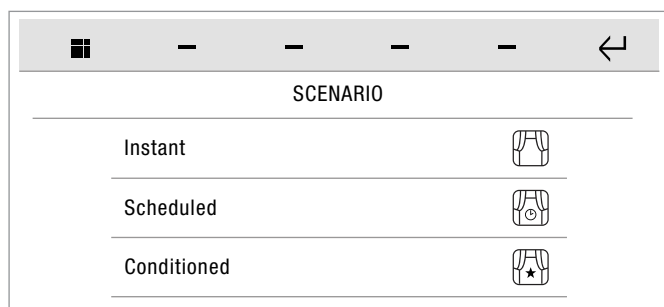


• To create / rename / change / delete scenarios, see "SETUP - Scenarios" on page 42.

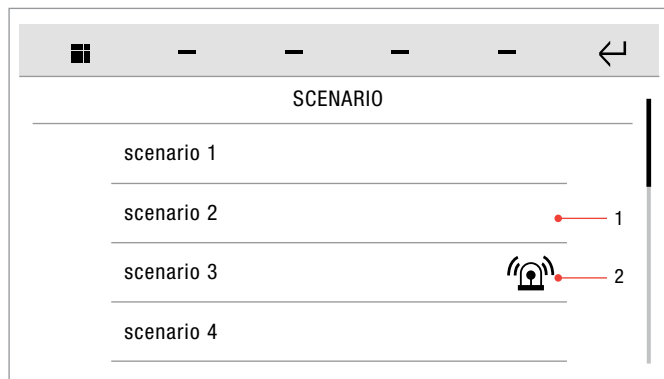

1. Immediate scenario
2. Immediate scenario with function linked to the anti-intrusion system

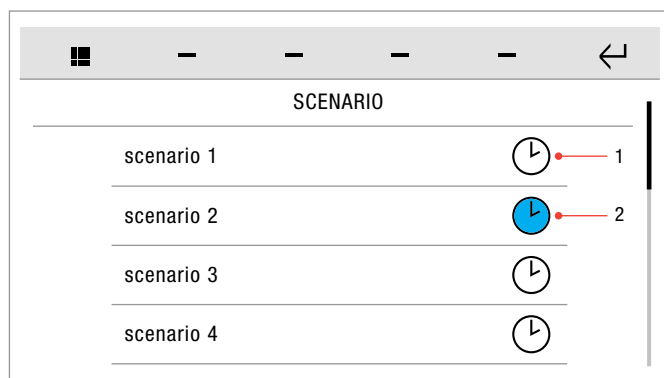


1. Scheduled scenario (SCHEDULING NOT ACTIVE)
2. Scheduled scenario (SCHEDULING ACTIVE)

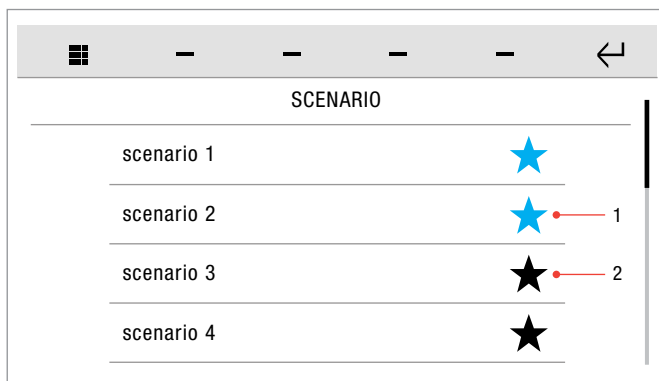

1. Conditioned scenario (CONDITION ACTIVE)
2. Conditioned scenario (CONDITION NOT ACTIVE)

ACTIVATE A SCENARIO


- Swipe your finger up or down to view all the available menu options.
- Press the icon of a non-active scenario to activate it.

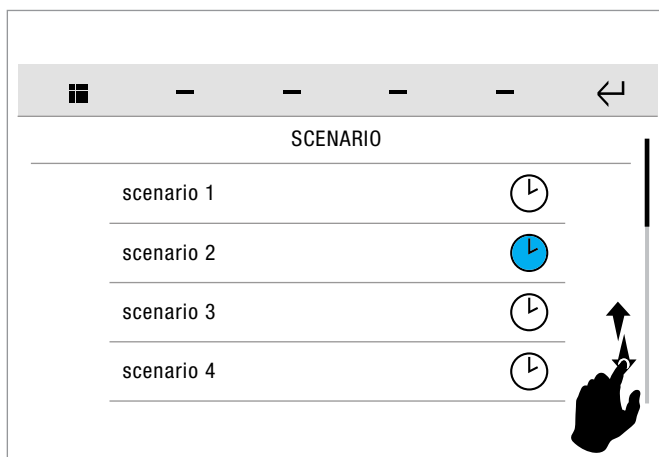

- Confirm activation.

DEACTIVATE A SCENARIO

- Swipe your finger up or down to view all the available menu options.
- Press the icon of an active scenario to deactivate it.

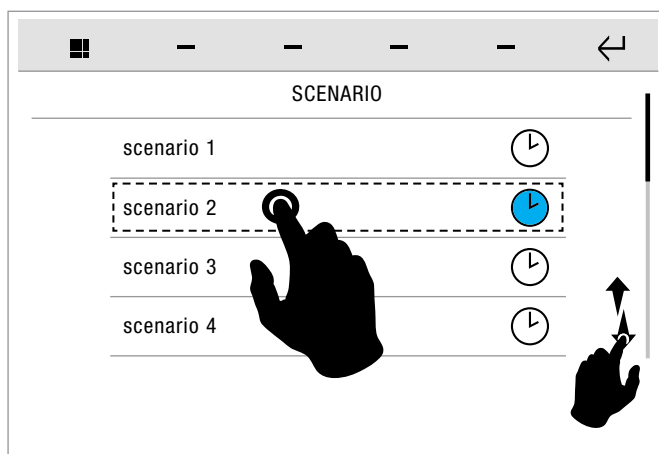


- Confirm deactivation.

AUDIO BROADCAST

The audio broadcast function allows you to play music and audio files in the various rooms connected to the home automation manager.




► Press the icon to access the function.

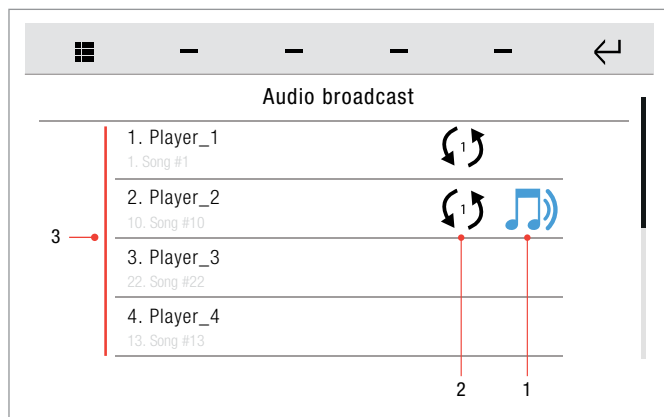

1. Player status icon*
2. Sync icon: number shown (e.g. 1) = master player
3. List of available players

* PLAYER STATUS TABLE	
	Player OFF
	Player ON but not playing
	Player ON and playing

► Long press on a player to open the advanced info panel.

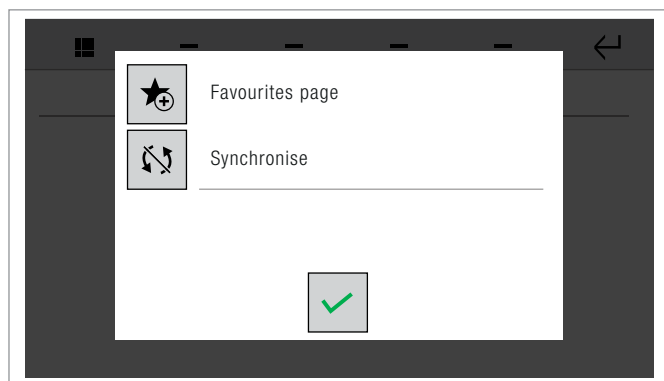

► Press the icon to add the player to the favourites page.



► Press the icon to synchronise the player with another player.



- Press the icon until the id of the desired synchronisation master player is shown, then confirm.




Player NOT SYNCHRONISED



Player SYNCHRONISED with the master player indicated by the number N

AUDIO BROADCAST - Player screen

► Short press on a player to open the play panel.

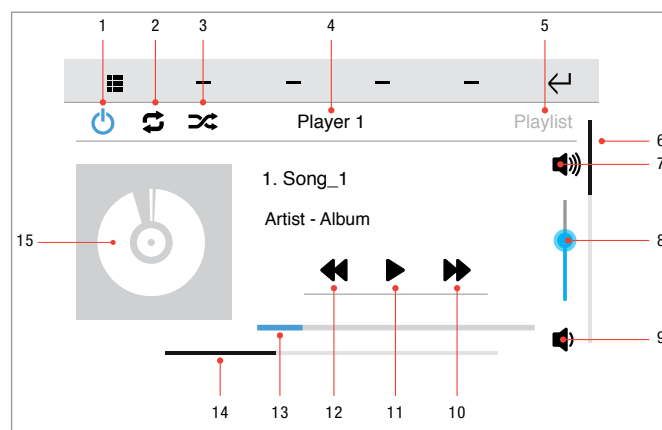

1. ON - / OFF icon -
2. Repeat icon (see table R)
3. Shuffle icon (see table)
4. Selected player
5. Playlist icon
6. Scroll to view all the available players
7. Volume + icon
8. Volume level indicator
9. Volume - icon
10. Next track icon
11. Play icon
12. Previous track icon
13. Track progress bar
14. Scroll to view (Player - Playlist - Library)
15. Album artwork



► Press the icon to activate the REPEAT function (each touch activates a *different status** of the function).

R TABLE - REPEAT ICON STATUS*	
	Repeat IDLE (no repeat)
	Repeat playlist (repeats current playlist)
	Repeat song (repeats an individual song)



► Press the icon to activate the SHUFFLE function (each touch activates a *different status** of the function).

S TABLE - SHUFFLE ICON STATUS	
	Standard order (as per playlist)
	Random shuffle by song
	Random shuffle by album



► Press the play icon to start playback.




» The icon changes status.
► Press the pause icon to pause playback.

AUDIO BROADCAST - Playlist screen



- Scroll to the left to display the PLAYLIST screen

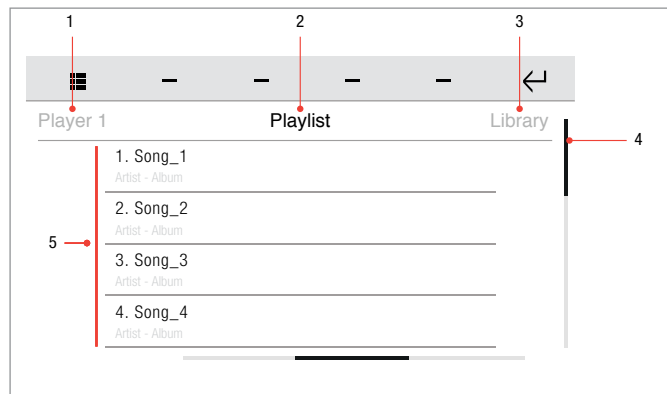

1. Player page icon
2. Selected playlist
3. Library page icon
4. Scroll to view all the available songs
5. Songs contained in the playlist

- Short press on a song to start playback.




» The active playback icon will appear next to the song being played.

AUDIO BROADCAST - Library screen



- Scroll to the left to display the LIBRARY screen

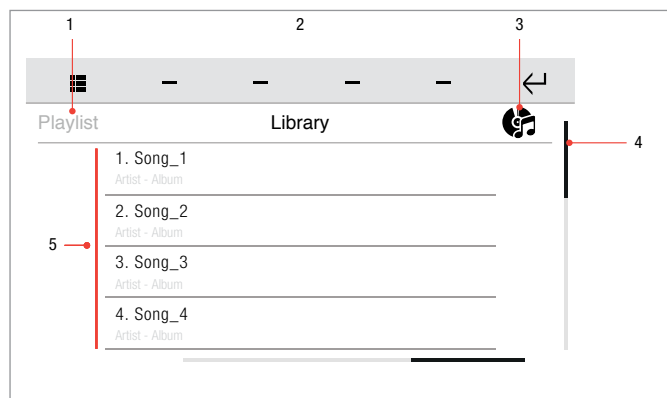

1. Playlist page icon
2. Library page (current page)
3. Playlist / album mode icon
4. Scroll to view all the available songs
5. Songs contained in the library

R TABLE - REPEAT ICON STATUS*	
	PLAYLIST mode the library displays all the playlists available
	ALBUM mode the library displays all the albums available




- Press the icon to toggle between PLAYLIST and ALBUM library mode.




AUDIO BROADCAST - Scenarios

You can enter up to 10 audio broadcast actions in a home automation scenario.


- Select the desired player from those available.

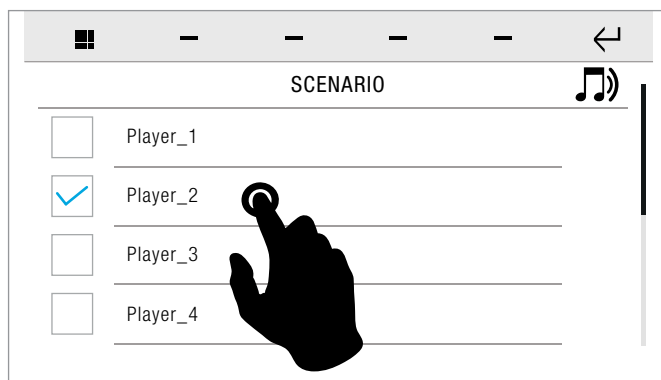

- Select the desired actions from those available.

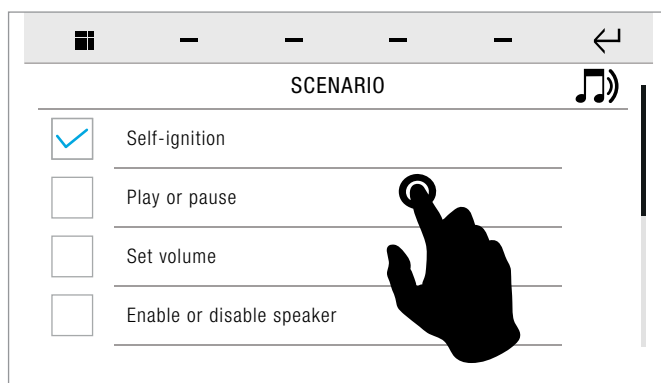

» On selecting an action, an advanced panel opens containing options related to the action selected.


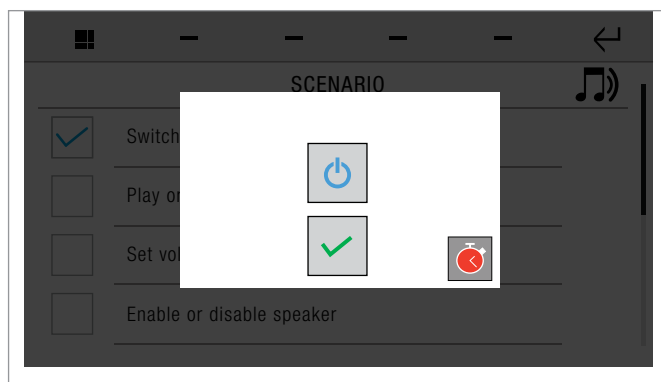


- Adjust the setting, then confirm.



- On completion of the operation, return to the scenario screen.


SETUP MENU DESCRIPTION

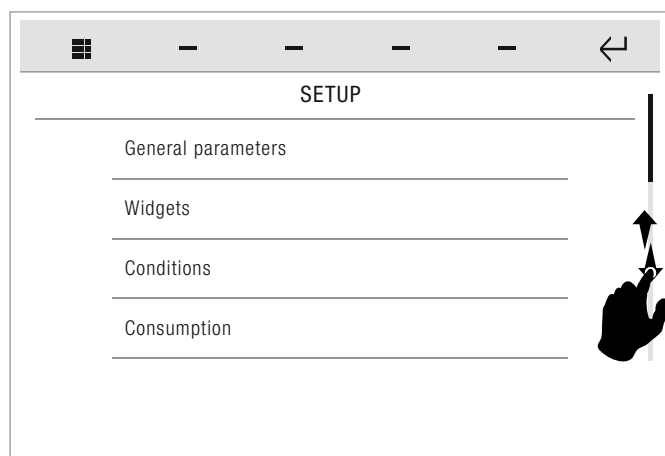

- Swipe your finger up or down to view all the available menu options.
- To access the desired sub-menu, press the corresponding icon.
- » *The available options are: General parameters / Widgets / Conditions / Consumption / Anti-intrusion / Scenarios / Key / Audio broadcast / Protection / Configure event messages / Advanced.*

SETUP - General parameters

SETUP-General parameters

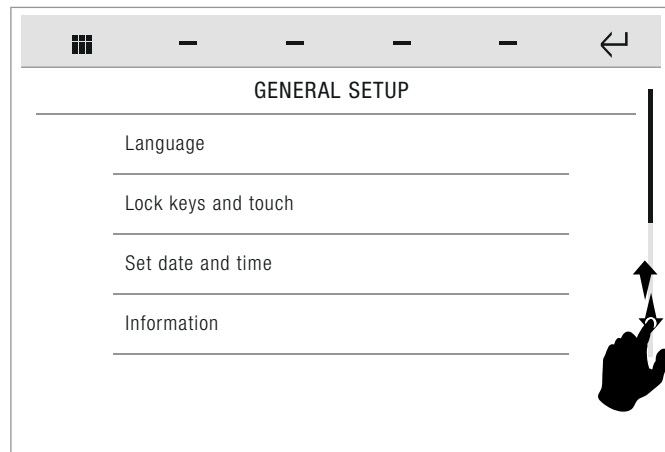


- Swipe your finger up or down to view all the available menu options.
- To access the desired sub-menu, press the corresponding icon.
- » *The available options are: Language / Lock keys and touch / Set date and time / About.*


General parameters-Language

SETUP-General parameters-Language

You can change the interface language.

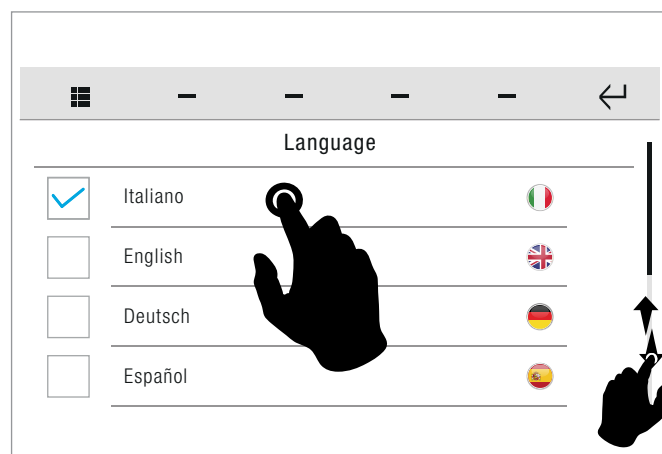

- Select the desired language by pressing the relative icon, then confirm the selection.

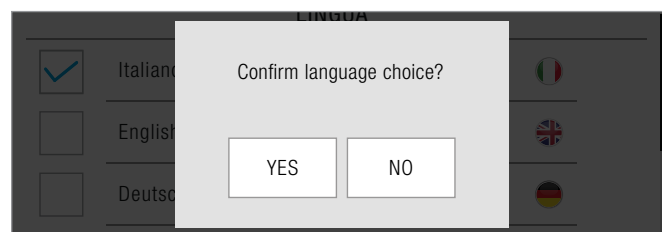


- If the system includes a Vedo control panel, the language is automatically set to that used by the control panel itself, regardless of the language selected.

General parameters-Lock keypad and touch screen

SETUP-General parameters-Lock keypad and touch screen

The function can be used to lock the device touch screen for 60 seconds, for cleaning purposes.

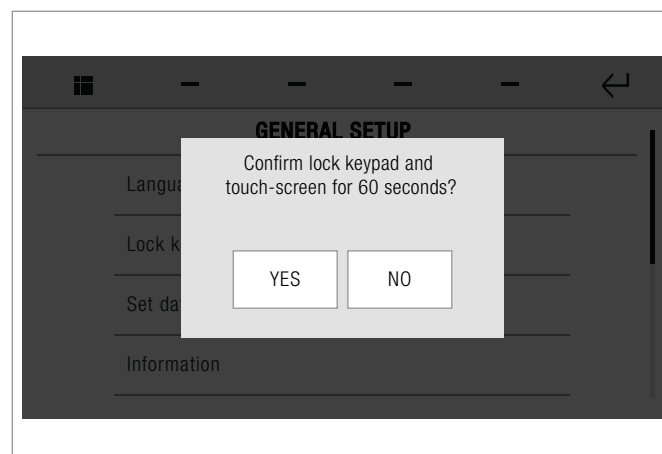


- Confirm the operation.
- » *After 60 seconds, the device is unlocked automatically.*

General parameters-Set date and time



SETUP-General parameters-Set date and time

This function allows you to set the time and date of the device.

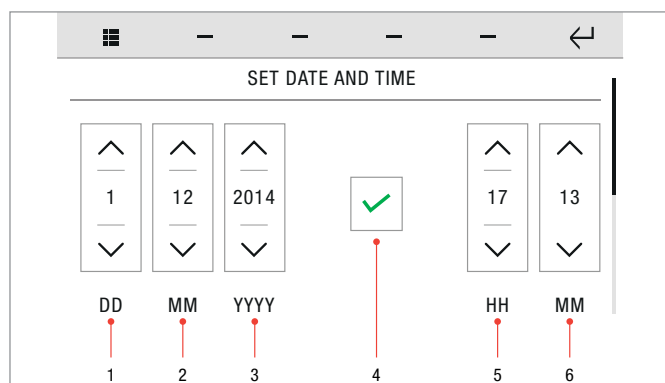

1. Day setting
2. Month setting
3. Year setting
4. Confirm icon
5. Hours setting
6. Minutes setting



✓ If the system includes an alarm control panel, then setting the time becomes a function of the alarm system; this requires the alarm password and any changes made will be applied to the control panel.

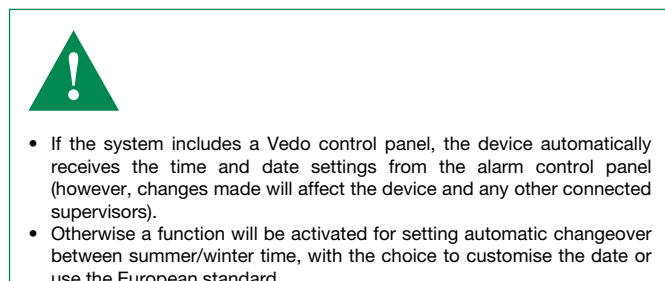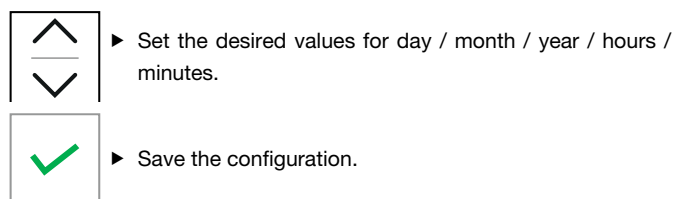

General parameters-Information

SETUP-General parameters-Information


This menu provides technical information about the device (e.g. type of device, versions, addresses, etc.).

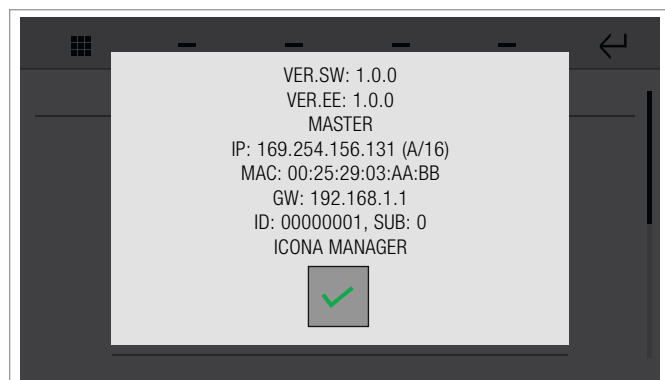



General parameters-Volume control

SETUP-General parameters-Volume control

The menu allows you to manage and control the audio volumes associated with the various functions of the device.

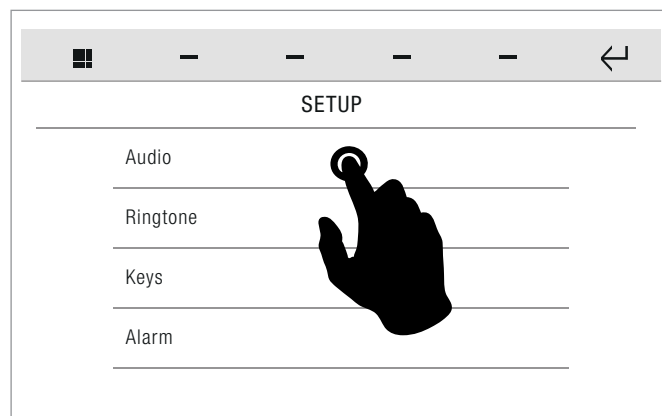


► Select the desired function.

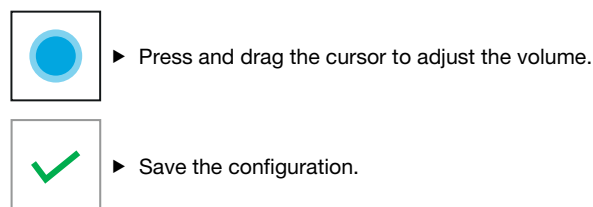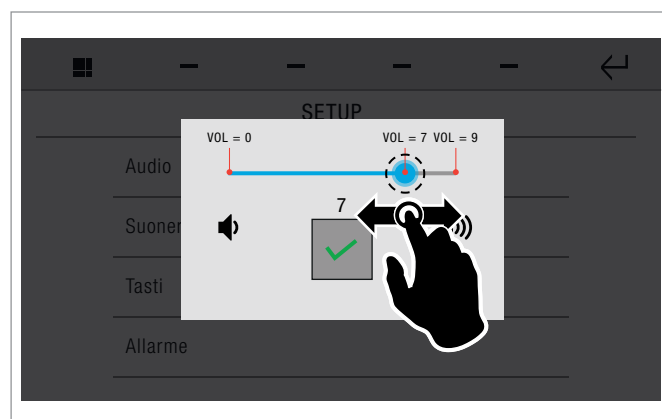


General parameters-Set ringtones

SETUP-General parameters-Set ringtones

The menu allows you to manage the ringtones and control the audio volumes associated with the call functions of the device.

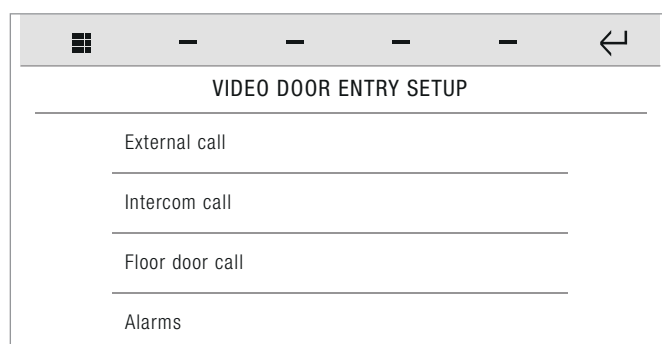

► Select the desired function.

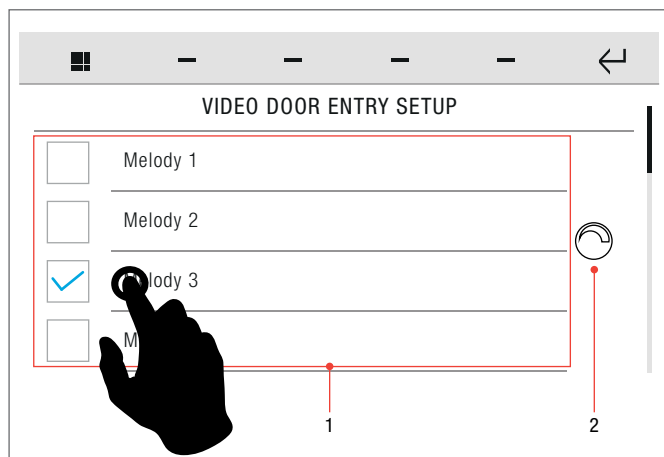

- ▶ Press the name of the melody hear a preview.
- ▶ Select/deselect the desired option by pressing the corresponding box.



- ▶ Press the icon to open the volume control panel.



- ▶ Press and drag the cursor to adjust the volume (as described in "General parameters-Volume control" on page 36)




- ▶ Save the configuration.

General parameters-Soft touch keys

SETUP menu-General parameters-Soft touch keys


This function allows you to decide how to activate the device's soft touch keys (short press/swipe).

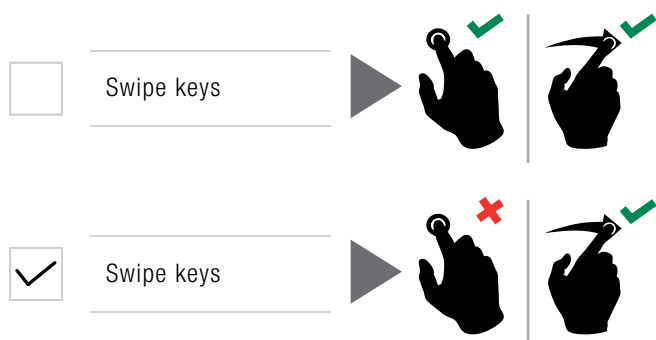

SETUP-Widgets

SETUP-Widgets

The menu allows you to select which widgets are to be shown on the HOME page.

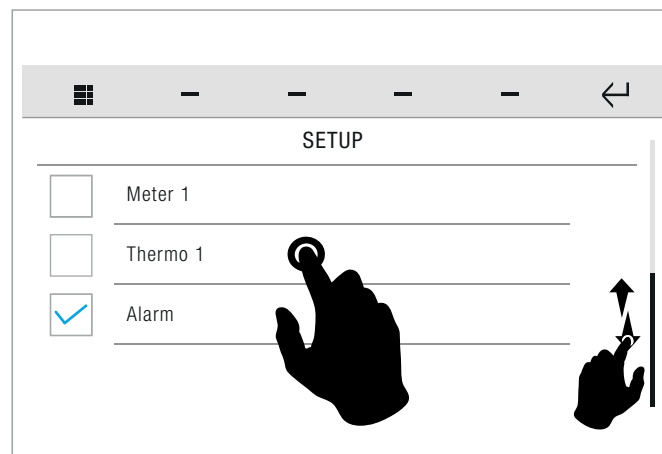


- ▶ Swipe your finger up or down to view all the available menu options.
- ▶ Select/deselect the desired option by pressing the corresponding box.



- ▶ Option DESELECTED



- ▶ Option SELECTED

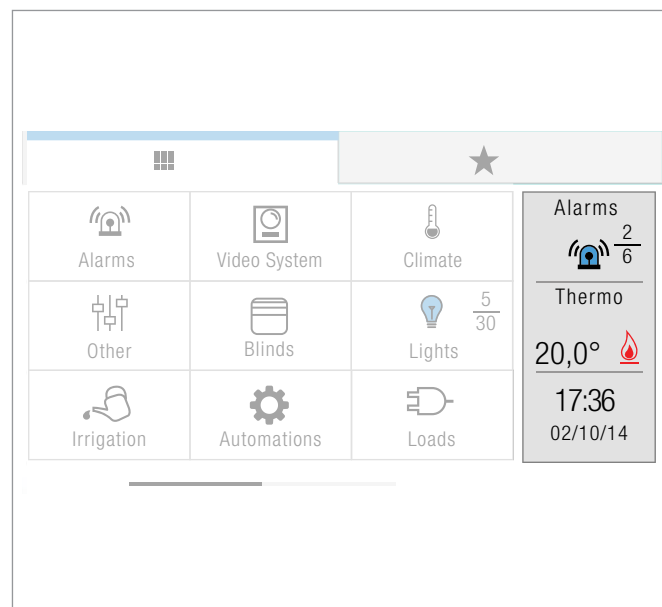


- MAX number of widgets that can be selected simultaneously = 2

SETUP-Conditions

SETUP-Conditions

You can activate/deactivate certain previously programmed conditions.

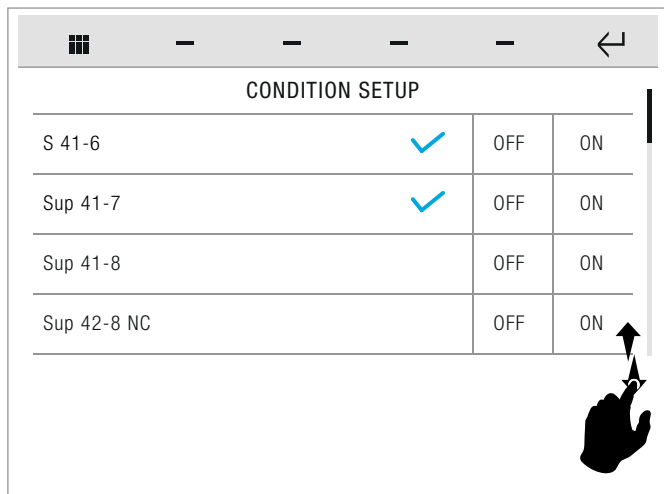

- Swipe your finger up or down to view all the available menu options.



- Press the icon to ACTIVATE the corresponding function



» The condition field is highlighted.




- Press the icon to DEACTIVATE the corresponding function

SETUP-Consumption

SETUP-Consumption

The consumption menu allows you to manage various options related to energy consumption.

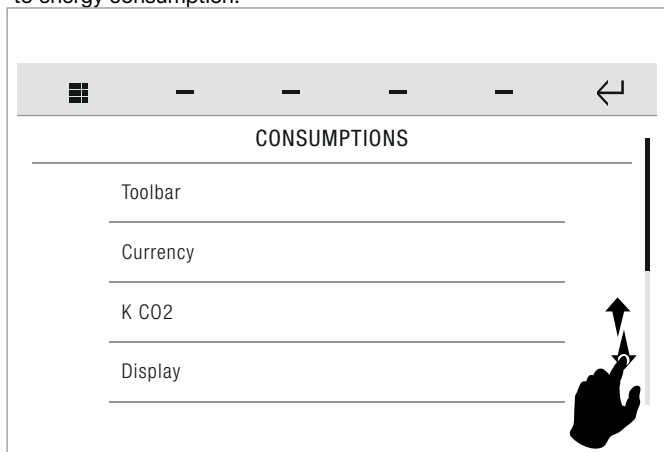


- Swipe your finger up or down to view all the available menu options.
- Press the name of the desired function to open the relative menu.
- » The available options are: Toolbar / Currency / K CO2 / Display / Tariffs / Limits / Reset / Settings.

Consumption-Toolbar

SETUP-Consumption-Toolbar

You can select which meter to display - choosing from those available - in the FAVOURITES BAR toolbar of the device. See "FAVOURITES" on page 7.

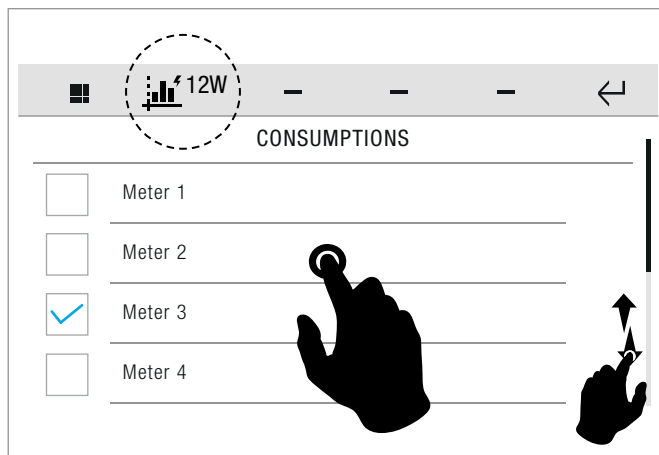

- Swipe your finger up or down to view all the available menu options.
- Select/deselect the desired option by pressing the corresponding box.



- Option DESELECTED



- Option SELECTED




- Only one meter may be selected at a time!

Consumption-Currency

SETUP-Consumption-Currency

You can select the currency to use for the display of consumption costs.

- √ To display the consumption figures you need to set the tariffs (see SETUP / CONSUMPTION / TARIFFS)

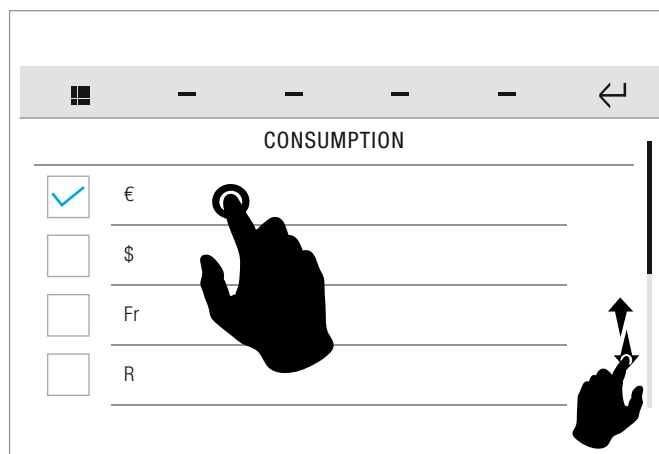

- Swipe your finger up or down to view all the available menu options.
- Select/deselect the desired option by pressing the corresponding box.




► Option DESELECTED



► Option SELECTED

✓ By selecting the CUSTOMISED option, you can assign a customised name to the currency consisting of 3 letters/digits.

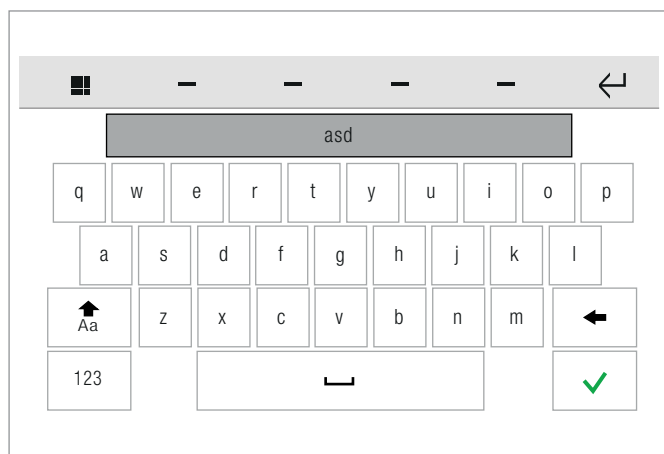


► Enter the desired name, then confirm.

Consumption-KCO2

SETUP-Consumption-KCO2

If the system includes energy production systems (such as solar panels), you can enter the constant CO² to monitor the quantity of CO² not emitted into the atmosphere.

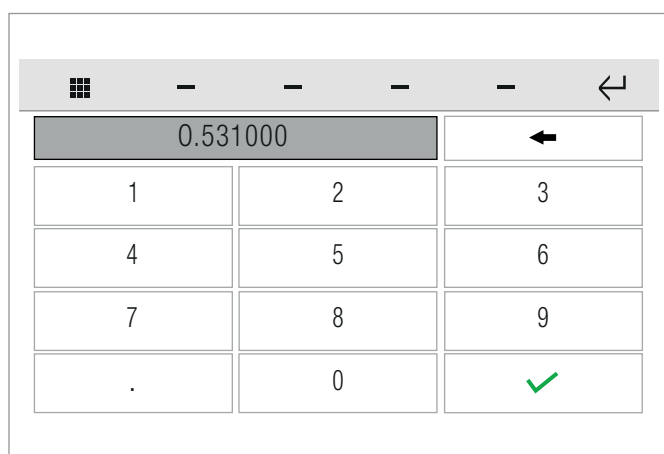


► Enter the desired value for KCO², then confirm.

✓ Consult your system installer to determine the KCO² value.

Consumption-Display

SETUP-Consumption-Display

You can choose which of the available meters to display.

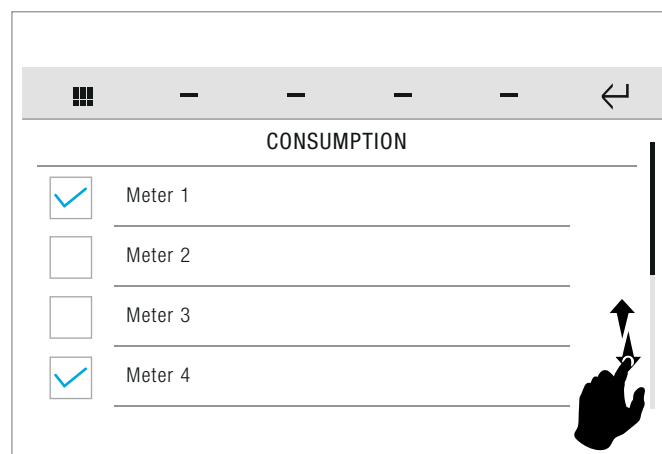

- Swipe your finger up or down to view all the available menu options.



► Select the desired meter by touching and ticking the relative icon.



► The icon changes status.




- More than one meter may be selected at a time!

Consumption-Tariffs

SETUP-Consumption-Tariffs


You can the meter tariffs according to the time band.

» The information will then be used to construct the consumption graphs in the Consumption menu.

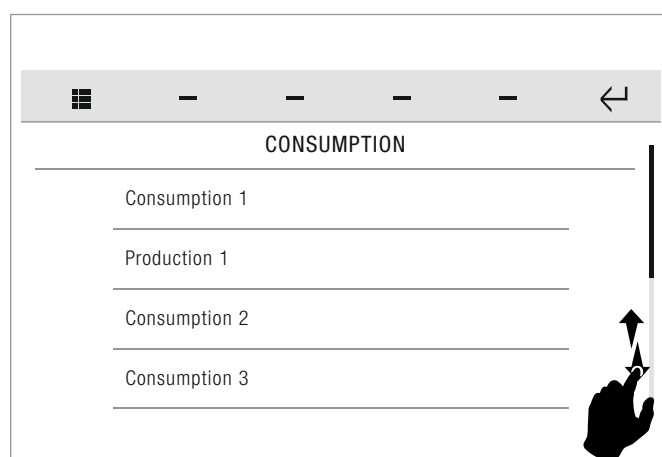


- Swipe your finger up or down to view all the available menu options.


- Select the desired meter.

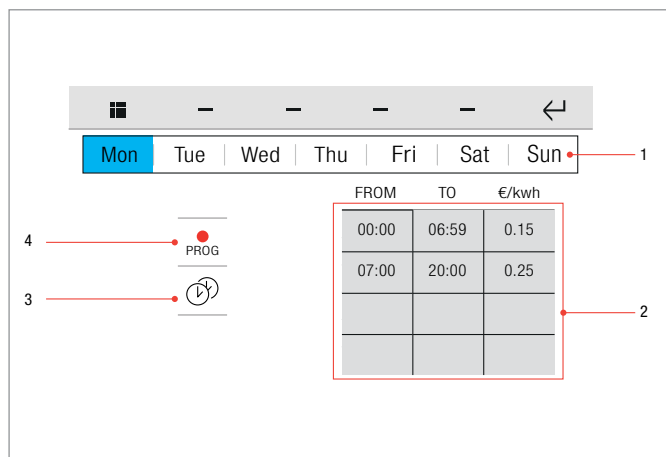

1. Days of the week bar
2. Times/Tariffs table
3. Copy program icon
4. Programming mode icon



► Press the programming icon to enter PROGRAMMINGMODE

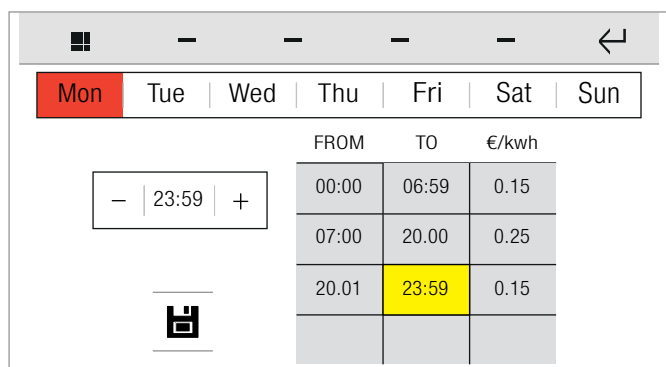

You can select the day/s to be modified by pressing the corresponding icon on the top bar.

» The selected day/s will be highlighted in red.



► Press to add a programme to the list



► Set the desired time/status.



► Press to confirm.

» The value being modified is highlighted in yellow.



► Press to DELETE a programme.




► Press the icon to return to the previous screen.



- Daily tariff programming must apply to the whole 24-hour cycle! Any hours not programmed by the user will be set by the system automatically.


► Set the desired unit price.

- EXAMPLE: set the cost of 1 kWh to a value of 53.10 cents € per unit.
- 53.10 cents/Euro = 0.531000 €
- enter the value 0.531000 in the screen

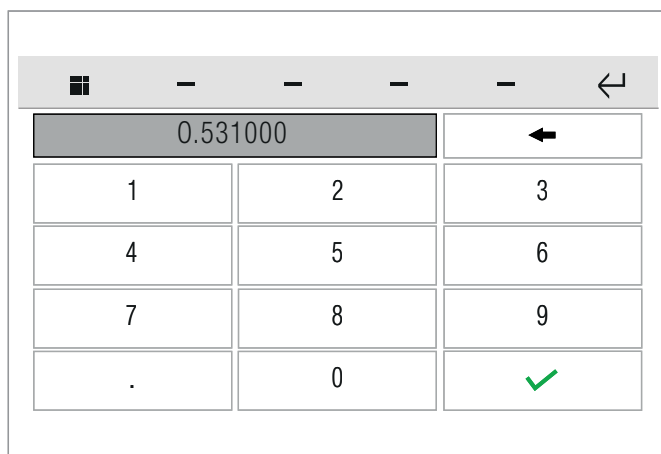

► Enter the desired value, then confirm.

Once you have returned to the main page, you can copy the programmed activity from one day to another:

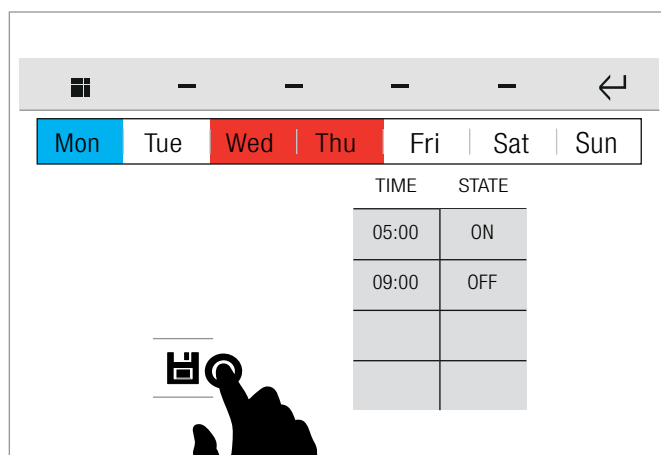

► Select the day of the week to copied in the band at the top.

» The source day is highlighted in yellow.



► Press the icon to copy the programme, then select the destination days to which the programme is to be copied.

» The selected destination days are highlighted in red.




► Press to confirm.

Consumption-Limits

SETUP-Consumption-Limits

You can set the maximum consumption limits by Hour / Day / Month / Year in order to obtain an immediate visual indication in the consumption graph and table if the set limit for the period is exceeded.

- » In "graph" mode: yellow line 75% of the set limit; red line 100% of the set limit.
- » In "table" mode, the boxes are coloured using the same criteria to indicate the consumption level.

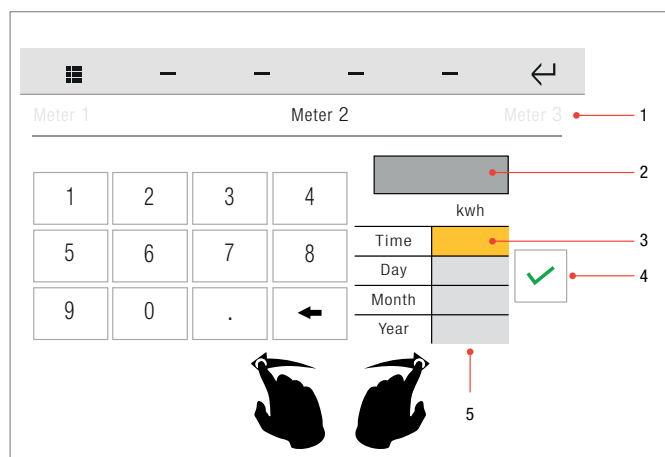

1. Available meters / selected meter
2. Value entered
3. Value being edited
4. Confirm icon
5. Set values column

- Swipe your finger to the left or right to view the available meters.
- Select the option you wish to edit and enter the value.




- Confirm the operation.

Consumption-Reset (meters)

SETUP-Consumption-Reset

The function resets all the meters.

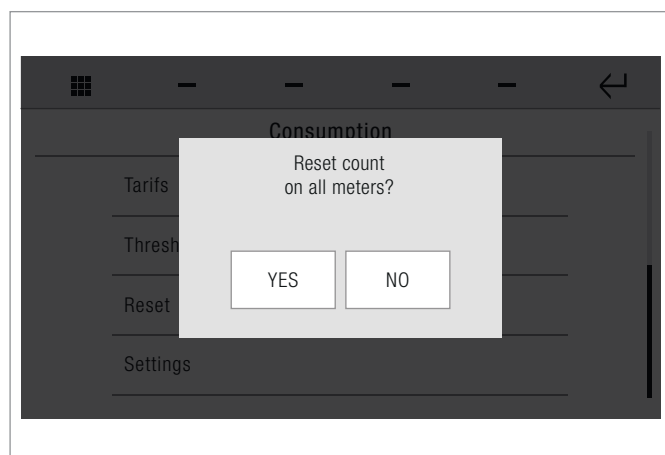


- Confirm the reset.

Consumption-Settings


SETUP-Consumption-Settings

This function allows you to change certain characteristics of the meters installed.

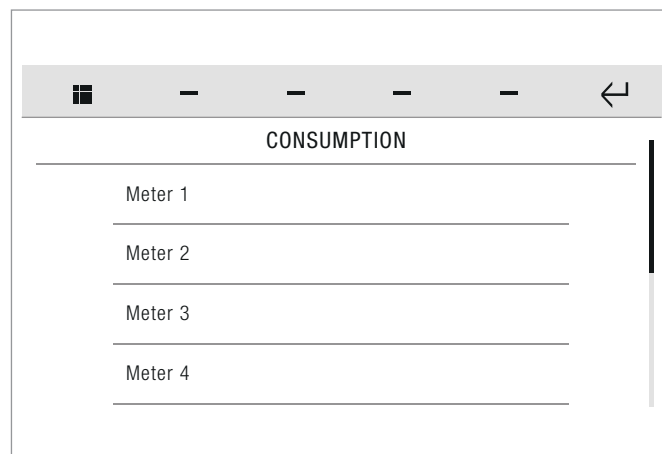

- Select the desired meter from those available.


» A panel opens containing the meter characteristics that can be changed.

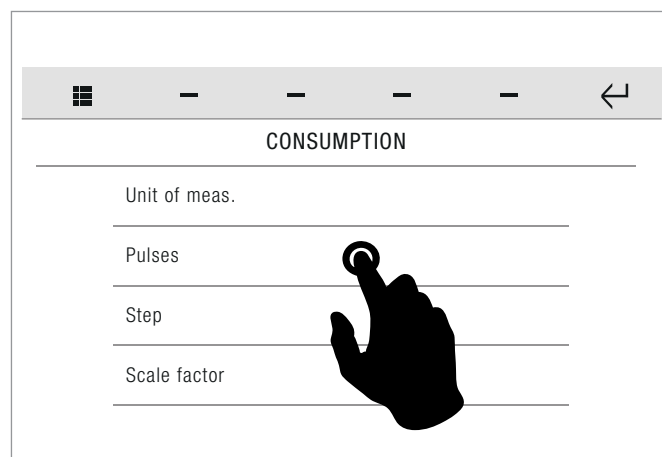

- Select the characteristic to be changed:

Settings-Units of measurement

SETUP-Consumption-Settings-Units of measurement

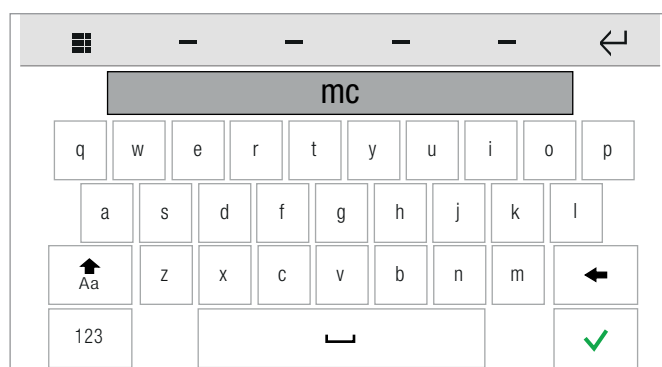

- Enter the desired value, then confirm.

Settings-Pulses

SETUP-Consumption-Settings-Pulses

- ✓ EXAMPLE the pulse counter measures 1 mc every 10 pulses; set the PULSES and INCREMENT values to respectively 10 and 1.



- Enter the desired value, then confirm.

Settings-Increment

SETUP-Consumption-Settings-Increment



- Enter the desired value, then confirm.

Settings-Scale factor

SETUP-Consumption-Settings-Scale factor

- This parameter serves to setup conversion of the units of measurement displayed. For example, your heating system meters use calories but you want to display the values in Joules.



- Enter the desired value, then confirm.

SETUP - Anti-intrusion

SETUP-Anti-intrusion

- Enter the alarm password to access the area.



- See "ALARM SETTINGS" on page 13.

SETUP - Scenarios

SETUP-Scenarios

From the menu you can create, rename, edit or delete one or more scenarios in one of the three available categories.

- Press the desired function to open the specific menu.

Immediate scenarios

SETUP-Immediate scenarios

1. New scenario icon
2. List of available scenarios
3. Alarm scenario icon

Scenario activation

- Press the scenario you wish to activate.



- Confirm the selection.

Creating new scenarios




- Press the icon to create a new scenario.



- Assign a name to the scenario, then confirm.

» The screen shows the functions available for insertion in the scenario.

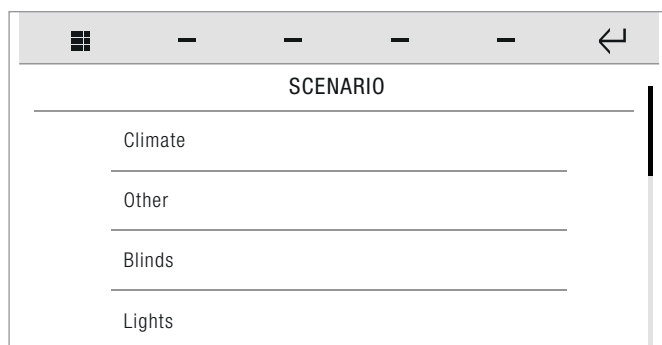


» The functions that can be associated with a scenario are: Climate / Other / Blinds / Lights / Irrigation / Automations / Door entry monitors / Notifications / Alerts / Audio broadcast*.

- Press the icon of the desired function to associate it with the scenario

» The panel relative to the selected function opens, from which you can choose which specific characteristics of the function to activate (e.g. zones, schedules, status...)


» For more information on inserting audio broadcast actions see "AUDIO BROADCAST - Scenarios" on page 34

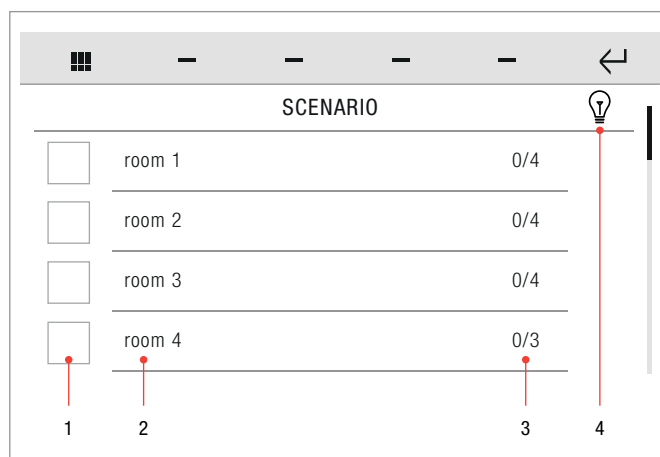

1. ENTIRE ROOM selection icon
2. List of associable functions available
3. Functions advanced info column
4. Selected function identification icon



- Press to select the entire room.

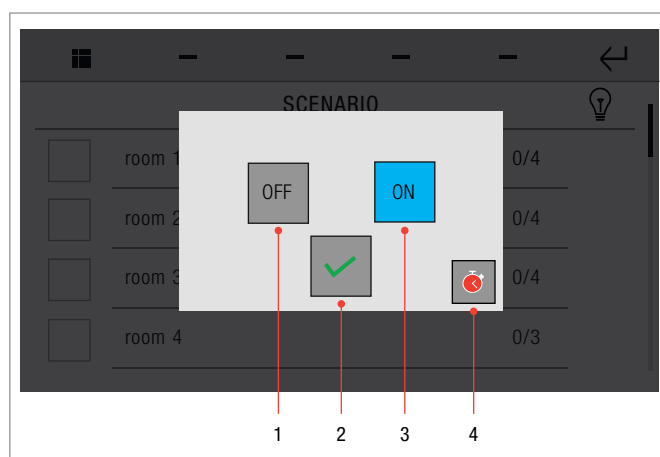

1. Off icon
2. Confirm icon
3. On icon
4. Delay scenario icon



- Select the desired status and press the icon to confirm.





- You can select multiple functions to add to the scenario!
- In the case of the BLINDS, the ON/OFF icons are replaced respectively by the icons ^ / v.
- In the case of RGB and DIMMER LIGHTS, the colour adjustment and brightness control icons are also shown.
- In the case of the ALARM function, it is necessary to ENTER THE ALARM CODE in order to be able to activate the desired alarm function.
- For a detailed description of each function (Alarm / Climate / Other / Blinds / Lights / Irrigation / Automations) see the specific chapters in this manual.



- When you have finished entering the desired functions, press the icon to exit.

» A confirmation screen opens.

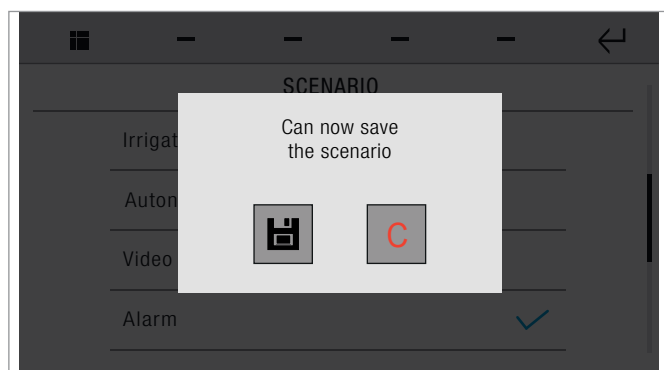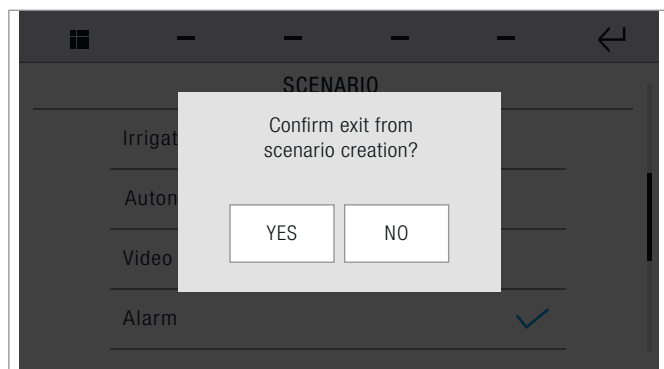


► Press to confirm.

Delay a scenario

By setting a time delay, you can delay the execution of the commands in the scenario. For example, you can switch on the outdoor lights along a driveway in sequence, one very 5 seconds.



► From the scenario function insertion window, press the icon and select the desired time delay.

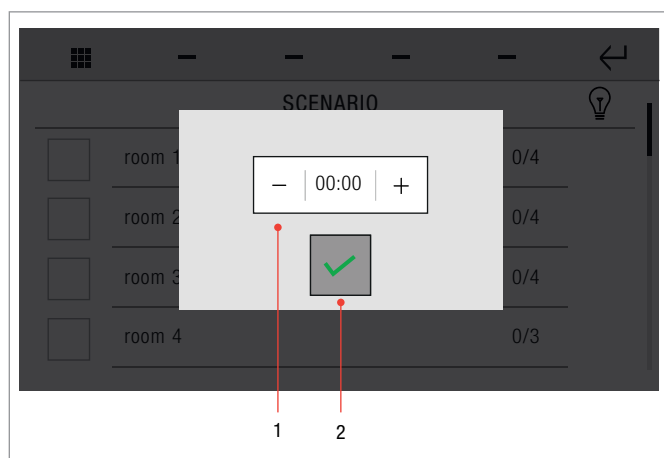


1. Time setting panel
2. Confirm icon




» The icon changes status.

Advanced scenario functions

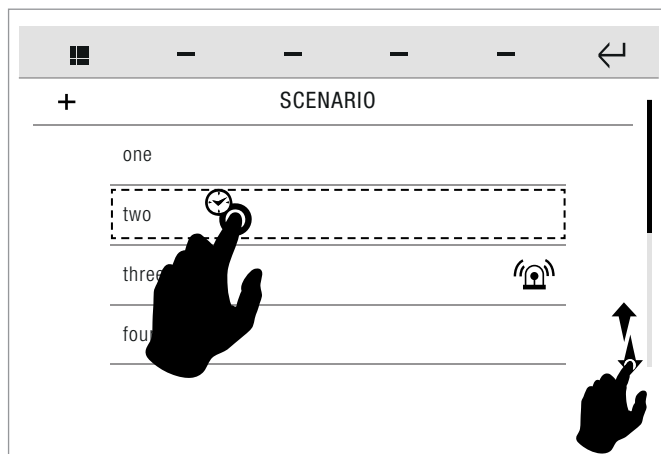

► Long press on a scenario to open the advanced functions menu.

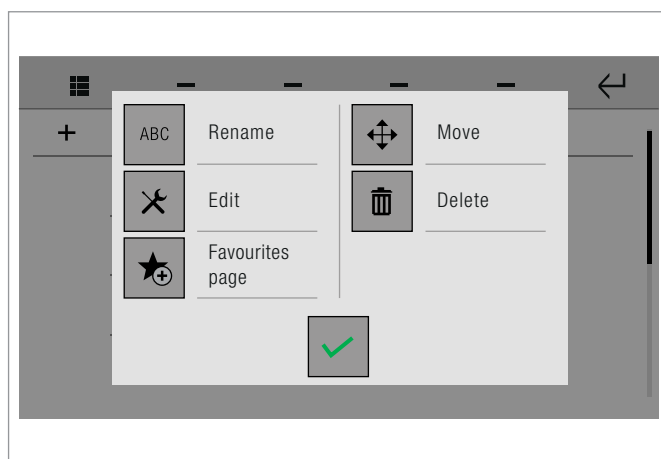

Rename a scenario



► Press the icon to rename the scenario.



► Name the scenario and confirm by pressing the icon.




► When you have finished entering the desired functions, press the icon to exit.

Move a scenario



- Press the icon to move the scenario (from the position in which it appears in the list of available scenarios).

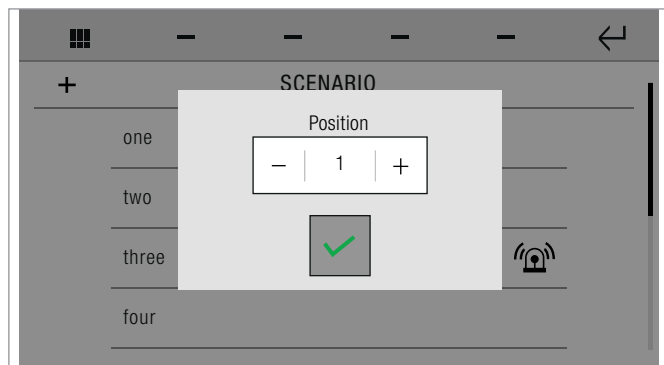


- Define the desired position and confirm by pressing the icon, then exit.

Modify a scenario



- Press the icon to modify the functions associated with the selected scenario.

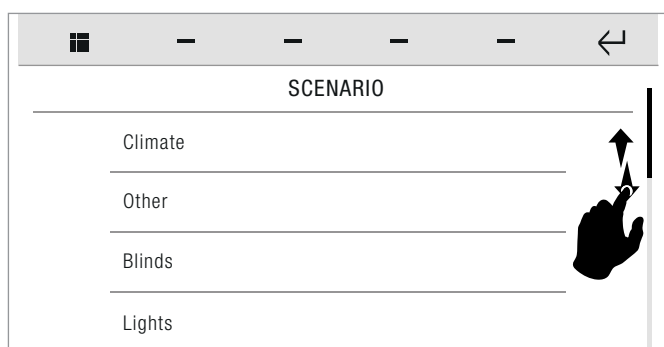


- Press the desired function to open the specific menu.

Delete a scenario



- Press the icon to delete a previously created scenario.

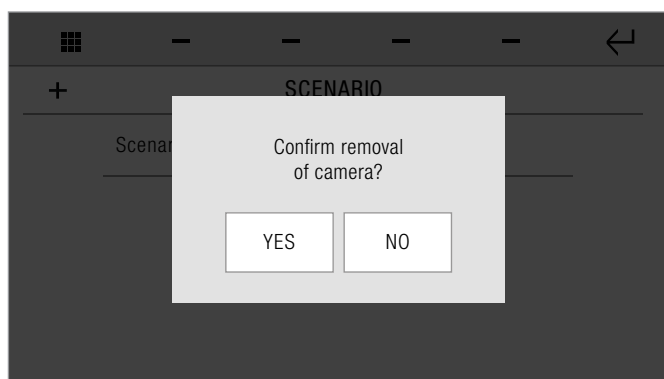


- Press to confirm.

Favourites page




- Press the icon to add the scenario to the favourites.

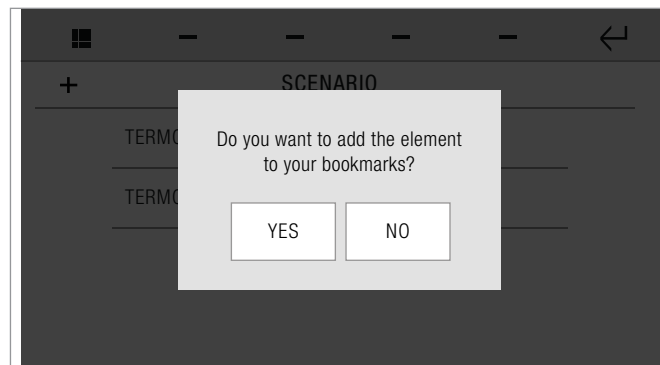

- Confirm the operation.

Scheduled scenarios

SETUP-Scheduled scenarios

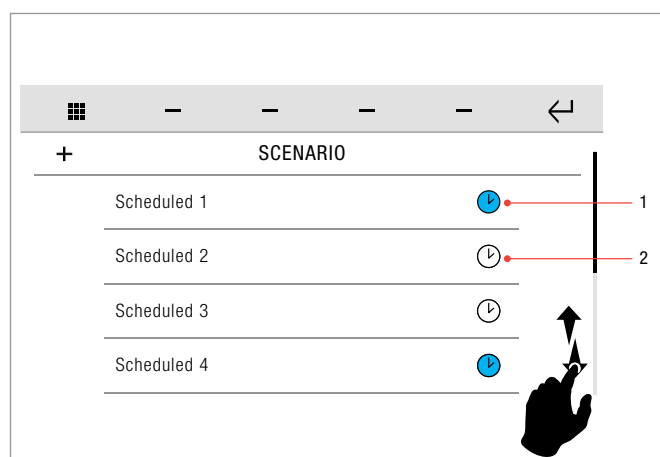

1. Scheduled scenario deactivated
2. Conditioned scenario activated

- Press on a specific scenario to ACTIVATE / DEACTIVATE the scheduled scenario.

Creating a new scheduled scenario

- See "Creating new scenarios" on page 43



- You need to add a schedule to the scenario using the same as procedure as "FUNCTION SCHEDULING" on page 20

Advanced scheduled scenario functions


- See "Advanced scenario functions" on page 44



- The option "Favourites page" is replaced by the option "Scheduling", which allows you modify the scheduling of individual scheduled scenarios.

Conditioned scenarios

SETUP-Scenarios-Conditioned

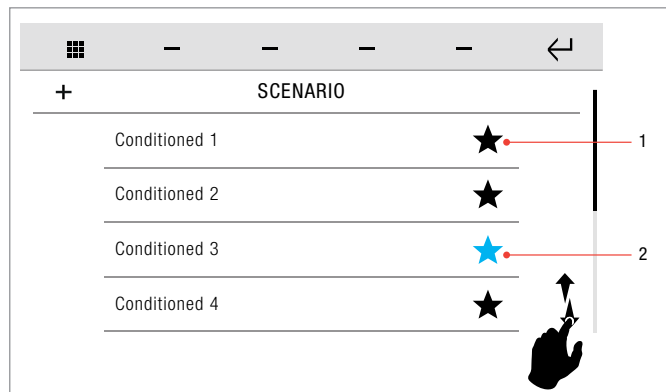


1. Conditioned scenario deactivated
2. Conditioned scenario activated

Creating a new conditioned scenario



- You need to activate at least one of the available conditions in the categories HOME AUTOMATION / ALARM / DOOR ENTRY MONITORS.

- HOME AUTOMATION: allows execution of a scenario when an input in the home automation system opens or closes.
- ALARM: allows execution of a scenario when one or more sensors of the anti-intrusion system remain/s in a certain condition (open or closed) for the time period set by the user.
- DOOR ENTRY MONITORS: allows execution of a scenario on receipt of an incoming EXTERNAL, INTERCOM or FLOOR DOOR call or ALARM.

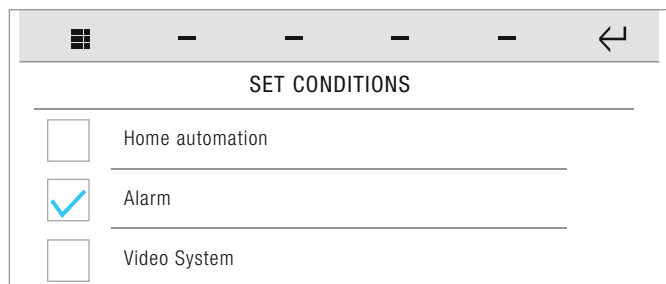

- Press the desired category to open the dedicated sub-menu.




- The following characteristics apply only to the conditions in the ALARM category.

And

The AND/OR function determines whether a number of conditions must be met **SIMULTANEOUSLY** or if only **ONE** of the selected conditions need to be satisfied for the scenario to be activated.

Or

- Press the icon to toggle between AND and OR mode.

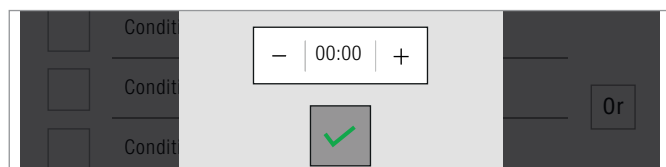

- You can set an expiry time for the conditioned scenario (activated by the condition/s or by the alarm) after which the scenario will be deactivated again.

Advanced conditioned scenario functions

- See "Advanced scenario functions" on page 44



- The option "Favourites page" is replaced by the option "Conditions", which allows you to modify the conditions associated with individual conditioned scenarios.


SETUP-Key

SETUP-Key

The menu allows you to manage the proximity keys and their associated functions.



- If there are already keys registered with the VEDO control panel, the system requires you to enter the **ALARM PASSWORD!**

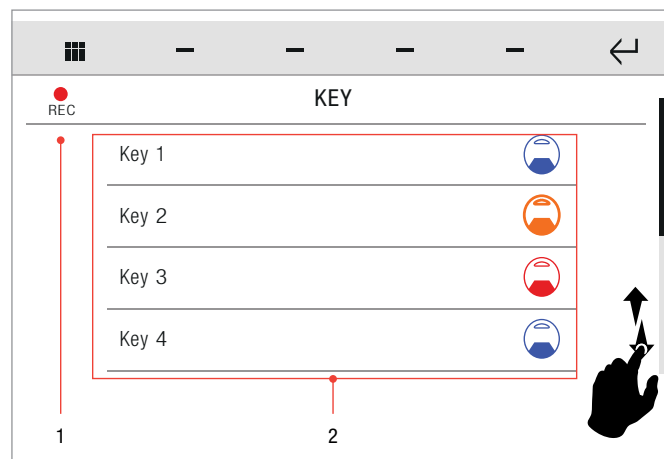


1. New key registration icon
2. List of registered keys

Register a new key




- Press the registration icon then pass the new key next to the proximity sensor of the device.

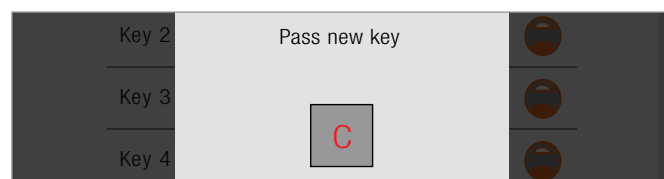


» The system confirms.

Advanced key functions

SETUP-Key

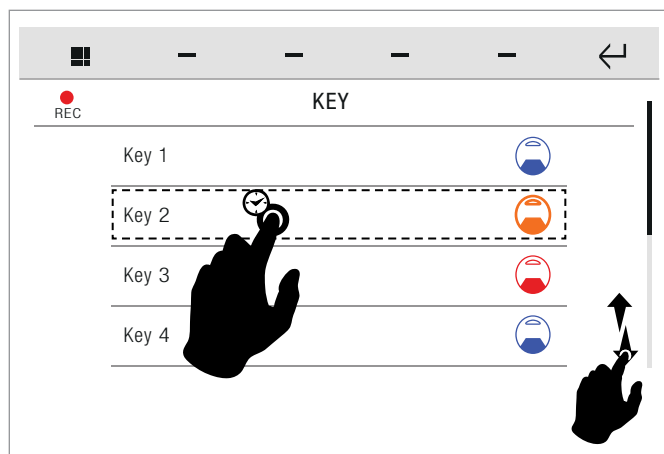

- Long press on a key to open the advanced functions menu.

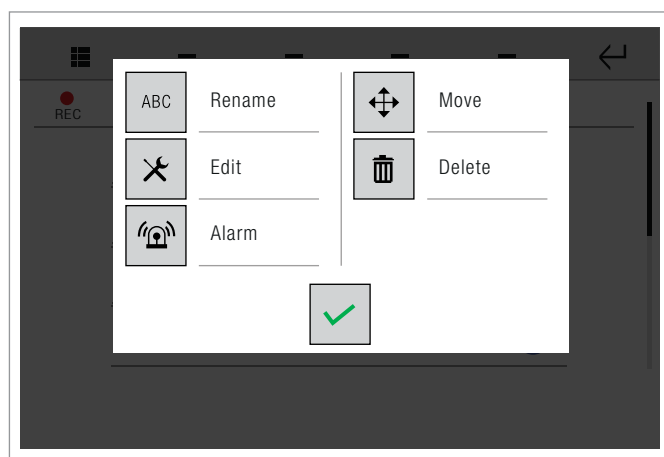

Rename a key

SETUP-Key-Advanced functions-Rename



- Press the icon to rename the key.

- Carry out the operations as for the "Rename a scenario" on page 44.

Move a key

SETUP-Key-Advanced functions-Move



- Press the icon to move the key (from the position in which it appears in the list of available keys).

- Carry out the operations as for the "Move a scenario" on page 45.

Modify a key


SETUP-Key-Advanced functions-Modify




- Press the icon to modify the scenarios associated with the selected key.



- 2 scenarios may be selected: one IN and one OUT.
- Only IMMEDIATE scenarios can be selected!

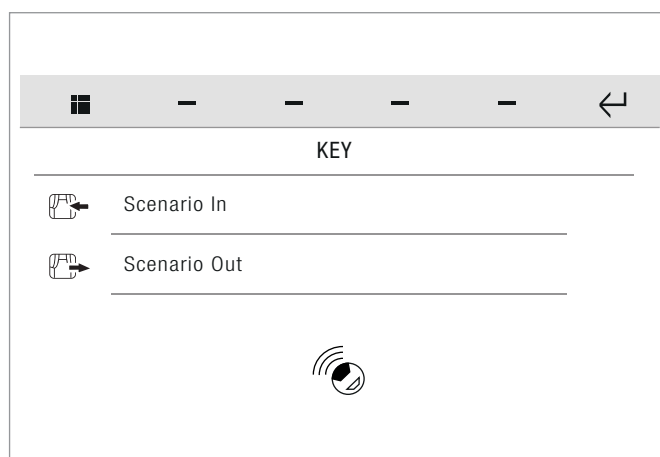

- Press the desired function to open the dedicated menu.

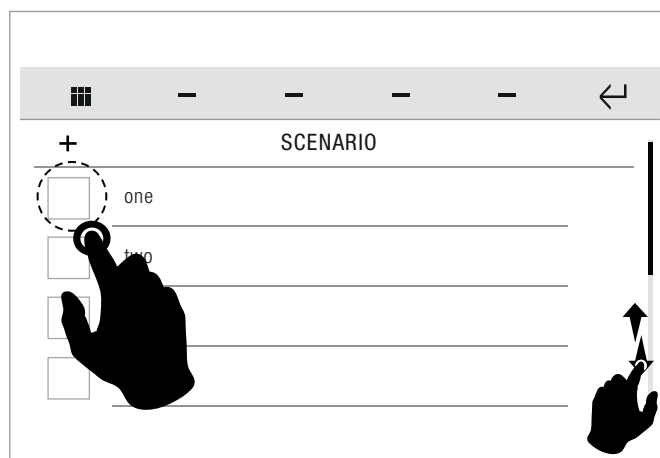

- Select the scenario by pressing the icon.



- » The icon changes status.



- When you have finished entering the desired functions, press the icon to exit.

Delete a key

SETUP-Key-Advanced functions-Delete



- Press the icon to delete a previously registered key.



- Do not throw away the key! The key has now been reset and is ready to configured anew.


- Carry out the operations as for the "Delete a scenario" on page 45.

Alarm

SETUP-Key-Advanced functions-Alarm



- This function allows you to register the key in the VEDO alarm control panel.
- Once registered, the key can be used to execute scenarios that contain commands addressed to the VEDO control panel.

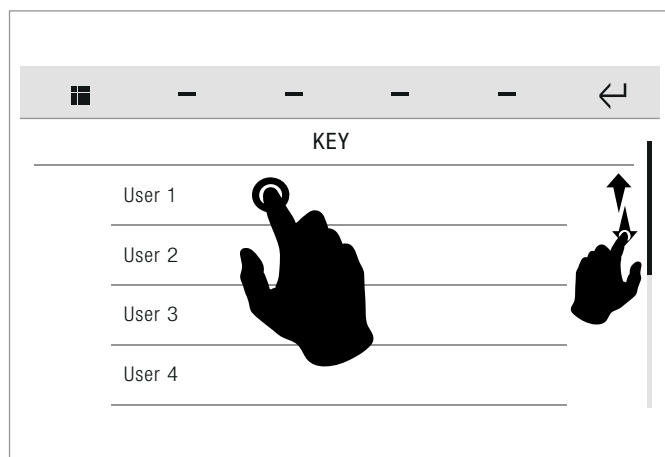

- Select the user to be associated with the key.

SETUP - Audio broadcast

From this menu you can manage the operating parameters of the audio broadcast function.



- For configuration of the media server, refer to the technical documentation available online at the address http://wiki.slimdevices.com/index.php/Logitech_Media_Server
- For configuration of the player, refer to the manual art 20004500 / 20004501 / 20004502



- Tick the ENABLE box to activate the audio broadcast function.

» The parameters that can be configured are:
IP address / Port / Username / Password.

- Press the desired parameter to open the dedicated menu.

IP address

SETUP-Audio broadcast-IP address



- Enter the IP address of the desired audio broadcast server, then confirm.



- DEFAULT VALUE: 192.168.1.226

Port

SETUP-Audio broadcast-Port

- ▶ Enter the port of the desired audio broadcast server, then confirm.

- DEFAULT VALUE: 9000

Username

SETUP-Audio broadcast-Username

- ▶ Enter the desired username, then confirm.

Password

SETUP-Audio broadcast-Password

- ▶ Enter the password associated with the username and confirm.

SETUP - Protection

From this menu you can manage the system passwords and security parameters.

- ▶ Press the desired option to open the relative menu.

User password

SETUP-Protection-User password

- ▶ Enter the required password and confirm.

- ▶ Enter the NEW password and confirm.
▶ Enter the password again.

- Max. password length is 8 digits!

Advanced passwords



SETUP-Protection-Advanced passwords

See "User password" on page 49.

Home automation limits

SETUP-Protection-Home automation limits

This function allows you to choose which functions (from those available) to password protect.

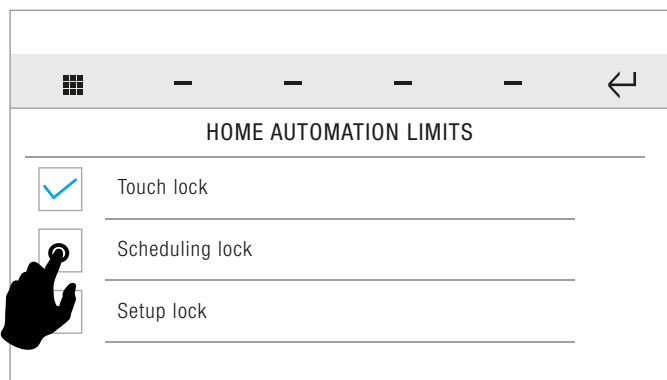


- Press the icon of the desired function to activate password protection.

SETUP - Configure event messages


From this menu you can configure the email addresses of the recipients of automatic messages sent on activation of a previously configured input.



- Maximum of 4 recipients!

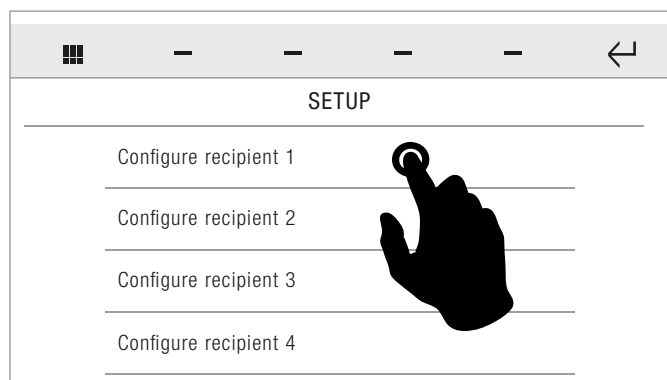


- Press on the desired recipient to enter or edit the address.



- Enter the address and confirm.

SETUP - Advanced

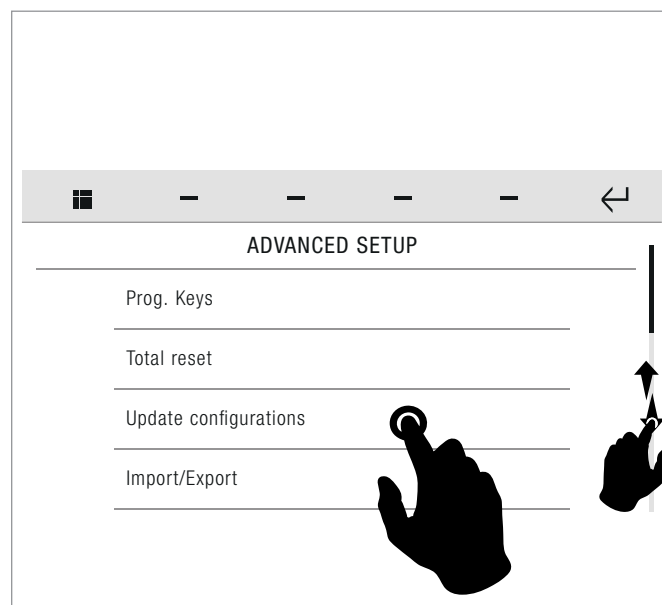

- Swipe your finger up or down to view all the available menu options.


- To access the desired sub-menu, press the corresponding icon.

» The available options are: Programming keys / Total reset / Update configurations / Import/Export / Product update / Disable-Enable VEDO alarm / Home automation / Door entry monitors.

Programming keys

SETUP-ADVANCED-Programming keys

From this menu you can assign one of the available functions to each of the PROGRAMMABLE KEYS.

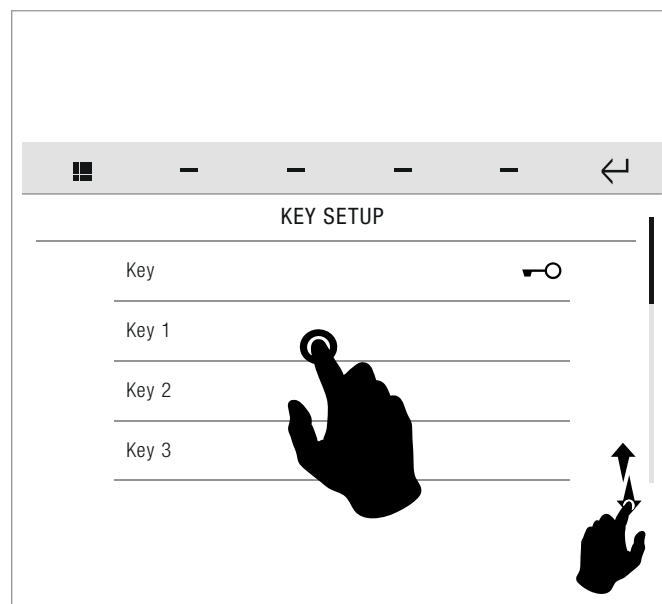

- Swipe your finger up or down to view all the available menu options.

- To access the desired sub-menu, press the corresponding icon.




- For a list of the available functions that can be associated, refer to "FUNCTION KEYS" on page 5.

Total reset

SETUP-ADVANCED-[Total reset](#)

This function deletes all user, door entry monitor, home automation and alarm system settings, plus calibration settings, restoring the default settings of the product.

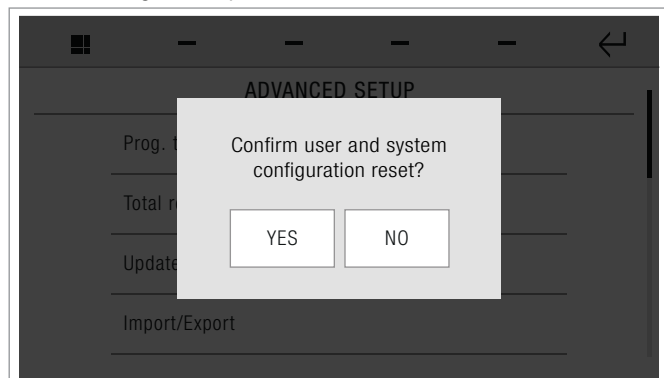


- Confirm the operation.

Update configurations

SETUP-ADVANCED-[Update configurations](#)

The function updates all the home automation settings of the system, loading the current settings in the micro SD configured using SimpleProg.

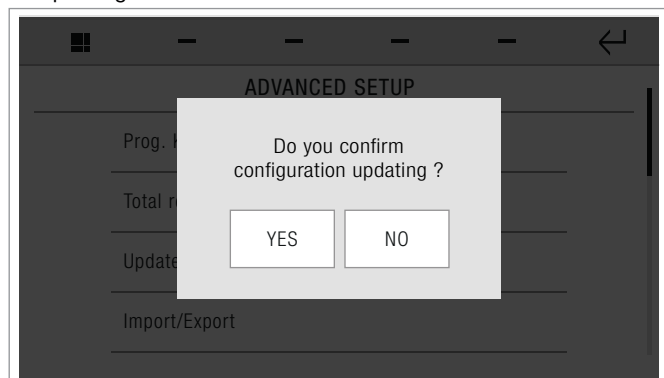

- Confirm the operation.


Import/export

SETUP-ADVANCED-[Import/Export](#)

The function can be used to save or load all user, home automation and alarm system configurations.



- An SD card with sufficient memory to save the backup file is required. Otherwise the system will display an error message.

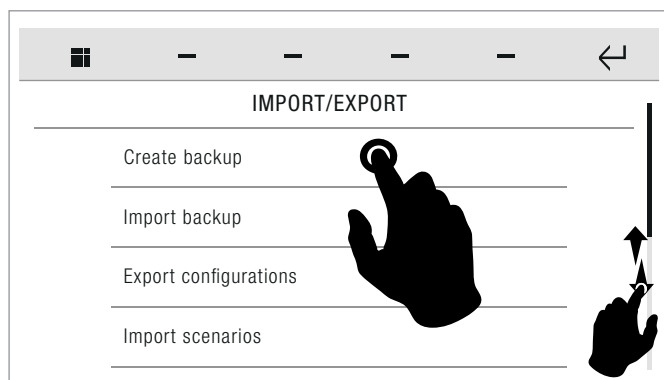


- To access the desired functions, press the corresponding icon.
- » The available options are: Create backup / Import backup / Export configurations / Import scenarios / Import settings / Import door entry monitors / Import home automation / Import home automation schedule.

Create backup

SETUP-ADVANCED-[Import/Export-Create backup](#)


This function allows you to create a complete system backup and to save it on an SD card.

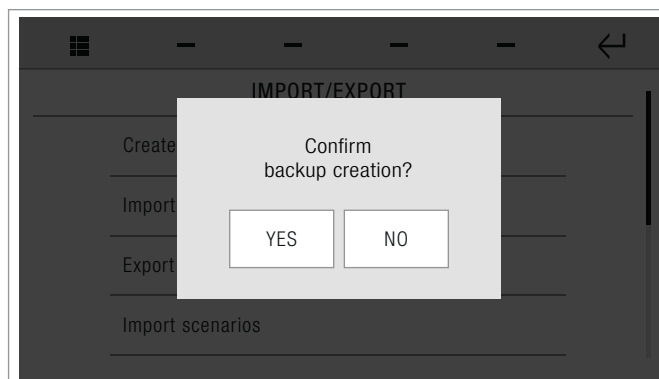

Import backup

SETUP-ADVANCED-[Import/Export-Import backup](#)

This function allows you to import a complete system backup from an SD card.

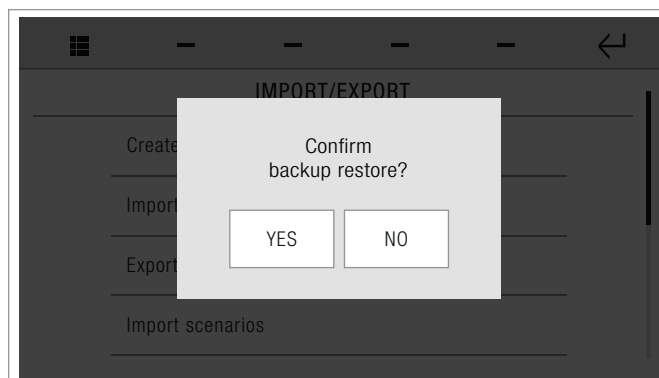

Export configuration

SETUP-ADVANCED-[Import/Export-Export configuration](#)

This function allows you to export the device configurations (scenarios; settings; home automation; home automation schedules) to an SD card.




Import scenarios

SETUP-ADVANCED-Import/Export-Import scenarios

This function allows you to import previously saved immediate, scheduled and conditioned home automation scenarios.



- SLAVE devices do not import conditioned scenarios!

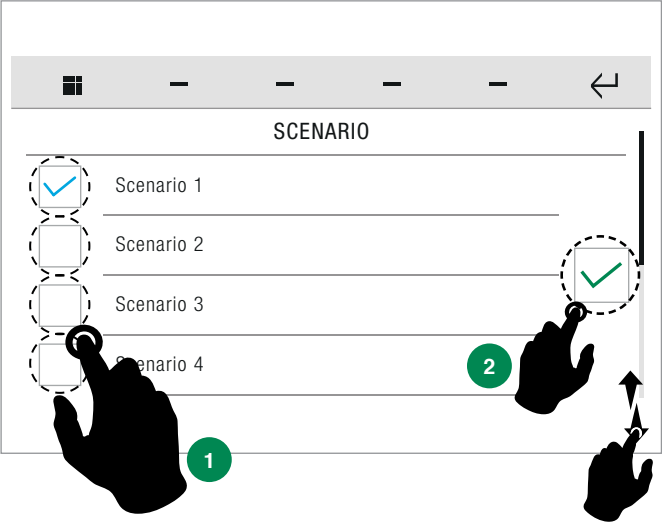

- Swipe your finger up or down to view all the available menu options.

1. Select one or more scenarios by pressing the corresponding icon.
2. Confirm the operation.

Import settings

SETUP-ADVANCED-Import/Export-Import settings



- The function imports favourites, audio/video import and language.
- Only data exported from a device of the same type may be imported!

Import home automation

SETUP-ADVANCED-Import/Export-Import home automation



- The function imports meter settings including the limits and tariffs table.
- Imports consumption settings.
- Imports home automation settings.

Import home automation scheduling

SETUP-ADVANCED-Import/Export-Import home automation scheduling



- The functions serve to import the timer settings of the home automation outputs to the device.

- Select the desired function by pressing the relative icon; confirm the operation.



Update product


SETUP-ADVANCED-Update product

This function allows you to update the product firmware from an SD card.

- ✓ Before proceeding with the update, you must insert an SD card containing at least one set of updated firmware.



- ONLY one set of firmware can be loaded at a time.
- The user must have the necessary privileges to perform the operation! Otherwise it can be enabled from Safe Manager.

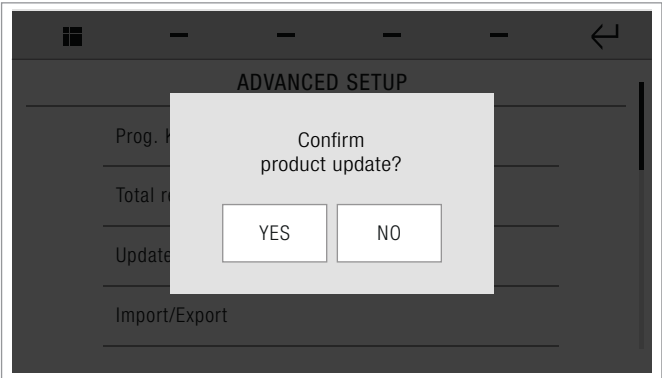

- Confirm and proceed with the update.

Disable / Enable Vedo alarm

SETUP-ADVANCED-Disable Vedo alarm / Enable Vedo alarm


This function allows you to disable or enable the alarm function of the Vedo control panel and all the characteristics associated with it in the system.

- Confirm the enable/disable operation.

SETUP - Home automation

SETUP-ADVANCED-Home automation

The section allows you to manage the home automation system parameters.

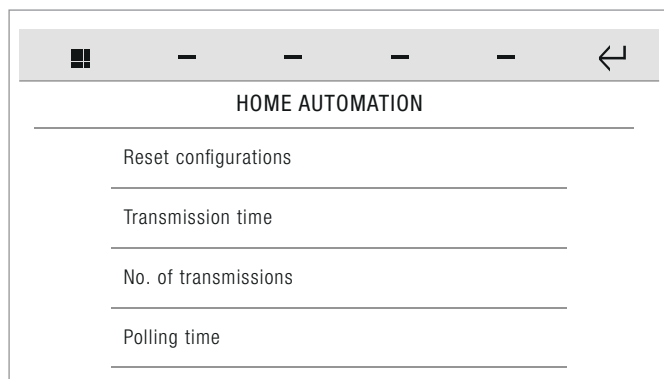

- To access the desired functions, press the corresponding icon.

Home automation - Reset configurations

SETUP-ADVANCED-Home automation-Reset configurations

This function allows you to reset the home automation configuration previously loaded on the system.

- Confirm the operation in order to proceed.

Door entry monitors

SETUP-ADVANCED-Door entry monitors

The section allows you to manage the parameters of the door entry monitor system.

VIDEO SYSTEM

- Addresses
- Actuator directory
- Cameras directory
- Intercom Directory

- Swipe your finger up or down to view all the available menu options.
- To access the desired function, press the corresponding icon.

» The available options are: Addresses / Actuators directory / Cameras directory / Intercoms directory / Set tone repetition / Set call times / Call divert / Alarms / Doors directory / Set audio messages / Hands-free / Always record / Configure multiple addresses.

Door entry monitors - Addresses

SETUP-ADVANCED-Door entry monitors-Addresses

This function allows you set the Vip address of the device.

ADDRESS

Configure ViP address

☒ Master

☐ Slave

1 - +

- Press CONFIGURE VIP ADDRESS to open the panel in which you can enter the ViP address.
- Select the device category of MASTER or SLAVE.

00000001

1 2 3

4 5 6

7 8 9

← 0 ✓



► Enter the desired value, then confirm.

Door entry monitors - Actuators directory

SETUP-ADVANCED-Door entry monitors-Actuators directory

This function allows you to add and manage actuators connected to the VIP system.

ACTUATORS

Actuator 1

Actuator 2

Actuator 3

Actuator 4



► Press the icon to add a new element.

ACTUATORS

Configure name

Configure ViP address

Module	255	-	+
Output	1	-	+

• CONFIGURE NAME

allows you to enter or edit the name of the device to be entered in the list.



► Enter the desired name, then confirm.

• CONFIGURE VIP ADDRESS

Allows you to enter or edit the ViP address of the device to which you want to connect.



► Enter the desired value, then confirm.

• MODULE

enter the code of the desired relay module / interface.



- Code 255 = art. 1443 with 1 relay + 1 open collector output
- If the interface module SK9071 is used (equipped with 10 relays), it will be necessary to enter the code of the module itself.

• OUTPUT

enter the code of the output, chosen from those available.



- With 1443 you can select 1 for on-board relay or 2 for open collector output.
- With the SK9071 module you can select one of its 10 relay contacts.

Door entry monitors - Cameras directory

SETUP-ADVANCED-Door entry monitors-Cameras directory

This function allows you manage a directory of the cameras connected to ViP systems or via RTSP protocol.

► Press on the name of the camera, then confirm the operation to start playback of the camera images.

123

- Press the icon to call a specific ViP address.
- Enter the address in the field to start the communication.



► Press the icon to add a new element.

√ VIP MODE

1. ViP / RTSP mode toggle icon

• CONFIGURE NAME

see "CONFIGURE NAME" on page 55

• CONFIGURE VIP ADDRESS

see "CONFIGURE VIP ADDRESS" on page 55

• CAMERA AUTOMATIC / CAMERA NUMBER

► Select the type of camera you wish to add.



- Example CAMERA AUTOMATIC = telecamera external unit camera connected to ViP address.
- Example CAMERA NUMBER = camera connected to art. 1445. IT is necessary to set the number of the terminal (1-2-3-4) corresponding to the camera in question!

- ▶ Press the icon (1) to move to the next mode.
ViP > RTSP
RTSP > ViP
- ✓ RTSP MODE

CAMERAS

RTSP

Configure name

Configure RTSP address

Configure RTSP user name

Configure RTSP password

- CONFIGURE NAME
see "CONFIGURE NAME" on page 55
- CONFIGURE VIP ADDRESS
- CONFIGURE RTSP USER NAME
- CONFIGURE RTSP PASSWORD

value

q w e r t y u i o p

a s d f g h j k l

Aa z x c v b n m

123

- ▶ Enter the desired value, then confirm.

Door entry monitors - Intercoms directory

SETUP-ADVANCED-Door entry monitors-Intercoms directory

This function allows you to add and manage the intercoms connected to the ViP system.

+

INTERCOMS

123

Intercom 1

Intercom 2

Intercom 3

Intercom 4

- ▶ Press on the name of the intercom, then confirm the operation to start the call.

123

- ▶ Press the icon to call a specific ViP address.
- ▶ Enter the address in the field to start the communication.

+

- ▶ Press the icon to add a new element.

INTERCOMS

Configure name

Configure ViP address

Master

Slave 1 - +



- The options CONFIGURE VIP ADDRESS, MASTER and SLAVE are mutually exclusive.
- If CONFIGURE VIP ADDRESS is selected (and an address is entered), the call will be directed to entire system of the apartment (MainAddress)
- If Master is selected (from a slave device), the call will be directed to the system designated the MASTER DEVICE
- If Slave is selected and the sub address is specified (from the Master or another Slave device), the call will be directed to the SLAVE DEVICE in the same system identified by the specified sub address.

- CONFIGURE NAME
see "CONFIGURE NAME" on page 55
- CONFIGURE VIP ADDRESS
see "CONFIGURE VIP ADDRESS" on page 55

Door entry monitors - Set tone repetition

SETUP-ADVANCED-Door entry monitors-Set tone repetition

This function allows you to set the number times the tone is repeated for each of the applicable events.

SET TONE REPETITION			
External call	1	-	+
Intercom call	1	-	+
Floor door call	1	-	+

► Set the desired value by pressing the icons "+" and "-".

Door entry monitors - Set call times

SETUP-ADVANCED-Door entry monitors-Set call times

This function allows you set the durations of some of the timers (in seconds) associated with door entry monitor functions.

SET CALL TIMES			
Awaiting Reply	60	-	+
Conversation	90	-	+
Intercom Conversation	90	-	+
Reset wait time	10	-	+

► Set the desired value by pressing the icons "+" and "-".

Door entry monitors - Call divert

SETUP-ADVANCED-Door entry monitors-Call divert

From this menu you can set and manage call diversion to another ViP device in the event of no reply or absence.

CALL DIVERT			
Configure ViP address			
Waiting time	10	-	+
☒	Activate timed divert		
☐	Activate divert when busy		

- **CONFIGURE VIP ADDRESS**
Allows you to enter the address of the device to which the emergency call is to be directed. See "CONFIGURE VIP ADDRESS" on page 55
- **WAITING TIME**
is the time interval (in seconds) between the arrival of a call and its diversion (in the case of no reply) to another ViP device. Adjust by pressing "+" and "-".



- The waiting time value only applies when the **ACTIVATE TIMED DIVERT** function is enabled (see below).

- **ACTIVATE TIMED DIVERT**
Selecting this function activates call divert in the event of no replay of absence.
- **ACTIVATE DIVERT WHEN BUSY**
Selecting this function activates call divert if a call is received when the device is already busy with another call.



- If the **CALL DIVERT** function has been **CONFIGURED**, then the **DOOR ENTRY MONITORS** menu will display an icon for the rapid activation/deactivation of the function.

DOOR ENTRY MONITORS			
Intercoms	Cameras	Doors open	Alarm $\frac{2}{6}$ Anti-intrusion 20,0° 17:36 02/10/14
Ans. serv. setup	Messages	Call divert	
Video memory	Audio message	Multiple addresses	

Door entry monitors - Alarms

SETUP-ADVANCED-Door entry monitors-Alarms

From this menu you can set and manage a series of previously programmed emergency/alarm calls to a control panel.



- YOU can also associate a pre-recorded audio message on an SD card to an emergency call.
- Consult your installer for configuration of alarm calls!

- Press next to the required call type to open the corresponding sub-menu.

- **CONFIGURE VIP ADDRESS**
Allows you to enter the address of the device to which the emergency call is to be directed.
See "CONFIGURE VIP ADDRESS" on page 55
- **AUDIO MESSAGE**
This function - when selected - allows you to send a pre-recorded audio message as an emergency call.



- The message must be saved on the SD card.
- Consult your installer for configuration of the audio message and alarm calls!

- **CALL RECEIVED AUDIO MESSAGE**
When selected, this function allows a pre-recorded message to be launched automatically if a priority emergency message is received by the monitor.

Door entry monitors- Doors directory

SETUP-ADVANCED-Door entry monitors-Doors directory

This function allows you to add and manage electronic locks (doors) connected to the door entry monitor system.

- Press on the name of the door, then confirm the operation to start the call.



- Press the icon to add a new element.



- Enter the desired value, then confirm.

Door entry monitors - Import audio message

SETUP-ADVANCED-Door entry monitors-Import audio message

This function allows you to import audio messages from an SD Card for use with the function "Door entry monitors - Alarms" on page 67.



- Consult your installer for configuration of the audio message and alarm calls!

Door entry monitors - Hands-free

SETUP-ADVANCED-Door entry monitors-Hands-free

The function - when active - automatically opens audio on receipt of a call from an external unit.



► Press the icon to activate the function.



» The icon changes status.

Door entry monitors - Always record

SETUP-ADVANCED-Door entry monitors-Always record

When activated, the function automatically starts audio/video recording on receipt of a call from an external unit.



► Press the icon to activate the function.



» The icon changes status.



- Recordings are saved to the SD card
- Go to DOOR ENTRY MONITORS - Video memory - to view and manage recordings.

Door entry monitors - Configure multiple addresses

SETUP-ADVANCED-Door entry monitors-Configure multiple addresses

This function allows you to respond (in addition to calls directed to the device) to calls directed to one or more additional devices in the same network.



► Press the icon to add a device.



- Enter the ViP address of the desired device by pressing the corresponding icon; then select the slave address using the +/- keys.



- To quickly enable/disable the function, see the DOOR ENTRY MONITORS menu



www.comelitgroup.com



2nd edition 09/2015
code 2G40001472
8 4023903 310535